

## Severin PG 8554

# SEVERIN PG 8554 Electric Tabletop Barbecue User Manual

Model: PG 8554

## INTRODUCTION

---

Thank you for choosing the SEVERIN PG 8554 Electric Tabletop Barbecue. This manual provides important information regarding the setup, operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## SAFETY INSTRUCTIONS

---

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the heating element or the control unit in water or other liquids.
- Keep out of reach of children.
- Unplug the appliance from the power outlet when not in use, before cleaning, or in case of malfunction.
- Do not operate the appliance with a damaged cord or plug.
- Ensure the water tray is filled with water before operation to prevent fat from burning and to reduce smoke.
- The grill surface and heating element become very hot during operation. Use caution to avoid burns.

## PRODUCT COMPONENTS

---

- Stainless steel grill rack
- Heating element with thermostat control
- Drip tray (water tray)
- Base unit with integrated control knob



Image: The SEVERIN PG 8554 Electric Tabletop Barbecue showing the stainless steel grill rack and the heating element beneath it, ready for use.

## SETUP AND INITIAL USE

---

### 1. Unpacking and Assembly:

Carefully remove all components from the packaging. Ensure all parts listed in the "Product Components" section are present. The grill is designed for easy assembly. Place the base unit on a stable, flat surface.

### 2. Filling the Drip Tray:

Before each use, fill the drip tray with water up to the indicated maximum level. This prevents fat from burning, reduces smoke, and makes cleaning easier. Do not operate the grill without water in the drip tray.



Image: A hand pouring water into the integrated drip tray of the barbecue, illustrating the essential step of filling the tray before operation.

### **3. Placing the Heating Element and Grill Rack:**

Place the heating element securely into its designated position within the base unit, ensuring it is properly seated. Then, place the stainless steel grill rack on top of the heating element.



Image: The electric tabletop barbecue with the heating element installed and glowing, indicating it is powered on and heating up.

#### 4. **Connecting to Power:**

Plug the power cord into a suitable electrical outlet (110 Volts, 2300 Watts recommended). The appliance is now ready for operation.

## OPERATING INSTRUCTIONS

---

#### 1. **Temperature Control:**

The SEVERIN PG 8554 features a thermostat-controlled heating element. Adjust the desired grilling temperature using the rotary knob on the front of the unit. Turn the knob from 'MIN' to 'MAX' to increase the heat. The grill heats up quickly due to its 2300W power.





Image: A detailed view of the temperature control knob, allowing precise adjustment of the grilling heat from minimum to maximum.

## 2. **Grilling Food:**

Once the grill has reached the desired temperature, place your food (sausages, meat, vegetables, etc.) directly onto the stainless steel grill rack. The even heat distribution ensures perfect grilling results. This grill is suitable for both indoor and outdoor use.



Image: The electric tabletop barbecue in action, with various foods like sausages, chicken, and vegetable skewers cooking on the grill rack, demonstrating its versatility.

### 3. After Grilling:

Once you have finished grilling, turn the temperature knob to the 'MIN' position and unplug the appliance from the power outlet. Allow the grill to cool down completely before cleaning.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures the longevity and optimal performance of your SEVERIN PG 8554 barbecue. The removable parts make cleaning effortless.

### 1. Disassembly:

Ensure the grill is unplugged and completely cool. Carefully remove the grill rack and the heating element. The drip tray can also be removed from the base unit.

### 2. Cleaning the Grill Rack and Drip Tray:

The stainless steel grill rack and the drip tray can be easily cleaned under running water with a mild detergent. For stubborn residue, soak them in warm soapy water before scrubbing. Avoid abrasive cleaners or scouring pads that could damage the surfaces.



Image: A person cleaning the stainless steel grill rack under running water in a kitchen sink, demonstrating the ease of cleaning removable parts.

### 3. Cleaning the Heating Element and Base Unit:

The heating element should not be immersed in water. Wipe it clean with a damp cloth. The base unit can also be wiped clean with a damp cloth. Ensure all parts are thoroughly dry before reassembling or storing the appliance.

## TROUBLESHOOTING

If you encounter any issues with your SEVERIN PG 8554 barbecue, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------



Problem	Possible Cause	Solution
Grill does not heat up or heats insufficiently.	Not plugged in correctly. Temperature knob set too low. Heating element not properly seated. Power outlet malfunction.	Check power connection. Turn the temperature knob to a higher setting. Ensure the heating element is securely in place. Test with another power outlet.
Excessive smoke or burning smell.	Drip tray not filled with water. Fat or food residue burning in the drip tray.	Ensure the drip tray is filled with water before use. Clean the drip tray thoroughly after each use.
Food burns easily.	Temperature set too high. Grill rack too close to heating element.	Reduce the temperature setting. Ensure the grill rack is correctly positioned on its supports.

## SPECIFICATIONS

Model Number	PG 8554
Manufacturer	SEVERIN
Dimensions (L x W x H)	33 x 42 x 8.5 cm (13 x 16.5 x 3.3 inches)
Weight	1.9 kg (4.2 lbs)
Color	Black
Material	Stainless Steel
Voltage	110 Volts
Power	2300 Watts
Cooking Surface	37 x 29 cm (14.6 x 11.4 inches)
Special Features	Thermostat-controlled temperature, suitable for indoor/outdoor use, removable parts for easy cleaning.
Components Included	Stainless steel grill rack, thermostat, barbecue drip tray.

## WARRANTY AND SUPPORT


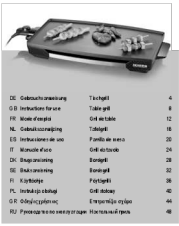




The SEVERIN PG 8554 Electric Tabletop Barbecue comes with a 1-year availability of spare parts, as per manufacturer's policy.

For technical support, warranty claims, or spare parts inquiries, please contact SEVERIN customer service through their official website or the retailer from whom you purchased the product. Please have your model number (PG 8554) and proof of purchase ready.

For more information, visit the official [SEVERIN Brand Store](#).



## Related Documents - PG 8554

 <p>Barbecue-Grill Barbecue grill PG 8107</p>	<p><a href="#">Severin PG 8107 Barbecue Grill Parts Diagram and Overview</a></p> <p>An exploded view and parts list for the Severin PG 8107 Barbecue Grill, detailing all components for assembly and maintenance.</p>
 <p>SEVERIN Tischgrill</p>	<p><a href="#">SEVERIN Tischgrill Bedienungsanleitung und Sicherheitshinweise</a></p> <p>Umfassende Bedienungsanleitung und Sicherheitshinweise für den SEVERIN Tischgrill. Enthält Informationen zu Anschluss, Aufbau, Bedienung, Reinigung, Entsorgung und Garantie.</p>
 <p>SEVERIN Tischgrill / Standgrill</p>	<p><a href="#">SEVERIN Tischgrill / Standgrill - Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für den SEVERIN Tischgrill / Standgrill, inklusive Montage, Sicherheitshinweisen, Gebrauch und Pflege. Enthält technische Daten und Modellinformationen für PG 8565, 8566, 8567, 8568, 008576, 008577, 008578.</p>
 <p>SEVERIN SAFETY</p>	<p><a href="#">SEVERIN KG 2398/KG2399 Sicherheitshinweise</a></p> <p>Umfassende Sicherheitshinweise für den SEVERIN Kontaktgrill KG 2398 und KG 2399. Erfahren Sie mehr über bestimmungsgemäßen Gebrauch, Installation, Betrieb und Risikovermeidung.</p>
 <p>SEVERIN Raclette Party Grill</p>	<p><a href="#">SEVERIN RG 9690 Raclette Party Grill - Bedienungsanleitung</a></p> <p>Entdecken Sie den SEVERIN RG 9690 Raclette Party Grill. Diese umfassende Anleitung bietet detaillierte Informationen und Sicherheitshinweise in mehreren Sprachen.</p>
 <p>SEVERIN Raclette-Partygrill</p>	<p><a href="#">SEVERIN RG 2373 Raclette-Partygrill: Bedienungsanleitung und Informationen</a></p> <p>Umfassende Bedienungsanleitung für den SEVERIN RG 2373 Raclette-Partygrill. Entdecken Sie Funktionen, Sicherheitshinweise, Bedienung und Pflege dieses vielseitigen Küchengeräts. Ideal für gesellige Runden.</p>

