

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lehmann](#) /

› [LEHMANN LTOVI-1225 Wet/Dry Vacuum Cleaner with Blower Function, 25L, 2000W Instruction Manual](#)

## Lehmann LTOVI-1225

# LEHMANN LTOVI-1225 Wet/Dry Vacuum Cleaner Instruction Manual

[Introduction](#)   [Safety Instructions](#)   [Package Contents](#)   [Assembly & Setup](#)   [Operating Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the LEHMANN LTOVI-1225 Wet/Dry Vacuum Cleaner. This versatile appliance is designed for effective cleaning in various environments, including homes, garages, workshops, and gardens. It features powerful suction, a 25-liter capacity, a blower function, and an integrated power outlet for tools. Please read this manual carefully before use to ensure safe and optimal operation.



*Image: The LEHMANN LTOVI-1225 Wet/Dry Vacuum Cleaner, a red and black unit with wheels and a hose attached.*

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the vacuum cleaner.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces unless specifically designed for such use (this model is for wet/dry use).
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the vacuum cleaner indoors.

### **3. PACKAGE CONTENTS**

---

Verify that all components are present and undamaged upon unpacking.

- LEHMANN LTOVI-1225 Wet/Dry Vacuum Cleaner Unit
- Flexible Hose (3 meters)
- Extension Wands
- Floor Nozzle
- Crevice Tool
- Dust Brush
- HEPA Filter
- Sponge Filter (for wet vacuuming)
- Dust Bag (for dry vacuuming)
- Adapter
- User Manual

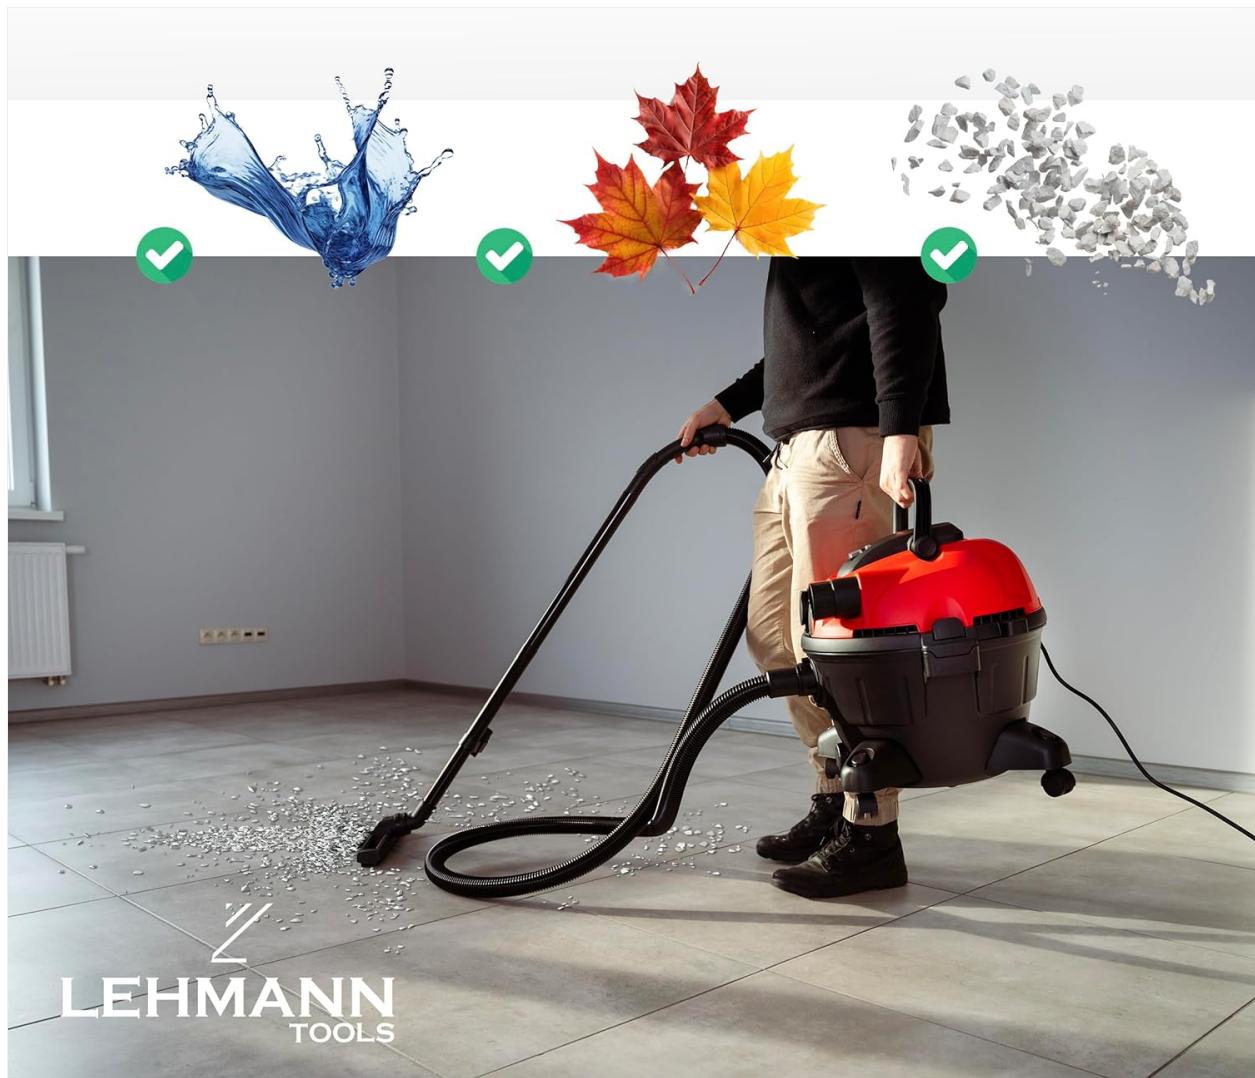


*Image: The LEHMANN LTOVI-1225 vacuum cleaner displayed with its full set of accessories, including various nozzles, filters, and the hose.*

## 4. ASSEMBLY AND SETUP

Follow these steps to assemble your vacuum cleaner before first use.

- 1. Attach the Wheels:** Turn the container upside down. Insert the four caster wheels into the designated slots on the base of the container until they click into place.
- 2. Install Filters:**
  - For **Dry Vacuuming**: Ensure the HEPA filter is securely attached to the motor head. Place a dust bag inside the container, aligning its opening with the suction inlet.
  - For **Wet Vacuuming**: Remove the dust bag and HEPA filter. Install the sponge filter over the filter cage on the motor head.



*Image: An exploded diagram of the vacuum cleaner, illustrating the placement of the HEPA filter, sponge filter, and dust bag within the unit.*



*Image: A close-up view of the dust bag correctly positioned inside the vacuum cleaner's collection container.*

3. **Secure the Motor Head:** Place the motor head onto the container, ensuring it is properly aligned. Fasten the side clips to secure the motor head to the container.
4. **Attach the Hose:** Insert the flexible hose into the suction inlet on the front of the motor head for vacuuming, or into the blower outlet on the rear for the blower function. Twist to secure.
5. **Attach Accessories:** Connect the extension wands to the hose, then attach the desired nozzle (floor nozzle, crevice tool, or dust brush) for your cleaning task.

## 5. OPERATING INSTRUCTIONS

## 5.1 General Operation

- Ensure the vacuum cleaner is properly assembled with the correct filter for your task.
- Plug the power cord into a suitable electrical outlet.
- Press the ON/OFF switch located on the motor head to start or stop the vacuum cleaner.

## 5.2 Dry Vacuuming

For dry vacuuming, ensure the HEPA filter is installed and a dust bag is in place. This setup is ideal for collecting dust, debris, and other dry materials.

- Use the floor nozzle for large areas, the crevice tool for tight spaces, and the dust brush for delicate surfaces.
- Regularly check and empty the dust bag when it is full to maintain optimal suction power.



*Image: A person operating the LEHMANN LTOVI-1225 vacuum cleaner to clean dry debris from a tiled floor in a room.*

### 5.3 Wet Vacuuming

Before wet vacuuming, remove the dust bag and HEPA filter, and install the sponge filter. This prevents damage to the motor and ensures proper liquid collection.

- Use the appropriate nozzle for liquid pickup.
- The vacuum cleaner will automatically stop suction when the liquid level in the tank reaches its maximum capacity. Turn off the vacuum and empty the tank immediately.
- To empty the tank, unclip the motor head and carefully pour out the liquid, or use the drain plug located at the bottom of the container.



*Image: A person using the vacuum cleaner to clean up a spill of liquid and small debris on a floor.*



*Image: A hand opening the drain plug at the bottom of the vacuum cleaner's container to empty collected liquid into a sink.*

## 5.4 Blower Function

The vacuum cleaner can also function as a blower. This is useful for clearing debris from pathways, inflating air mattresses, or drying surfaces.

- To activate the blower function, detach the hose from the suction inlet and connect it to the blower outlet located on the rear of the motor head.
- Ensure the area is clear of people and loose objects before using the blower function.



*Image: A visual representation indicating the two connection points for the hose: one for vacuuming (suction) and one for the blower function (exhaust).*

## 5.5 Integrated Power Outlet

The LEHMANN LTOVI-1225 features an integrated 2000W power outlet, allowing you to connect power tools directly to the vacuum cleaner. This is convenient for tasks that require both cleaning and tool operation.

- Plug your power tool into the integrated socket on the vacuum cleaner's motor head.
- The vacuum cleaner will automatically start when the connected power tool is switched on, and stop shortly after the tool is switched off.
- Do not exceed the maximum power rating of 2000W for connected tools.



*Image: A close-up of a hand inserting a power plug into the auxiliary power outlet located on the vacuum cleaner's motor unit.*

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your vacuum cleaner.

### 6.1 Cleaning the Container

- After wet vacuuming, always empty and rinse the container thoroughly with water.
- Allow the container to air dry completely before reassembling or storing.

### 6.2 Filter Maintenance

- **HEPA Filter:** For dry vacuuming, the HEPA filter should be cleaned regularly by tapping it gently to remove dust or by rinsing it under cold water. Ensure it is completely dry before reinstallation. Replace the HEPA filter every 6-12 months, or sooner if suction power decreases significantly.
- **Sponge Filter:** After wet vacuuming, remove and rinse the sponge filter with water. Squeeze out excess water and allow it to air dry completely before storing or using again.
- **Dust Bag:** Replace the dust bag when it is full or when suction power noticeably drops during dry vacuuming. Do not attempt to reuse disposable dust bags.

*Image: A detailed view of the HEPA filter and the sponge filter, highlighting their distinct textures and purposes.*

### 6.3 General Cleaning

- Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Check the hose and nozzles for blockages and clear them if necessary.

## 7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	No power supply. ON/OFF switch is off.	Check if the power cord is securely plugged into a working outlet. Ensure the ON/OFF switch is in the 'ON' position.
Low suction power.	Dust bag full. Filter(s) clogged. Hose or nozzle blocked. Motor head not properly sealed.	Replace or empty the dust bag. Clean or replace the HEPA/sponge filter. Check and clear any blockages in the hose or attachments. Ensure the motor head clips are securely fastened.
Liquid overflow during wet vacuuming.	Tank is full. Sponge filter not installed or clogged.	Empty the liquid from the tank immediately. Ensure the sponge filter is correctly installed and clean.
Unusual noise or vibration.	Foreign object in impeller. Loose components.	Turn off and unplug the unit. Inspect the impeller area for obstructions. Check all connections and ensure components are securely fastened.

## 8. SPECIFICATIONS

Feature	Detail
Brand	LEHMANN
Model Number	LTOVI-1225
Power (Nominal/Max)	1200 W / 2000 W
Container Capacity	25 Liters
Integrated Power Outlet	2000 W
Functions	Wet Vacuuming, Dry Vacuuming, Blower Function
Filters	HEPA Filter, Sponge Filter (Washable)
Hose Length	3 Meters
Power Source	Corded Electric
Material	Plastic
Color	Black/Red
Special Features	HEPA, Wet/Dry, Washable filter, Wheels, Bag

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official LEHMANN website. Keep your purchase receipt as proof of purchase for any warranty claims. If you encounter any issues not covered in the troubleshooting section, please contact LEHMANN customer service for assistance.

© 2024 LEHMANN. All rights reserved.