

Beurer MG24

Beurer MG 24 Massager with Heat Function User Manual

Model: MG24 | Brand: Beurer

1. INTRODUCTION

The Beurer MG 24 Massager with Heat Function is designed to provide a relaxing and targeted vibration massage. This manual massager features a switchable heat function, three interchangeable massage attachments, two intensity levels, and two preset massage programs to help alleviate muscle tension and promote relaxation. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INFORMATION

Important Safety Instructions:

- Always disconnect the device from the power supply after use and before cleaning.
- Do not use the massager on damaged skin, open wounds, or swollen areas.
- Avoid using the massager near water or in damp environments.
- Consult a doctor before using the massager if you have a pacemaker, are pregnant, have diabetes, or any other medical condition.
- Keep the device out of reach of children.
- Do not use the heat function on areas with reduced sensation.
- Ensure the power cord is not damaged and avoid kinking or stretching it.

3. PRODUCT COMPONENTS

The Beurer MG 24 Massager comes with the main unit and three distinct massage attachments for varied massage experiences.



Nub attachment



Brush attachment



U-shaped head



Flexible and versatile

2 massage programs &
2 intensity levels incl. 3
different massage attachments

Image 3.1: The Beurer MG 24 Massager main unit shown alongside its three interchangeable massage attachments: a nub attachment, a brush attachment, and a U-shaped head.

- **Main Massager Unit:** The handheld device with controls for power, intensity, and heat.
- **Nub Attachment:** Designed for intensive, deep tissue massage.
- **Brush Attachment:** Ideal for a stimulating and invigorating massage.
- **U-shaped Head:** Suitable for a gentle, soothing massage, particularly around the neck and shoulders.

4. SETUP

Before using the massager, ensure it is properly set up.

1. **Attach the Desired Head:** Select one of the three interchangeable massage attachments based on your preference and the area you wish to massage. Gently push the attachment onto the massage head of the main unit until it is securely in place.
2. **Connect to Power:** Plug the power cord into a suitable electrical outlet.

5. OPERATION

Follow these steps to operate your Beurer MG 24 Massager:



Optional gentle heat function - can be used
without massage attachment for added relaxation

Image 5.1: Detailed view of the massager's control panel, highlighting the power button, intensity level indicators, and the heat function button.

1. **Power On:** Press the power button on the handle to turn on the massager.
2. **Select Massage Program and Intensity:** The massager offers two intensity levels and two preset massage programs. Use the intensity control buttons to cycle through the available options until you find your desired setting.
3. **Activate Heat Function (Optional):** If desired, press the heat button to activate the switchable heat function. This can be used with or without a massage attachment for added relaxation.
4. **Apply to Body:** Place the massager on the area of the body you wish to treat. Apply gentle pressure and move the massager in slow, circular motions.
5. **Duration of Use:** Do not use the massager on a single area for an extended period. A typical massage session should last no more than 15-20 minutes.
6. **Power Off:** Once your massage is complete, press the power button again to turn off the device.

Usage Instructions Summary:

- Select the desired massage program and intensity level.
- Place the appropriate accessory for the area of the body you want to treat.
- Apply in slow circular motions.
- Do not use on damaged skin or near water.

Product Overview Video:

Video 5.2: This video provides a brief overview of the Beurer MG 24 Massager, showcasing its key features such as the switchable heat function, interchangeable attachments, and different intensity levels. It demonstrates the product's versatility and ease of use.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and hygiene of your massager.

- Always unplug the massager from the power outlet before cleaning.
- Clean the device after each use with a slightly damp cloth.
- Do not use abrasive cleaning agents or harsh chemicals.
- Ensure the device is completely dry before storing it.
- Store the massager in a cool, dry place, away from direct sunlight.

7. TROUBLESHOOTING

If you encounter issues with your massager, refer to the following common solutions:

Problem	Possible Cause	Solution
Massager does not turn on.	Not plugged in or power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet.
Vibration feels too weak.	Incorrect intensity level selected.	Adjust the intensity level using the control buttons. Ensure the massager is not pressed too hard against the body.
Heat function is not working.	Heat function not activated.	Press the heat button to activate the heat function. Allow a few minutes for the heat to become noticeable.

8. SPECIFICATIONS

Feature	Specification
Model Name	MG24
Product Dimensions (LxWxH)	39.4 x 27 x 24.7 Centimeters
Item Weight	350 Grams
Power Source	Corded Electric
Material	Brass
Colour	Black
Special Feature	Vibrating massage, switchable heat function
Massager Form	Massage Wand
Target Use Body Part	Back (also suitable for other body parts)

Feature	Specification
Massage Therapy Technique	Vibration
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the official Beurer website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Beurer