

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Fabater](#) /
- › [Fabater Portable Mini Dishwasher User Manual](#)

Fabater Fabaterfeyu3hwxmt-12

Fabater Portable Mini Dishwasher User Manual

Model: Fabaterfeyu3hwxmt-12

INTRODUCTION

Thank you for purchasing the Fabater Portable Mini Dishwasher. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the product and retain it for future reference.

This portable mini dishwasher is designed for efficient cleaning of dishes, fruits, cutlery, and even small laundry items. It utilizes a combination of water vortex technology, high-pressure scouring, and bubble oil removal for effective cleaning.

PRODUCT OVERVIEW

The Fabater Portable Mini Dishwasher is a compact and versatile cleaning device. It features a USB-powered design for ease of use in various settings.



Figure 1: The white bucket with its lid, designed to hold water and items for cleaning with the mini dishwasher.

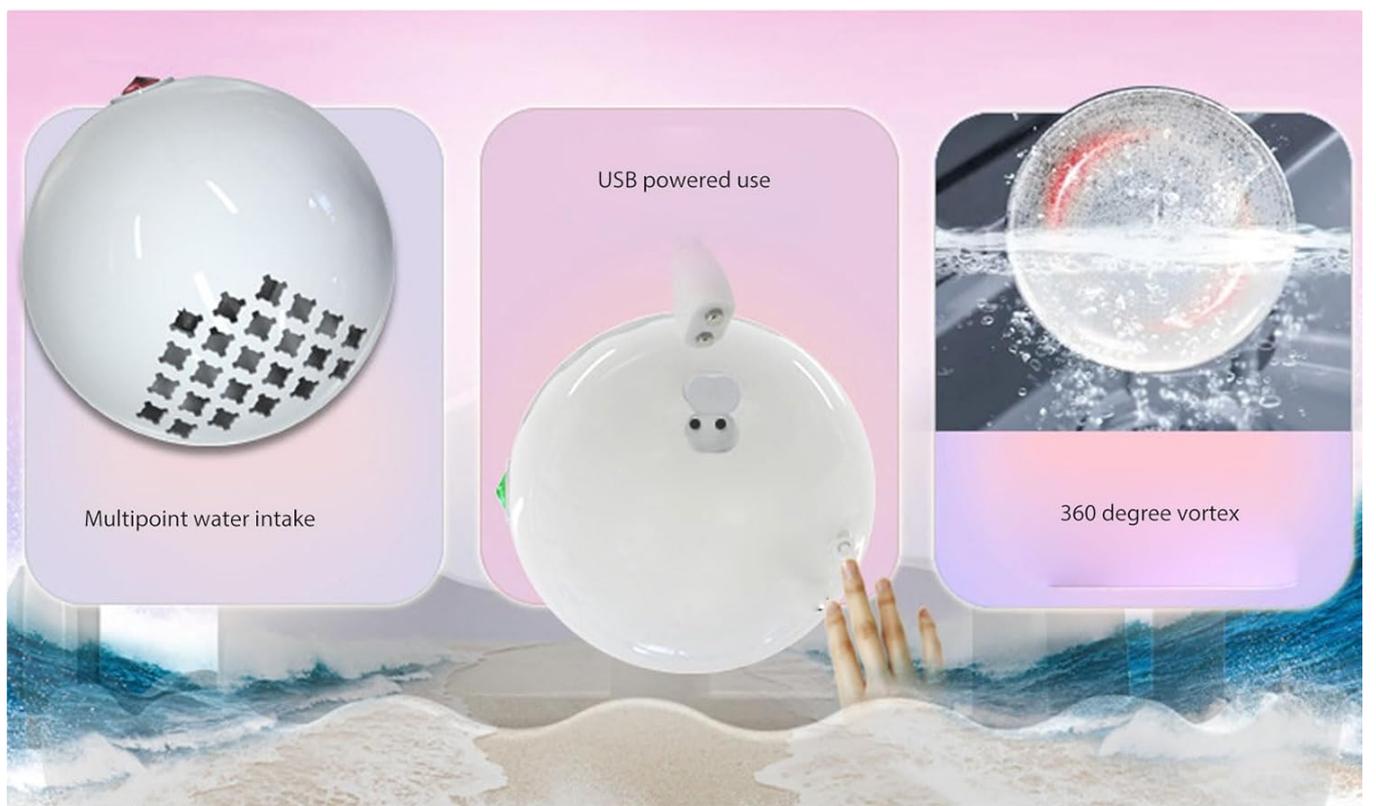


Figure 2: Key operational features of the dishwasher, including multipoint water intake for efficient water circulation, USB power for convenient use, and a 360-degree vortex for comprehensive cleaning.



Figure 3: All components included: the main mini dishwasher unit with its USB cable, the white cleaning bucket, and the bucket lid.



High pressure impact and scouring,
Let the stain move to clean the dish.

Figure 4: Illustration of the high-pressure impact and scouring action generated by the dishwasher unit, effectively removing stains from items.

MINI SINK DISHWASHER



Figure 5: The mini sink dishwasher unit, shown here with a pink bucket, highlighting its compact and portable design.



Figure 6: The complete set of items: the mini dishwasher unit, the white bucket, and the apple-shaped suction cup for secure placement.



Figure 7: A detailed view of the mini dishwasher unit, showing its compact design and the integrated USB power cable.



Figure 8: The white bucket and its corresponding lid, ready for use with the mini dishwasher.



Figure 9: A close-up of the mini dishwasher unit, emphasizing its spherical shape and water intake design.

SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not immerse the USB plug or power adapter in water or other liquids.
- Keep the device away from heat sources and direct sunlight.
- Ensure the power supply matches the device's specifications (DC 5V, 2A).
- Do not operate the device if the power cord or plug is damaged.
- Keep out of reach of children.

- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Use only with clean water. Do not use corrosive or flammable liquids.
- Ensure the suction cup is securely attached before operation if using the sink method.

SETUP

The Fabater Portable Mini Dishwasher offers two primary setup methods:

Method 1: Using the Provided Bucket

1. Place the provided white bucket on a stable, flat surface.
2. Place the items to be cleaned inside the bucket.
3. Fill the bucket with an appropriate amount of water, ensuring the items are submerged and the water level is sufficient for the dishwasher unit to operate effectively.
4. Place the mini dishwasher unit into the water in the bucket.
5. Connect the USB cable to a compatible 5V/2A USB power adapter (not included) or a power bank.
6. Ensure the lid is securely placed on the bucket to prevent splashing during operation.

Method 2: Using a Sink

1. Place the items to be cleaned into a sink or a larger basin.
2. Fill the sink/basin with an appropriate amount of water, ensuring the items are submerged.
3. Attach the provided suction cup to the bottom of the mini dishwasher unit.
4. Securely attach the mini dishwasher unit to the bottom or side of the sink/basin using the suction cup, ensuring it is fully submerged and stable.
5. Connect the USB cable to a compatible 5V/2A USB power adapter (not included) or a power bank.

OPERATING INSTRUCTIONS

1. After setting up the device according to the "Setup" section, ensure the USB cable is connected to a power source.
2. The device will automatically begin operation once powered. There is no manual on/off switch.
3. The dishwasher will generate a water vortex, high-pressure scouring, and bubbles to clean the items.
4. For optimal cleaning, allow the device to operate for approximately 15 minutes. The device features an auto-shutdown function after this period.
5. Once the cleaning cycle is complete and the device has shut down, disconnect the USB power cable.
6. Carefully remove the cleaned items from the water.

Cleaning Principles:

- **Water Vortex:** The high-speed motor blade creates a spiral water vortex, combined with high-speed vibration and high-pressure scouring for effective cleaning.
- **Bubble Oil Removal:** High-frequency vibrations produce tiny bubbles in the water. When these bubbles burst, they generate high pressure, which helps to dislodge and remove oil and grime.
- **Deep Cleaning:** With a suction power of 45KPa, the device achieves 360-degree deep cleaning, ensuring the removal of stubborn dirt and keeping dishes clean.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your mini dishwasher:

- **After Each Use:** Disconnect the power. Remove the dishwasher unit from the water. Rinse the unit and the bucket/sink thoroughly with clean water.
- **Cleaning the Unit:** Wipe the exterior of the dishwasher unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure no water enters the USB port.
- **Drying:** Allow all components to air dry completely before storing.
- **Storage:** Store the device and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	No power supply; USB cable not connected; Power adapter insufficient.	Ensure USB cable is securely connected. Use a 5V/2A power adapter or power bank. Try a different USB port or power source.
Weak cleaning performance.	Insufficient water level; Too many items; Excessive dirt/grease.	Ensure items are fully submerged. Reduce the number of items. Pre-rinse heavily soiled items.
Device stops prematurely.	Auto-shutdown activated (after 15 minutes); Power interruption.	This is normal operation for the 15-minute cycle. Check power connection if it stops before 15 minutes.
Unusual noise during operation.	Obstruction in the water intake; Device not stable.	Check for any debris near the water intake. Ensure the device is placed stably in the water.

SPECIFICATIONS

- **Model:** Fabaterfeyu3hwxmt-12
- **Power:** 18W
- **Input Voltage:** DC 5V
- **Suction Power:** 45KPa
- **Material:** ABS+PC
- **Item Weight:** Approximately 1.86 pounds (0.84 kg)
- **Product Dimensions:** Approximately 9.05 x 9.05 x 8.66 inches (23 x 23 x 22 cm)
- **Color:** White Bucket
- **Country of Origin:** China

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact Fabater customer support.

If you encounter any issues or have questions regarding your Fabater Portable Mini Dishwasher, please contact our customer support team for assistance. Please have your model number (Fabaterfeyu3hwxmt-12) and purchase information ready when contacting support.

For further information or to visit the Fabater store, please visit: [Fabater Official Store](#)

© 2024 Fabater. All rights reserved.