

Nerf F8633

Nerf N Series Gear Up Pack Instruction Manual

Model: F8633 | Brand: Nerf

INTRODUCTION

The Nerf N Series Gear Up Pack provides an enhanced dart blasting experience with high-performance blasters and N1 darts. This pack includes three distinct blasters and two accessories, allowing for ten different blaster configurations. The N1 darts are engineered for extreme accuracy, speed, and distance, offering a superior edge in both indoor and outdoor play. This set is designed for users aged 8 years and up.



Image: The Nerf N Series Gear Up Pack, showcasing the three blasters (Wielder, Dealer, Flex) and the included N1 darts.

Safety Information

WARNING: Small parts may be generated. Not for children under 3 years. Eyewear is recommended (not included) during play to prevent eye injuries.

What's in the Box

Your Nerf N Series Gear Up Pack includes the following components:

- 3 Blasters (Flex, Dealer, Wielder)
- 1 Bolt (for Wielder blaster)
- 1 Removable Stock

- 1 Removable Scope
- 18 Nerf N1 Darts
- Instruction Manual



Image: All included components of the Gear Up Pack, including blasters, accessories, and darts, neatly arranged.

SETUP

Before beginning play, ensure all components are present and familiarize yourself with each blaster and accessory.

Attaching Accessories:

- **Removable Scope:** The scope can be attached to the tactical rail on top of all three blasters (Flex, Dealer, Wielder). Slide the scope onto the rail until it clicks into place.
- **Removable Stock:** The stock can be attached to the Wielder and Dealer blasters. Align the stock with the attachment point at the rear of the blaster and push firmly until it locks.



Image: A close-up view demonstrating the attachment of the removable stock to a blaster, highlighting the connection point.



Image: Examples of different blaster configurations achieved by attaching the scope and stock accessories.

OPERATING INSTRUCTIONS

Always wear recommended eyewear during operation. Use only official Nerf N1 darts with these blasters.

Loading Darts:

- **Flex Blaster:** Insert one N1 dart into the front of the barrel.
- **Dealer Blaster:** Insert one N1 dart into the front of the barrel.
- **Wielder Blaster:** Load up to four N1 darts into the rotating cylinder at the front of the blaster.

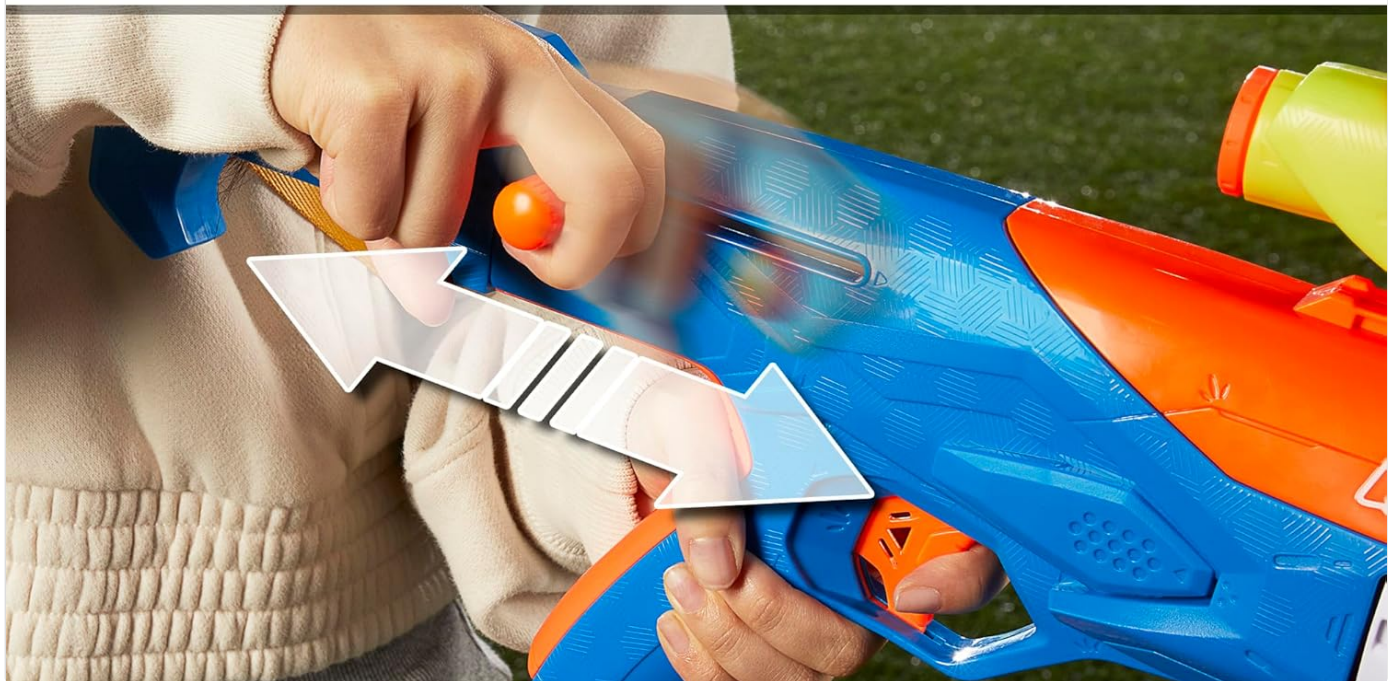


Image: A user demonstrating how to load an N1 dart into the Welder blaster and prime the bolt action mechanism.



Image: A user demonstrating how to load an N1 dart into the Dealer blaster and prime the pull-down mechanism.



Image: A user demonstrating how to load an N1 dart into the Flex blaster and prime the pull-down mechanism.

Priming and Firing:

- **Flex Blaster:** Pull down the priming handle located at the bottom of the grip until it locks. Aim at your target and press the trigger to fire.
- **Dealer Blaster:** Pull down the priming handle located at the bottom of the grip until it locks. Aim at your target and press the trigger to fire.
- **Wielder Blaster:** Pull back the bolt handle on the side of the blaster until it locks. Push the bolt handle forward to chamber a dart. Aim at your target and press the trigger to fire. Repeat for subsequent darts.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Nerf blasters.

- **Cleaning:** Wipe down the blasters with a damp cloth to remove dirt and dust. Do not submerge blasters in water.
- **Dart Care:** Keep N1 darts clean and dry. Avoid bending or crushing darts, as this can affect performance.

- **Storage:** Store blasters and darts in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Nerf N Series Gear Up Pack, refer to the common solutions below:

Problem	Solution
Dart not firing or jamming.	<ul style="list-style-type: none">◦ Ensure the blaster is fully primed.◦ Check if the dart is properly loaded and not damaged.◦ Only use official Nerf N1 darts. Other dart types may cause jamming.◦ Clear any obstructions from the barrel or dart chamber.
Darts not flying straight or far.	<ul style="list-style-type: none">◦ Ensure darts are clean and undamaged.◦ Verify the blaster is fully primed before firing.◦ Check for any debris in the barrel.
Accessories not attaching securely.	<ul style="list-style-type: none">◦ Ensure accessories are aligned correctly with the attachment points.◦ Apply firm, even pressure until they click into place.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.63 x 24 x 10.25 inches
Item Weight	3.09 pounds
Model Number	F8633
Recommended Age	8 years and up
Release Date	June 6, 2024
Manufacturer	Hasbro
Dart Type	Nerf N1 Darts (exclusive)
Blaster Combinations	10+ possible styles

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please contact Hasbro customer service directly or visit their official website. Keep your proof of purchase for any warranty claims.

Manufacturer: Hasbro

Website: www.hasbro.com

© 2024 Nerf. All rights reserved. NERF and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc.