

SEIKO QXM606NLH

SEIKO QXM606NLH Melodies in Motion Wall Clock

Instruction Manual

INTRODUCTION

Thank you for purchasing the SEIKO QXM606NLH Melodies in Motion Wall Clock. This clock features a timeless oval design with a dark wooden case, a slow-moving pendulum, and plays 18 distinct melodies. It is designed to provide accurate timekeeping and enhance your living space with its musical and visual elements. Please read this manual thoroughly before using your clock to ensure proper setup and operation.

SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.
- Avoid exposing the clock to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or repair the clock yourself. Contact qualified service personnel.

PACKAGE CONTENTS

Please check that all items are present:

- SEIKO QXM606NLH Wall Clock
- 4 x AA Batteries
- Instruction Manual (this document)

SETUP

1. Battery Installation

1. Carefully turn the clock over to access the back panel.
2. Locate the battery compartments.
3. Insert the 4 included AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment covers securely.



Image: Back view of the clock, highlighting the battery compartments and control switches.

2. Setting the Time

1. After installing batteries, the clock hands will automatically move to 12:00.
2. Locate the time setting knob on the back of the clock.
3. Turn the knob clockwise to set the correct time. Ensure you pass 12 o'clock twice if setting for PM hours, as the melodies will play accordingly.

3. Pendulum Setup

1. Gently remove any protective packaging or tape securing the pendulum during transit.
2. Ensure the pendulum is freely suspended and can swing without obstruction.
3. The pendulum will begin to swing once the clock is powered and functioning.



Image: Close-up of the clock face, showing the hour and minute hands, and the decorative pendulum.

4. Wall Mounting

1. Choose a suitable location on a wall that can support the clock's weight.
2. Use a sturdy screw or hook (not included) securely fastened into a wall stud or appropriate anchor.
3. Hang the clock using the keyhole slot located on the back panel.
4. Ensure the clock is level and securely mounted before releasing it.

OPERATING INSTRUCTIONS

Melody Selection

The clock features 18 melodies. Locate the 'Melody Selection' switch on the back of the clock. This switch allows you to choose between different melody groups or turn them off.

- **Group A (Classical Melodies):** The Four Seasons "Spring," Kanon, Eine Kleine Nachtmusik, Symphony No. 6 "Pastoral", "Morning" From Peer Gynt, La Traviata "Drinking Song"
- **Group B (Popular Melodies):** Amazing Grace, The Planets "Jupiter", Waltz Of The Flowers, Salut d'Amour, Pictures At An Exhibition "Promenade", Dance Of The Reed Pipes
- **Group C (Christmas Melodies):** Deck The Halls, O Tannenbaum, We Wish You A Merry Christmas, Joy To The World, Silent Night, Jingle Bells

Select the desired melody group using the switch. The clock will play a melody from the selected group every hour on the hour.

Volume Control

Adjust the volume of the melodies using the 'Volume' knob or switch located on the back of the clock. Turn it to increase or decrease the sound level to your preference.

Light Sensor (Night Mode)

The clock is equipped with a light sensor. This feature automatically disengages all melodies and pendulum motion when the room becomes dark. This ensures quiet operation during nighttime hours. Melodies and motion will resume automatically when sufficient light is detected.

MAINTENANCE

Cleaning

- Wipe the clock's surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.
- For glass surfaces, use a glass cleaner applied to a cloth, not directly to the clock.

Battery Replacement

When the clock's performance diminishes (e.g., melodies become faint, pendulum stops, or timekeeping becomes inaccurate), it is time to replace the batteries. Follow the battery installation steps outlined in the 'Setup' section, replacing all 4 AA batteries with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running or hands stopped.	Dead or incorrectly installed batteries.	Replace all batteries with new ones, ensuring correct polarity.
Melodies not playing.	Melody selection switch is OFF or in a dark room (light sensor activated).	Check the melody selection switch on the back. Ensure the room has sufficient light.
Pendulum not swinging.	Obstruction, low battery power, or light sensor activated.	Check for obstructions. Replace batteries. Ensure the room has sufficient light.
Incorrect timekeeping.	Low battery power.	Replace all batteries with new ones.

SPECIFICATIONS

- **Model:** QXM606NLH
- **Movement:** Quartz Crystal
- **Power Source:** 4 x AA Batteries (included)
- **Dimensions (Overall):** Approximately 18.81 inches (Height) x 13.86 inches (Width) x 3.35 inches (Depth)
- **Weight:** 6.04 Pounds
- **Materials:** Wood, Glass
- **Special Features:** 18 Melodies, Adjustable Volume, Hourly Chime, Light Sensor (Night Mode), Pendulum
- **Melodies:** The Four Seasons "Spring," Kanon, Eine Kleine Nachtmusik, Symphony No. 6 "Pastoral", "Morning" From Peer Gynt, La Traviata "Drinking Song", Amazing Grace, The Planets "Jupiter", Waltz Of The Flowers, Salut d'Amour, Pictures At An Exhibition "Promenade", Dance Of The Reed Pipes, Deck The Halls, O Tannenbaum, We Wish You A Merry Christmas, Joy To The World, Silent Night, Jingle Bells



Image: Front view of the SEIKO QXM606NLH clock, showcasing its oval design, clock face, and pendulum.

WARRANTY INFORMATION

This SEIKO QXM606NLH Wall Clock is backed by a limited 1-year manufacturer's warranty. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided with your purchase or visit the official SEIKO website. When contacting support, please have your model number (QXM606NLH) and proof of purchase readily available.

© 2024 SEIKO. All rights reserved.