

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROBUD](#) /

› [ROBUD WG388 Wooden Grocery Store Playset Instruction Manual](#)

## ROBUD WG388

# ROBUD WG388 Wooden Grocery Store Playset Instruction Manual

Model: WG388

## INTRODUCTION

---

This manual provides essential instructions for the assembly, operation, and maintenance of your ROBUD WG388 Wooden Grocery Store Playset. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of the product. This playset is designed to encourage imaginative play and skill development in children aged 3 years and up.

## SAFETY INFORMATION

---

- Adult supervision is recommended during play.
- Ensure all parts are securely fastened during assembly to prevent hazards.
- Regularly inspect the playset for any loose or damaged components. Discontinue use if damage is found and contact customer support.
- Small accessories included with the playset may pose a choking hazard for children under 3 years.
- Keep packaging materials away from children.

## WHAT'S IN THE BOX

---

The ROBUD WG388 Wooden Grocery Store Playset includes the main playset structure and various play food accessories. Please verify all components are present upon opening the package.

- Grocery Store Playset structure (unassembled)
- Assorted Play Food Accessories (e.g., milk cartons, juice boxes, butter, donuts, fruits, vegetables, coffee beans, cups, spoons, plates)
- Assembly Hardware and Tools (if applicable)
- Instruction Manual

# Rich Accessories



**Figure 1: Included Accessories.** This image displays the full range of play food items and accessories that come with the playset, including various wooden and cardboard food items, cups, and utensils.

## SETUP AND ASSEMBLY

The ROBUD WG388 playset is designed for straightforward assembly. Follow the detailed instructions provided in the separate assembly guide included in your package. It is recommended to have two adults for easier and quicker assembly.

1. Unpack all components and verify against the parts list in the assembly guide.
2. Lay out all pieces on a clean, flat surface.
3. Follow the step-by-step diagrams and instructions carefully.
4. Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. Once assembled, check for stability and ensure there are no loose parts.



**Figure 2: Assembled Playset.** This image shows the complete grocery store playset, highlighting its various sections including the cash desk, display shelves, and vending machine.

## OPERATING INSTRUCTIONS

---

The playset features multiple interactive elements for an engaging play experience.

### Cash Register Area

- **Scanning Area:** Place play items on the designated scanning area to simulate purchases.
- **Display Screen:** The screen shows simulated transaction details.
- **Credit Card Payment:** Insert the play credit card into the slot to simulate payment.

# Checkout Counter Stand

Enhance Kids Math Skills Through Playful Learning



Scanning Area



Screen



Credit Card Payment

**Figure 3: Cash Register Features.** This image details the interactive elements of the cash register, including the scanning pad, display screen, and credit card reader.

## Coffee Machine

- **Bean Selection:** Choose your preferred play coffee beans.
- **Extraction:** Place the play coffee beans into the extractor slot.
- **Brewing:** Turn the handle to simulate the coffee brewing process and dispense into a play cup.

# Kids Coffee Maker



**Figure 4: Coffee Machine Operation.** This image illustrates how to use the integrated coffee machine, from selecting beans to simulating the brewing action.

## Vending Machine


- **Item Selection:** Place small play items inside the vending machine compartments.
- **Dispensing:** Press the "PUSH" button to release a selected item.

## Oven

- **Door Operation:** Open and close the oven door to place or retrieve play food items.
- **Knobs:** Turn the interactive knobs to simulate temperature or timer settings.

## Chalkboard and Clock

- **Chalkboard:** Use chalk (not included) to write daily specials or messages on the chalkboard.
- **Clock:** Manually adjust the clock hands to learn about time or set opening/closing hours for the store.

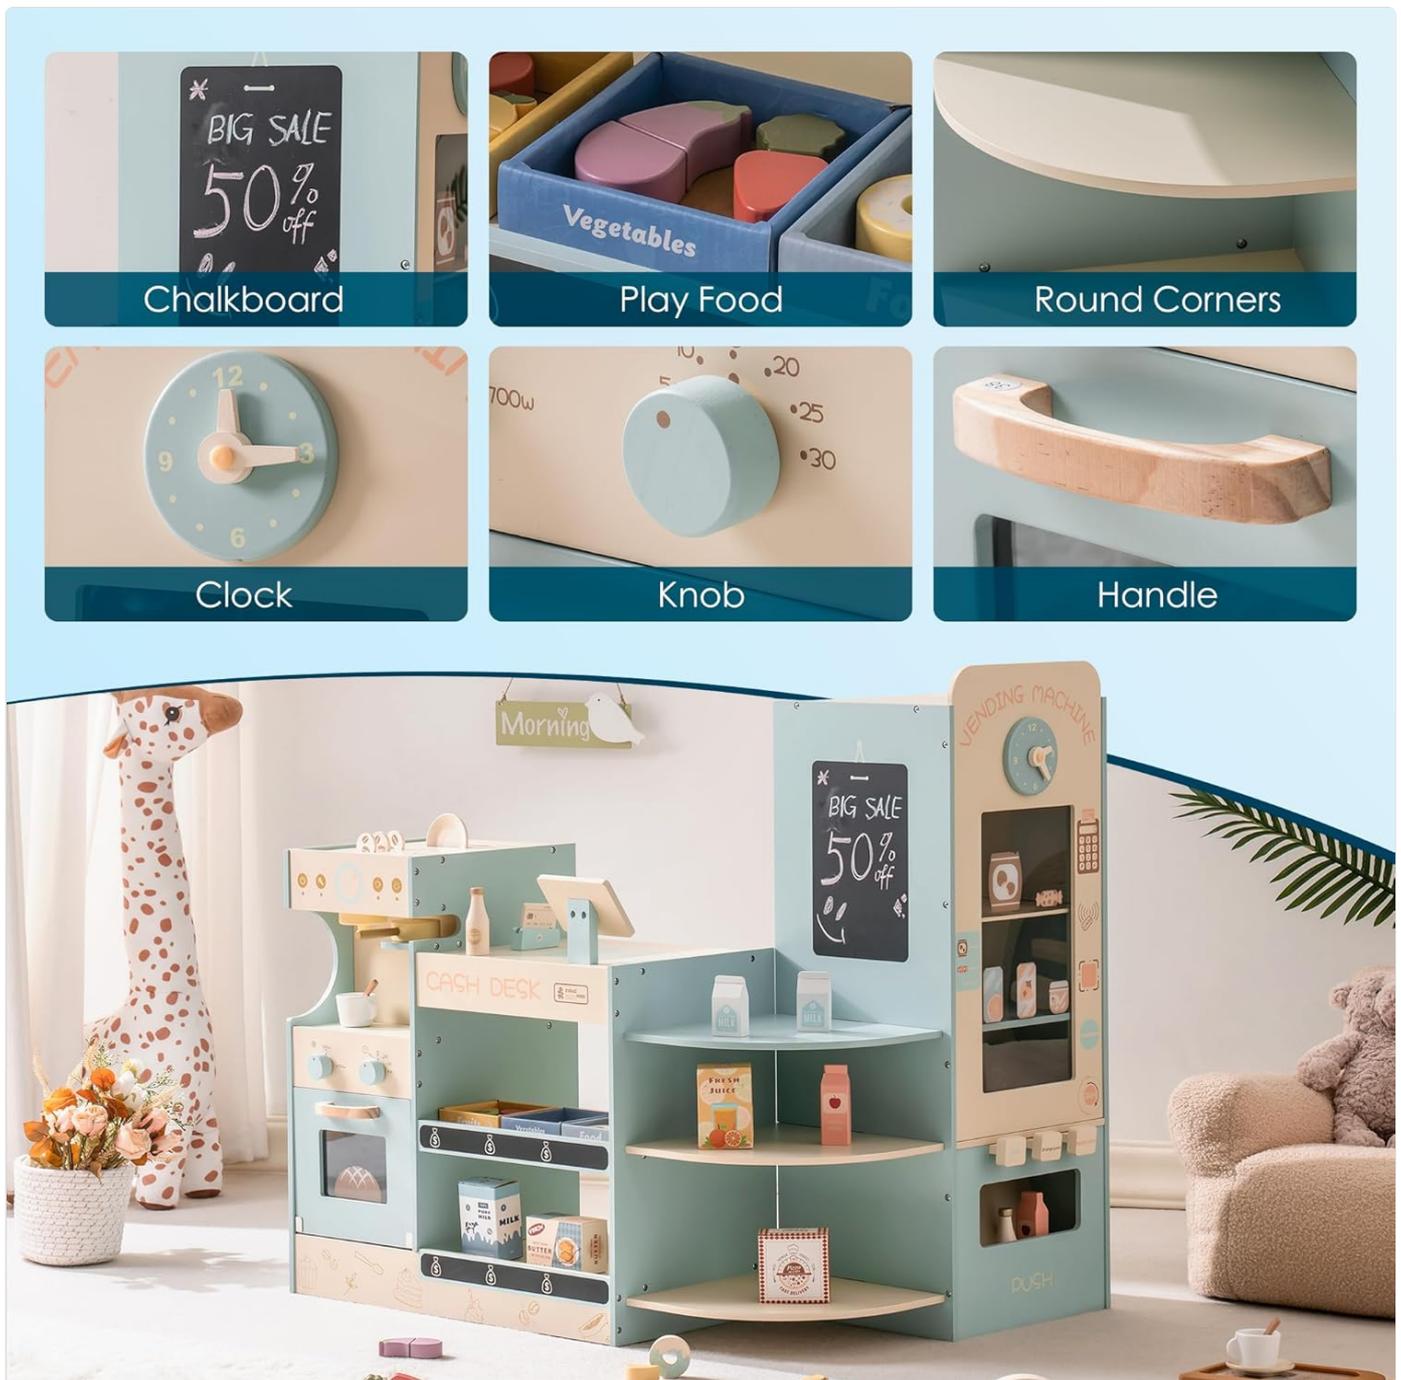

**Figure 5: Detailed Features.** This image provides close-ups of key interactive elements such as the chalkboard, clock, and various knobs and handles, along with examples of play food.

## MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten as necessary.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to preserve the wood and paint finish.
- **Damaged Parts:** If any part becomes damaged, discontinue use and contact customer support for replacement parts or guidance.

## TROUBLESHOOTING

- **Difficulty Assembling:** Ensure all parts are correctly oriented according to the assembly guide. Sometimes, parts

may appear similar but have subtle differences. If issues persist, refer to the assembly diagrams or seek assistance.

- **Loose Components:** If parts become loose during play, gently retighten the corresponding screws. Avoid overtightening to prevent damage to the wood.
- **Missing Parts:** If any components are missing upon unboxing, please contact ROBUD customer support immediately with your purchase details.

## SPECIFICATIONS

---

Feature	Detail
Model Number	WG388
Product Dimensions	24 x 35.8 x 33 inches (L x W x H)
Item Weight	47.4 pounds
Material	Wood
Recommended Age	3 years and up
Manufacturer	ROBUD



**Figure 6: Product Dimensions.** This diagram provides a visual representation of the playset's measurements, including width, depth, and height.

## WARRANTY INFORMATION

---

Specific warranty details for the ROBUD WG388 Wooden Grocery Store Playset are not provided in the product information. Please refer to your purchase documentation or contact ROBUD customer support for warranty terms and conditions.

## CUSTOMER SUPPORT

---

For any questions, concerns, or assistance with your ROBUD WG388 Wooden Grocery Store Playset, please contact ROBUD customer support. You can typically find contact information on the product packaging, the ROBUD official website, or through your retailer's customer service portal.

When contacting support, please have your model number (WG388) and purchase date available.



© 2025 ROBUD. All rights reserved.