

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KOMERY](#) /

› [KOMERY 4K Digital Camera X9-B User Manual](#)

## KOMERY X9-B

# KOMERY 4K Digital Camera X9-B User Manual

Model: X9-B

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

## INTRODUCTION

---

This manual provides comprehensive instructions for the operation and maintenance of your KOMERY 4K Digital Camera, Model X9-B. Please read this manual thoroughly before using the camera to ensure proper function and to maximize your photographic experience.



**Figure 1:** The KOMERY 4K Digital Camera X9-B, shown with its included accessories: two rechargeable batteries and a 32GB TF memory card.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- KOMERY 4K Digital Camera (Model: X9-B)
- 2 x Lithium Ion Batteries
- 32GB TF Card
- USB Charging Cable
- Charging Block
- Wrist Strap
- Screwdriver (for changing covers)
- User Manual

## SETUP

## 1. Battery Installation and Charging

The camera comes with two rechargeable Lithium Ion batteries. Ensure batteries are fully charged before first use.

1. Locate the battery compartment on the bottom of the camera. Open the flap.
2. Insert a charged battery into the compartment, ensuring correct polarity. Close the flap securely.
3. To charge batteries, use the provided charging block and USB cable. The camera can also be charged directly via its Type-C USB port.



Figure 2: View of the camera's bottom, showing the battery compartment and the TF card slot. The Type-C USB port is located on the side.

## 2. TF Card Installation and Formatting

A 32GB TF card is included for storage. The camera supports up to 128GB TF cards.

1. Locate the TF card slot on the bottom of the camera, next to the battery compartment.
2. Insert the TF card into the slot until it clicks into place.

3. **Important:** It is recommended to format the memory card before first use and periodically to ensure optimal performance and prevent data corruption. To format, navigate to the camera's settings menu, select "Format Memory Card," and confirm.

### 3. Attaching the Wrist Strap

Attach the wrist strap to either side of the camera for secure handling and to prevent accidental drops.

## OPERATING INSTRUCTIONS

### 1. Camera Overview and Controls



Figure 3: Detailed diagram of the camera's components and controls.

1. **TFT Display:** Main screen for viewing and menu navigation.
2. **Front Camera:** For selfies and vlogging.
3. **Microphone:** Built-in audio input.
4. **Left Key/Camera Switch:** Navigates left or switches to camera mode.
5. **Right Key/DISP Key:** Navigates right or changes display information.
6. **Power Indicator:** Shows camera power status.
7. **Front/Delete Key:** Navigates up or deletes files.
8. **Back/WiFi Key:** Navigates down or activates WiFi.
9. **Playback/Mode Key:** Enters playback mode or changes shooting mode.
10. **OK/Menu Key:** Confirms selection or opens menu.
11. **T/W Key:** Telephoto/Wide-angle zoom control.
12. **Flashlight:** Provides illumination for photos/videos.
13. **Back Camera:** Main camera lens.
14. **TF Card Slot:** For memory card insertion.
15. **Screw Hole For Tripod:** Standard tripod mount.
16. **Battery Cover:** Protects the battery compartment.
17. **Hot Shoe Interface:** For external accessories like flashes or microphones.
18. **Power Key:** Turns the camera on/off.
19. **Filter Turntable:** Rotates to select different creative filters.
20. **Photo Key:** Shutter button to capture photos or start/stop video recording.
21. **Microphone Interface:** External microphone input.
22. **USB Interface:** Type-C port for charging and data transfer.

## 2. Basic Operation

1. **Power On/Off:** Press the **Power Key (18)** on the top of the camera.
2. **Switching Modes:** Press the **Playback/Mode Key (9)** to switch between Photo, Video, and Playback modes.
3. **Capturing Photos:** In Photo mode, press the **Photo Key (20)** to take a picture.
4. **Recording Videos:** In Video mode, press the **Photo Key (20)** to start recording. Press again to stop.
5. **Zoom:** Use the **T/W Key (11)** or the rolling wheel on the front to adjust the 18X digital zoom.

# Digital Camera with 18X Digital Zoom



Figure 4: Visual representation of the 18X Digital Zoom capability.

6. **Menu Navigation:** Press the **OK/Menu Key (10)** to access the menu. Use the arrow keys **4, 5, 7, 8** to navigate and **OK/Menu Key (10)** to confirm.

### 3. Advanced Features

- **Autofocus:** The camera features autofocus for clear and sharp images.

# UHD 4K & 48MP Vlogging Camera



Figure 5: Comparison showing the effectiveness of the camera's autofocus feature.

- **Anti-Shake:** Activate the anti-shake function in the settings menu to reduce blur from camera movement.
- **Face Detection:** Enable face detection for optimized portrait shots.
- **Self-Timer:** Set a delay (2, 5, or 10 seconds) before capturing a photo.
- **Continuous Shooting:** Capture multiple photos in quick succession.
- **Fill Light:** Use the built-in flashlight for additional illumination in low-light conditions.
- **Multiple Filters & Scene Modes:** Rotate the **Filter Turntable (19)** or select from various scene modes (e.g., Standard, Nostalgic, Monochrome, Vivid, Negative, Binary, Lomo, Dog Eye, Night Portrait, Landscape, Sports, Beach, Party) to enhance your photos.

# Simply Switch Modes by Twisting the Mode Dial



Figure 6: The mode dial allows selection of various creative filters and scene modes.

- **Webcam Function & Live Streaming:** Connect the camera to a computer via the USB interface to use it as a webcam for video calls or live streaming.

# Vlogging Camera for Webcam and Live Streaming



Figure 7: The camera can function as a webcam for live streaming and video conferencing.

- **WiFi Connectivity:** The camera supports direct WiFi connection to your smartphone for remote control and file transfer. Scan the QR code displayed on the camera screen to download the companion app (available for iOS and Android).
- **Time Lapse & Slow Motion:** Explore advanced video recording options such as time-lapse and slow-motion.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Fully charge batteries before storage and recharge them every few months to maintain battery health.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to improve camera performance and add new features.

## TROUBLESHOOTING

| Problem                    | Possible Cause                                     | Solution  |
|----------------------------|--|---|
| Camera does not power on.  | Battery is drained or incorrectly inserted.        | Ensure batteries are fully charged and correctly inserted. Try the second battery.                          |
| Images are blurry.         | Anti-shake is off; insufficient light; dirty lens. | Activate anti-shake in settings. Ensure adequate lighting. Clean the lens.                                  |
| Cannot save photos/videos. | TF card is full or corrupted; card not inserted.   | Insert TF card. Delete unnecessary files or format the card (backup data first). Replace card if corrupted. |
| WiFi connection fails.     | Incorrect app or connection steps.                 | Ensure the correct app is installed via QR code. Follow the in-app instructions for connection.             |
| Camera freezes.            | Software glitch.                                   | Remove and reinsert the battery to reset the camera.  |

## SPECIFICATIONS

| Feature                         | Detail   |
|---------------------------------|--|
| Brand                           | KOMERY   |
| Model Name                      | X9   |
| Item Model Number               | X9-B   |
| Maximum Webcam Image Resolution | 48 MP  |
| Digital Zoom                    | 18X  |
| Image Stabilization             | Anti-Shake   |
| Photo Sensor Technology         | CMOS   |
| Supported File Format           | JPEG   |
| Batteries                       | 1 Lithium Ion batteries required. (included) - 2 included in package |
| Item Weight                     | 14.9 ounces  |
| Package Dimensions              | 5.91 x 5.91 x 3.11 inches  |
| Compatible Mountings            | Micro Four Thirds  |
| First Available Date            | January 18, 2024   |

## WARRANTY & SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or

visit the official KOMERY website. Protection plans may also be available for extended coverage.

- **2-Year Protection Plan:** Available for purchase.
- **3-Year Protection Plan:** Available for purchase.