

HEXEH ZHONGXIAOFEI2023

HEXEH Rechargeable Digital Twin Bell Alarm Clock

Model: ZHONGXIAOFEI2023

User Manual

1. INTRODUCTION

Thank you for choosing the HEXEH Rechargeable Digital Twin Bell Alarm Clock. This alarm clock combines classic twin bell aesthetics with modern digital functionality, including a night light and a rechargeable battery. Designed for ease of use, it provides a loud alarm and clear time display, suitable for various users.

Please read this manual carefully before operating the device to ensure proper use and to maximize its lifespan.

2. PACKAGE CONTENTS

- 1 x HEXEH Digital Twin Bell Alarm Clock
- 1 x USB Charging Cable
- 1 x User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your alarm clock.

Front View



Image 3.1: Front view of the alarm clock, featuring a clear digital time display and the classic twin bell design at the top.

Back Panel Controls



Image 3.2: Rear view of the alarm clock, detailing the ON/OFF switch, various setting buttons, and the USB charging port at the bottom.

- **Digital Display:** Shows time, alarm status, and other indicators.
- **Twin Bells:** Located at the top, responsible for the loud alarm sound.
- **Night Light Ring:** An illuminated ring around the display for soft, eye-protecting warm light.
- **ON/OFF Switch:** Located on the back, controls the main power.
- **Setting Buttons:** Multiple buttons on the back for adjusting time, alarms, and other functions.
- **USB Charging Port:** Located at the bottom rear for recharging the internal battery.

4. SETUP

4.1 Initial Charging

1. Connect the provided USB charging cable to the USB port on the back of the alarm clock.
2. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
3. Allow the clock to charge fully before first use. The charging indicator (if present) will show charging status.

4.2 Powering On

Locate the ON/OFF switch on the back of the alarm clock and slide it to the 'ON' position. The digital display will illuminate.

5. OPERATING INSTRUCTIONS

5.1 Setting the Time



Image 5.1: A user's hands interacting with the alarm clock to set the time, showing the digital display at 2:10.

1. Press the 'Time Set' button (refer to Image 3.2 for button layout). The hour digits will begin to flash.
2. Use the '+' and '-' buttons to adjust the hour.
3. Press the 'Time Set' button again to confirm the hour and move to setting the minutes. The minute digits will flash.
4. Use the '+' and '-' buttons to adjust the minutes.
5. Press the 'Time Set' button one more time to confirm the minutes and exit time setting mode.
6. To switch between 12-hour and 24-hour format, press the '12/24' button (refer to Image 3.2).

5.2 Setting the Alarm

This alarm clock supports setting up to two independent alarms.



Image 5.2: The alarm clock actively ringing, with visual cues like lightning bolts and sound waves indicating the loud twin bell alarm.

1. Press the 'Alarm 1' or 'Alarm 2' button (refer to Image 3.2). The alarm hour digits will flash.
2. Use the '+' and '-' buttons to adjust the alarm hour.
3. Press the respective 'Alarm' button again to confirm the hour and move to setting the alarm minutes. The minute digits will flash.
4. Use the '+' and '-' buttons to adjust the alarm minutes.
5. Press the 'Alarm' button one more time to confirm the minutes and activate the alarm. An alarm icon will appear on the display.
6. To deactivate an alarm, press its corresponding 'Alarm' button until the alarm icon disappears from the display.

5.3 Night Light Function



off screen power saving
The screen turns off after
10 seconds of no operation,
prolonging the standby time

Ring Night Light

Soft eye-protecting warm light,
convenient to see the time at night



Image 5.3: The alarm clock demonstrating its ring night light feature, providing a soft, eye-protecting warm light around the display, and also illustrating the power-saving screen-off function.

The alarm clock features a soft, eye-protecting warm night light ring around the display. To activate or deactivate the night light, press the dedicated 'Light' button (refer to Image 3.2). The light provides visibility in dark environments without being overly bright.

5.4 Power Saving Mode

To conserve battery life, the digital display will automatically turn off after 10 seconds of no operation. To reactivate the display, simply touch any button or gently tap the clock. This feature prolongs the standby time of the rechargeable battery.

5.5 Charging Your Device

The alarm clock is equipped with a USB port that can also be used to charge your mobile device while you sleep. Connect your mobile device's charging cable to the USB port on the back of the alarm clock. Ensure the alarm clock itself has sufficient charge or is connected to a power source for optimal charging performance.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the alarm clock. Do not use abrasive cleaners or solvents, as they may damage the finish.

- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge the clock when the battery indicator is low.
- **Storage:** If storing the alarm clock for an extended period, ensure it is fully charged and store it in a cool, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or not turning on.	Battery is low or depleted; Power switch is OFF; Power saving mode is active.	Charge the alarm clock; Slide the ON/OFF switch to 'ON'; Tap any button or the clock to reactivate the display.
Alarm is not sounding.	Alarm is not set or deactivated; Volume is too low (if adjustable).	Ensure the alarm is set and activated (alarm icon visible); Check if there's a volume setting (if applicable, though this model is designed to be loud).
Time or alarm cannot be set.	Incorrect button sequence; Buttons are unresponsive.	Refer to sections 5.1 and 5.2 for correct setting procedures; Ensure the clock is powered on.
Night light is not working.	Night light is deactivated; Battery is low.	Press the 'Light' button to activate; Charge the alarm clock.

8. SPECIFICATIONS



Image 8.1: Diagram illustrating the dimensions of the alarm clock: approximately 17cm in height, 11.5cm in width, and 5.5cm in depth.

- **Brand:** HEXEH
- **Model Number:** ZHONGXIAOFEI2023
- **ASIN:** B0CSMKPYWT
- **Color:** A (White)
- **Item Weight:** 50 Grams
- **Number of Items:** 1
- **Size:** One Size (Approx. 17cm H x 11.5cm W x 5.5cm D)
- **Batteries Included:** No (Internal rechargeable battery)
- **Manufacturer:** ZHONGXIAOFEI2023

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, refer to the documentation provided at the time of purchase or contact your retailer.

9.2 Customer Support

If you encounter any issues or have questions regarding your HEXEH Alarm Clock that are not covered in this manual, please contact the retailer or manufacturer's customer support for assistance. Contact information can typically be found on the product packaging or the retailer's website.