Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Kawai /
- > Kawai CA701 Digital Concert Piano Rosewood User Manual

Kawai CA701

Kawai CA701 Digital Concert Piano - Rosewood User Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Kawai CA701 Digital Concert Piano. Please read this manual thoroughly to ensure proper use and to maximize your enjoyment of this instrument. The Kawai CA701 is designed to replicate the experience of playing a grand piano, featuring advanced sound engines and a responsive wooden-key action.

KEY FEATURES

- 88-key Digital Piano: Full-size keyboard for comprehensive musical expression.
- Grade-weighted Hammer-action Wooden Keys: Provides an authentic acoustic piano feel.
- Built-in Speakers: Integrated sound system for immediate playability.
- Grand Feel Pedal System: Replicates the weight and response of acoustic grand piano pedals.
- 256-note Polyphony: Allows for complex musical passages without note drop-out.
- Onboard Effects: Enhance your sound with various digital effects.

SETUP

Upon unpacking, carefully assemble the piano stand and attach the main unit according to the included assembly guide. Ensure all connections, including power and pedal unit, are securely fastened. Place the piano on a stable, level surface. Connect the power adapter to the DC IN jack and then to a wall outlet. Press the POWER button to turn on the instrument.

OPERATING INSTRUCTIONS

The Kawai CA701 features an intuitive control panel for selecting sounds, adjusting settings, and utilizing various functions. Refer to the on-screen display for navigation. Use the dedicated buttons or touch screen interface to browse through the available piano sounds, including the renowned Shigeru Kawai SK-EX and

Kawai EX concert grand pianos, and the K60 upright piano. Adjust volume, reverb, and other effects as desired. The instrument also supports recording and playback functions, allowing you to capture your performances directly.

MAINTENANCE

To maintain your Kawai CA701, regularly wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents. Keep the instrument away from direct sunlight, extreme temperatures, and high humidity. Ensure proper ventilation and avoid placing objects on the keyboard or control panel. For optimal performance, periodic professional servicing is recommended.

TROUBLESHOOTING

If you encounter any issues with your Kawai CA701, first check all cable connections and power supply. Ensure the volume is turned up and headphones are not connected if you expect sound from the speakers. If the problem persists, consult the detailed troubleshooting section in the full user manual (available on the Kawai website) or contact customer support. Avoid attempting repairs yourself, as this may void your warranty.

SPECIFICATIONS

Specification	Detail
Model Name	CA701
Number of Keys	88
Key Action	Grade-weighted Hammer-action Wooden Keys
Polyphony	256-note
Dimensions (L x W x H)	62.5 x 27 x 25 inches
Item Weight	242 Pounds
Color	Rosewood
Body Material	Wood
Connectivity Technology	Auxiliary
Connector Type	3.5mm Jack
Power Source	Corded Electric
Skill Level	Professional
Special Feature	Headphone Jack

PRODUCT VISUALS



Front view of the Kawai CA701 Digital Concert Piano in Rosewood, accompanied by a matching piano bench.




Angled view of the Kawai CA701 Digital Concert Piano, highlighting the keyboard and pedal unit.

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your purchase or visit the official Kawai website. Technical support and customer service contact details can also be found on the Kawai website or in your product documentation. Keep your proof of purchase for warranty claims.

Related Documents - CA701

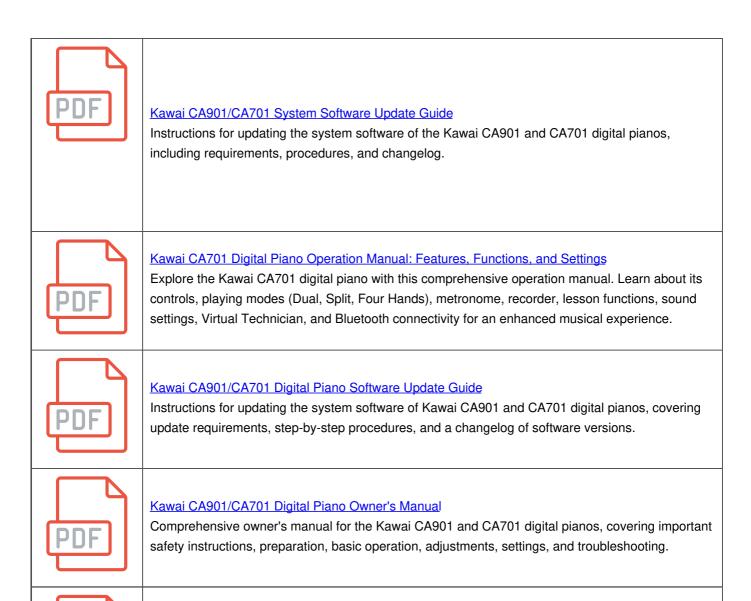

Kawai CA/NV LCD Touch Panel Software Update Instructions

Detailed instructions for updating the LCD touch panel software on Kawai CA and NV series digital and hybrid pianos, including requirements, step-by-step procedures, and version changelogs.

KAWAI CP119 Quick Start Guide: Learn Your Digital Piano

Get started with your KAWAI CP119 Concert Performer digital piano. This Quick Start Guide provides essential instructions on sounds, styles, recording, and USB usage for new users.