

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZdalaMit](#) /

› [ZdalaMit G10 Voice Replacement Remote Control for MECOOL KM7 Plus Android TV Box S905Y4 User Manual](#)

ZdalaMit G10

ZdalaMit G10 Voice Replacement Remote Control User Manual

For MECOOL KM7 Plus Android TV Box S905Y4

INTRODUCTION

This manual provides detailed instructions for the ZdalaMit G10 Voice Replacement Remote Control, specifically designed for use with the MECOOL KM7 Plus Android TV Box S905Y4. This remote offers enhanced control and convenience, including voice command capabilities and dedicated quick access buttons for popular streaming services.

Please read this manual carefully before using the remote control to ensure proper setup and operation.

SETUP

Battery Installation

The G10 remote control requires two 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Gently slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

Pairing the Remote Control

Before initial use, the G10 remote must be paired with your MECOOL KM7 Plus Android TV Box to enable full functionality, including voice control.

1. Ensure your MECOOL KM7 Plus Android TV Box is powered on and connected to your display.
2. Navigate to the **Settings** menu on your Android TV Box. Look for options such as **Bluetooth**, **Remotes & Accessories**, or **Connected Devices**.
3. Select the option to **Add device** or **Pair new device** to put your TV box into pairing mode.
4. On the G10 remote control, simultaneously press and hold the **OK** button (the central button of the

navigation pad) and the **Back** button (left arrow icon) for approximately 3-5 seconds. The indicator light on the remote will begin to flash, signifying it is in pairing mode.

5. On your TV box screen, select "G10 Remote" or a similar name from the list of available devices to complete the pairing process.
6. Once successfully paired, the indicator light on the remote will stop flashing, and you can begin using the remote control.



This image displays the ZdalaMit G10 Voice Replacement Remote Control. It features a black body with clearly labeled


buttons for power, navigation (a large circular pad with a central 'OK' button), volume control, mute, back, home, settings, and input. Below the main navigation, there are dedicated quick access buttons for popular streaming services like YouTube, Netflix, Prime Video, and Disney+.

OPERATING INSTRUCTIONS

Button Functions

- **Power Button:** Located at the top left. Press to turn the TV box on or off.
- **Source/Input Button:** Located at the top right. Used to change the input source on the connected display, if supported by the TV box.
- **User Profile Button:** Located below the power button. Accesses user profiles or accounts.
- **Settings Button:** Located below the source/input button. Accesses the settings menu of the Android TV Box.
- **Voice Assistant Button:** The colorful circular button below the user profile button. Press and hold to activate the voice assistant for voice commands and search.
- **Navigation Pad (Circular):** The large central circular pad. Use the directional arrows (Up, Down, Left, Right) to navigate through menus and content. The central button acts as **OK** or **Enter** to confirm selections.
- **Back Button:** The left arrow icon. Returns to the previous screen or menu.
- **Home Button:** The house icon. Returns to the main home screen of the Android TV Box.
- **TV Input Button:** The TV icon. May switch to live TV input or a specific TV function.
- **Volume Buttons (+/-):** Adjusts the audio volume level.
- **Mute Button:** The speaker icon with a cross. Mutes or unmutes the audio.
- **Channel/Page Up/Down Buttons:** The up and down arrow icons below the mute button. Used for scrolling or changing channels.
- **Quick Access Buttons:** Dedicated buttons for YouTube, Netflix, Prime Video, and Disney+ provide direct access to these applications.



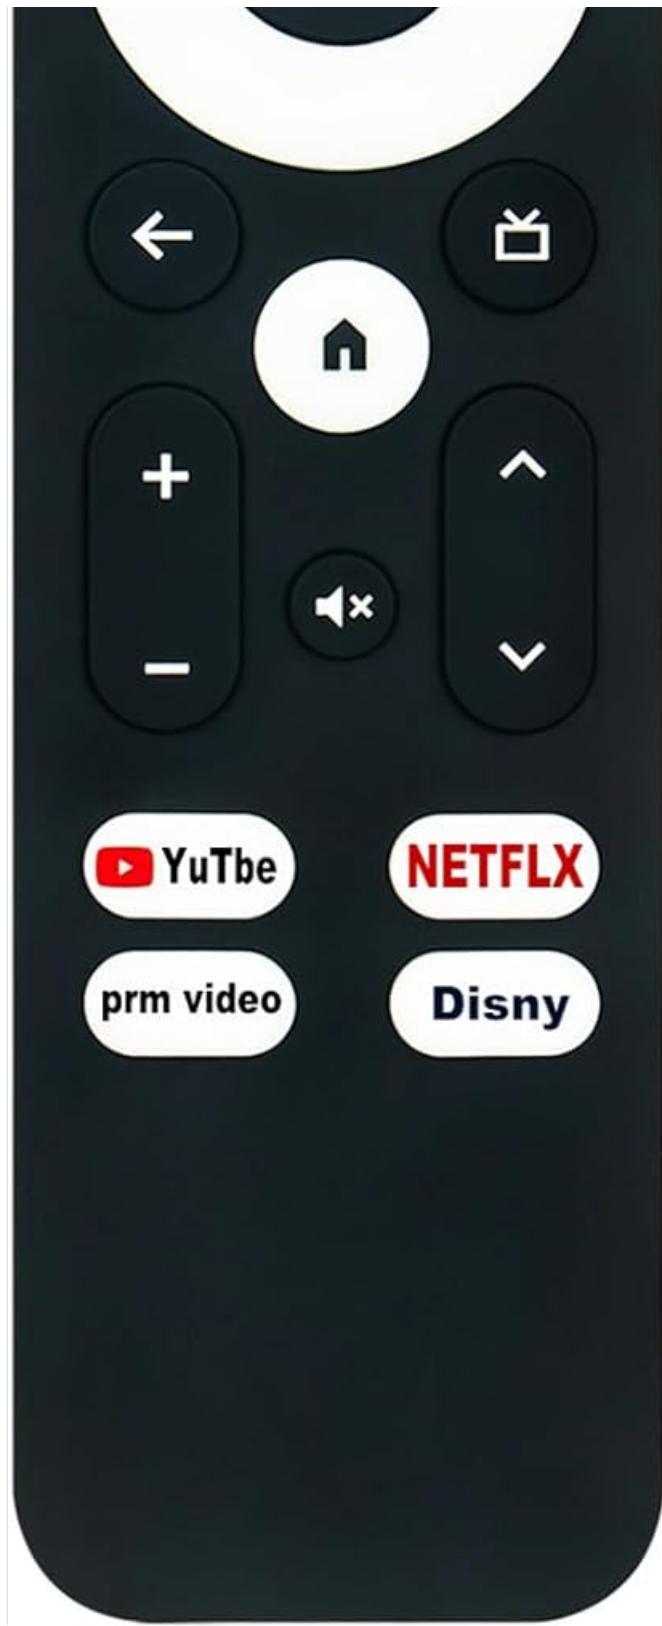

This image presents the ZdalaMit G10 Voice Replacement Remote Control in a straight-on view, highlighting its ergonomic design and button arrangement. To the right of the remote, a distinct circular icon with a microphone symbol is displayed, drawing attention to the remote's integrated voice control feature.

MAINTENANCE

Battery Replacement

Replace the AAA batteries when the remote's performance degrades, buttons become unresponsive, or the indicator light fails to illuminate during use. Always use new, high-quality alkaline batteries for optimal performance.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry, lint-free cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight, high humidity, and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
- **Re-pair Remote:** If the remote was previously working but has become unresponsive, try re-pairing it with your Android TV Box following the "Pairing the Remote Control" instructions.
- **Obstructions:** Ensure there are no physical obstructions between the remote control and the Android TV Box that might interfere with the signal.

Voice Control Not Working

- **Pairing Status:** Verify that the remote is properly paired with your TV box, as voice functionality relies on a stable Bluetooth connection.
- **TV Box Settings:** Check the settings on your MECOOL KM7 Plus Android TV Box to ensure the voice assistant feature is enabled and configured correctly.
- **Microphone Usage:** Speak clearly and directly into the microphone located on the remote control when using voice commands.

Specific Buttons Not Functioning

- **Clean Remote:** Dirt or debris might be lodged under the buttons. Gently clean the remote as described in the Maintenance section.
- **Battery Check:** Low battery power can sometimes cause intermittent button functionality. Replace batteries if needed.
- **Remote Damage:** If individual buttons remain unresponsive after troubleshooting, the remote may be damaged and require replacement.

SPECIFICATIONS

- **Model:** G10 Voice Replacement Remote Control
- **Brand:** ZdalaMit
- **Compatibility:** MECOOL KM7 Plus Android TV Box S905Y4
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Product Dimensions:** 5.9 x 1.57 x 0.55 inches (approximately 15 x 4 x 1.4 cm)
- **Item Weight:** 1.41 ounces (approximately 40 grams)

- **Special Feature:** Ergonomic design, Voice Control
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Television (via TV Box)

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the documentation provided at the time of purchase or contact the seller directly through the platform where the product was acquired. Keep your purchase receipt or order number handy for faster service.