

[Manuals.plus](#) /

› [KRIB BLING](#) /

› KRIB BLING 25 lbs Full-Automatic Portable Washing Machine User Manual

KRIB BLING KB03-GREY9

KRIB BLING 25 lbs Full-Automatic Portable Washing Machine User Manual

Model: KB03-GREY9

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the power supply matches the voltage requirements of the washing machine.
- Do not operate the machine with a damaged power cord or plug.
- Keep children away from the appliance during operation.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Always unplug the machine before cleaning or performing any maintenance.
- Do not immerse the electrical parts of the machine in water.

2. PRODUCT OVERVIEW

Components and Features

The KRIB BLING Full-Automatic Portable Washing Machine is designed for convenience and efficiency, ideal for apartments, RVs, and camping. It features a compact design with a large capacity and multiple wash programs.



Figure 1: KRIB BLING 25 lbs Full-Automatic Portable Washing Machine, Grey, with dimensions 24x24x40 inches.

- **Easy to Operate:** Straightforward illustrations and descriptions, no complex installation needed.
- **Relief Your Hands:** Compact and lightweight, allowing you to set the program and let the machine work independently.
- **Large Wash and Spin Capacity:** Honeycomb-shaped inner tub can load up to 25 lbs of laundry.
- **Water Level and Mode Control:** 10 wash programs and 8 water level selections to meet different washing needs.
- **Full Automatic Machine:** Features a built-in drain aluminum pump and drainage tube for easy water disposal.

KEEP CLOTHES CLEAN & COMFORTABLE



Energy Save



Powerful Motor



Quick Wash



Safety Protection

Figure 2: Key features including Energy Save, Powerful Motor, Quick Wash, and Safety Protection.



Figure 3: Internal components of the washing machine.

3. SETUP AND INSTALLATION

Connecting the Water Supply

The washing machine can be connected to a water source via the included intake hose. Ensure all connections are secure to prevent leaks.

1. Attach the L-shaped connector of the intake hose to the water inlet at the back of the washing

machine. Tighten securely.

2. Connect the other end of the intake hose to your water tap. For some taps, a special adapter (included) may be required. Ensure the rubber seal is properly seated before tightening.
3. Verify that all connections are tight and there are no leaks before turning on the water supply.

Drain Hose Setup

The machine comes with a built-in drain pump and drainage tube for convenient water disposal.

- Position the drainage tube to direct wastewater into a sink, bathtub, or a suitable bucket.
- Ensure the drain hose is not kinked or blocked to allow for proper water flow.

Power Connection

Plug the washing machine's power cord into a grounded electrical outlet. Ensure the outlet meets the machine's voltage requirements (120 Volts).

Your browser does not support the video tag.

Video 1: This video demonstrates the setup and basic operation of the KRIB BLING Full-Automatic Washing Machine, including connecting the water supply and using the drain pump.

Your browser does not support the video tag.

Video 2: Watch this video for a step-by-step guide on operating the KRIB BLING Full-Automatic Washing Machine, covering program selection and water filling.

4. OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features an LED display and push buttons for easy program and water level selection.

Multifunctional Panel

4

Powder levels

10

Commonly
used programs

24

24-hour delay
cleaning function

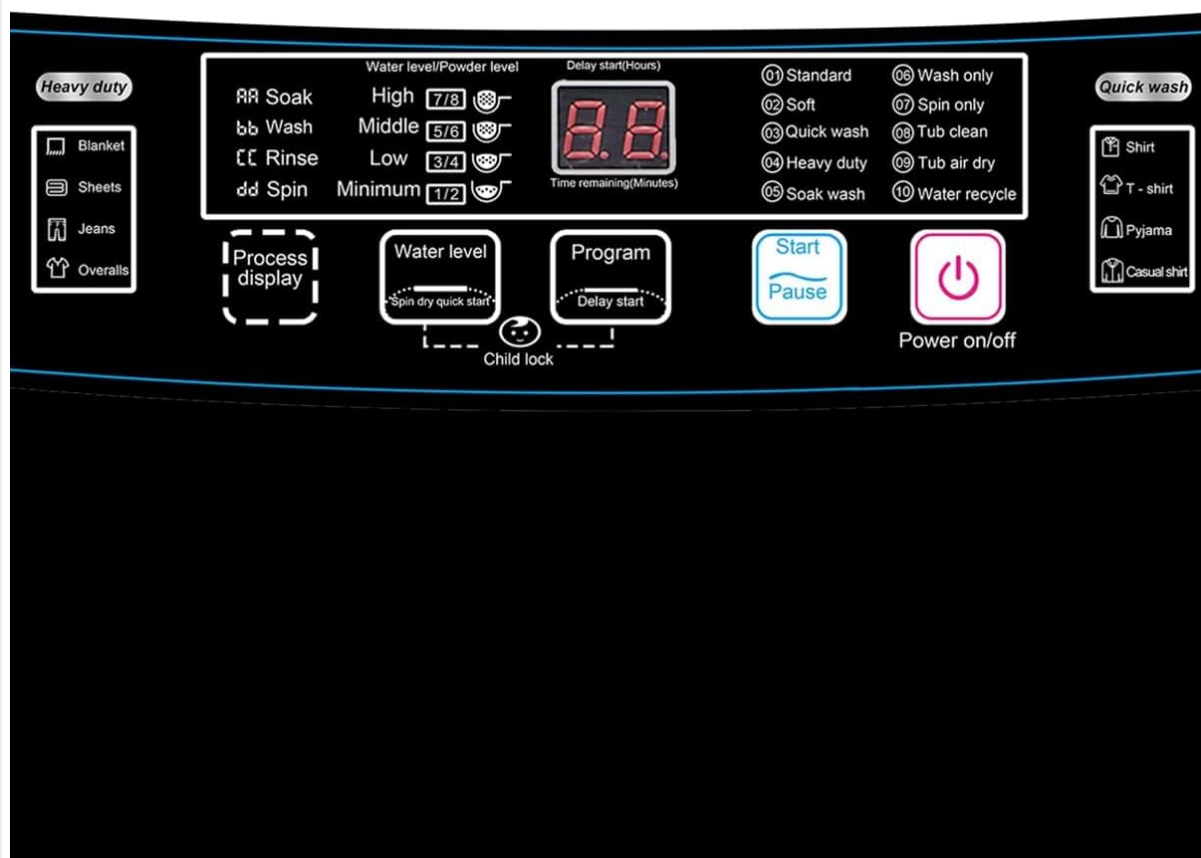


Figure 4: Multifunctional Control Panel with LED Display.

Washing Programs

Select from 10 different washing programs based on your laundry needs:

1. **Standard:** For everyday laundry.
2. **Soft:** For delicate fabrics.
3. **Quick Wash:** For lightly soiled items or when time is limited.
4. **Heavy Duty:** For heavily soiled or bulky items.
5. **Soak Wash:** Includes a soaking period before washing.
6. **Wash Only:** Performs only the wash cycle.
7. **Spin Only:** Performs only the spin cycle.

8. **Tub Clean:** For cleaning the washing machine tub.
9. **Tub Air Dry:** For air drying the tub to prevent mildew.
10. **Water Recycle:** Reuses water for subsequent washes (check local regulations).

Water Level Selection

Adjust the water level according to the load size:

- **High:** 7/8 full
- **Middle:** 5/6 full
- **Low:** 3/4 full
- **Minimum:** 1/2 full

Child Lock Function

To activate the child lock, press and hold the 'Program' and 'Water Level' buttons simultaneously for 5 seconds. The display will show 'CL' to confirm activation. To deactivate, repeat the process until you hear a beep.



Figure 5: Child Lock for Safety.

5. MAINTENANCE

Cleaning the Lint Filter

Regularly clean the lint filter to ensure optimal washing performance and prevent lint buildup on clothes.

1. Locate the lint filter inside the washing tub.
2. Remove the filter and clean any accumulated lint under running water.

3. Reinsert the clean filter back into its position.

Tub Cleaning

Use the 'Tub Clean' program periodically to maintain the cleanliness and hygiene of the washing tub.

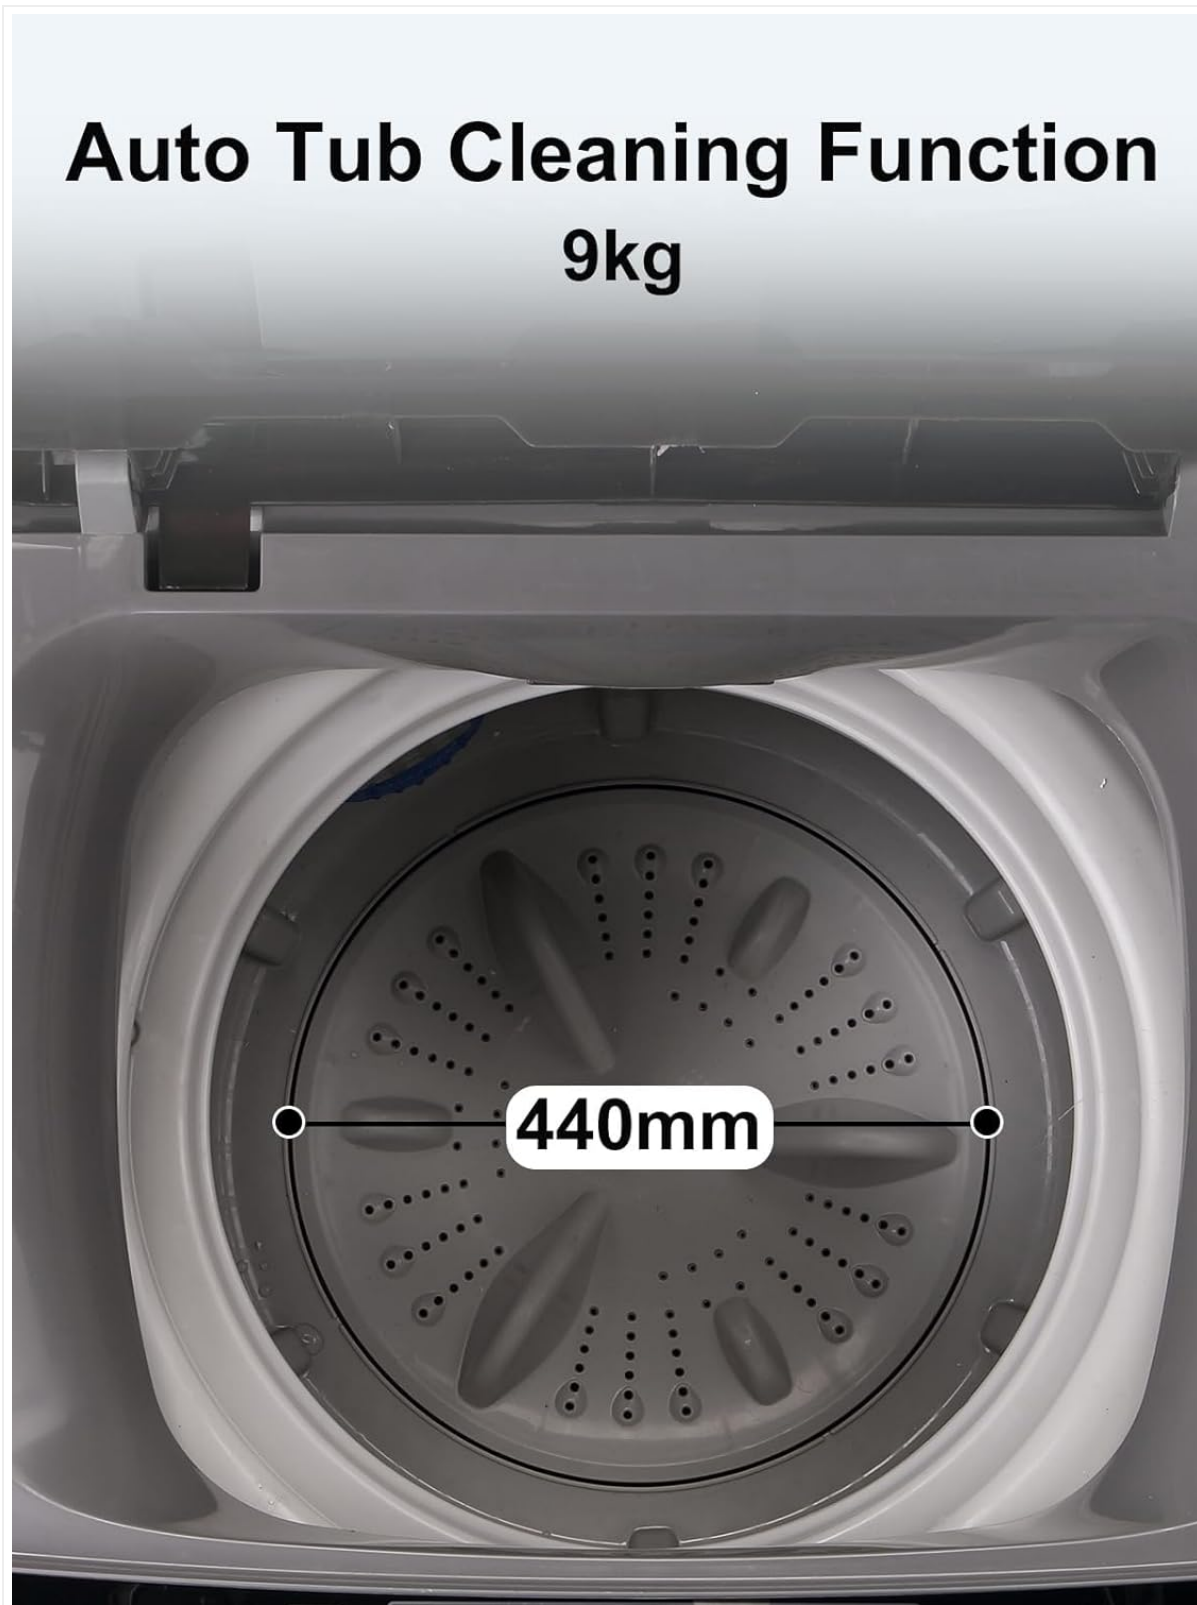


Figure 6: Auto Tub Cleaning Function.

6. TROUBLESHOOTING

If you encounter any issues with your washing machine, refer to the following common problems and

solutions:

- **Machine does not start:** Check if the power cord is securely plugged in and the power button is pressed. Ensure the lid is properly closed.
- **Water does not fill:** Verify that the water tap is open and the intake hose is not kinked or blocked.
- **Water does not drain:** Check if the drain hose is properly positioned and not blocked. Ensure the drain pump is functioning.
- **Excessive vibration/noise:** Ensure the machine is placed on a stable, level surface. Distribute laundry evenly inside the tub.
- **Error codes on LED display:** Consult the full instruction manual for specific error code meanings and troubleshooting steps.

AUTOMATIC UNBALANCE DETECTION



Figure 7: Automatic Unbalance Detection helps prevent excessive vibration.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	24"D x 24"W x 40"H
Brand	KRIB BLING

Capacity	25 Pounds
Special Feature	Adjustable Leveling Legs, Fully automatic, Protective Rat Mesh
Access Location	Top Load
Color	Grey
Item Weight	58.5 Pounds
Material	Glass, Plastic
Controls Type	Push Button
Operation Mode	Fully Automatic
Max Rotational Speed	1300 RPM
Voltage	120 Volts
Number of Standard Cycles	10
Noise	50 Decibels
Installation Type	Freestanding
Display	LED
Model Name	KB03-GREY9
Included Components	Cover, Fill Hose, Intake Hose, Venting Duct

8. WARRANTY AND SUPPORT

Warranty Information

This KRIB BLING washing machine comes with a **1 YEAR WARRANTY** from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact KRIB BLING customer service. Refer to the product packaging or official website for the most up-to-date contact information.