

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Suuim](#) /

› Suuim Cordless Grass Trimmer (Model B0CSNHBQQ5) Instruction Manual

## Suuim B0CSNHBQQ5

# Suuim Cordless Grass Trimmer Instruction Manual

Model: B0CSNHBQQ5

## 1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including eye protection, gloves, and sturdy footwear, when operating the trimmer.
- Keep children and bystanders away while operating the trimmer.
- Avoid contact with children.
- Stay away from sources of fire.
- Store the trimmer in a dry environment when not in use.
- Ensure the battery is fully charged before use and disconnected during assembly or maintenance.
- Do not operate the trimmer in wet conditions or rain.

**Sharp blade, protective baffle, effectively prevent grass spatter when mowing.**



Figure 1: General Safety Warnings

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any parts are missing or damaged, please contact customer support.

- 1 x Lawn Trimmer Main Unit
- 3 x Plastic Blades
- 1 x Flat Steel Blade
- 1 x Manganese Steel Round Saw Blade
- 1 x Lithium Battery (2000mAh)
- 1 x Charger
- 1 x Auxiliary Handle
- Assembly Tools (e.g., wrench, screws)



Figure 2: All Included Components

### 3. SETUP AND ASSEMBLY

The Suuim Cordless Grass Trimmer requires some assembly before first use. Follow these steps carefully.

#### 3.1. Attach the Auxiliary Handle

1. Slide the auxiliary handle onto the main shaft.
2. Position it for comfortable use and tighten the securing mechanism. The auxiliary grip is 180° adjustable.

#### 3.2. Install the Protective Baffle

1. Attach the protective baffle to the trimmer head using the provided screws. This prevents grass spatter during operation.



Protective cover can effectively prevent grass spatter when breaking grass.

Low noise head, high power low noise head, waterproof and easy to clean.



Figure 3: Protective Baffle Installation

### 3.3. Select and Install the Blade

Choose the appropriate blade for your task:

- **Plastic Blades:** Suitable for mowing young grass and light trimming.
- **Flat Steel Blade:** Suitable for quickly mowing lawns, weeds, and small shrubs.
- **Manganese Steel Round Saw Blade:** For trimming thicker bush branches and tougher vegetation.

1. Ensure the trimmer is off and the battery is removed.
2. Align the chosen blade with the trimmer head's mounting point.
3. Secure the blade using the provided fasteners and tools. Ensure it is tightly fastened.



**The nose can be adjusted according to the cutting environment.**

Figure 4: Blade Installation

### 3.4. Adjust Telescopic Rod Length

1. Loosen the locking mechanism on the telescopic rod.
2. Adjust the rod to a comfortable working length (90-120cm adjustable).
3. Tighten the locking mechanism securely.

Adjustable telescopic rod, 1-30cm  
telescopic, according to demand at will.

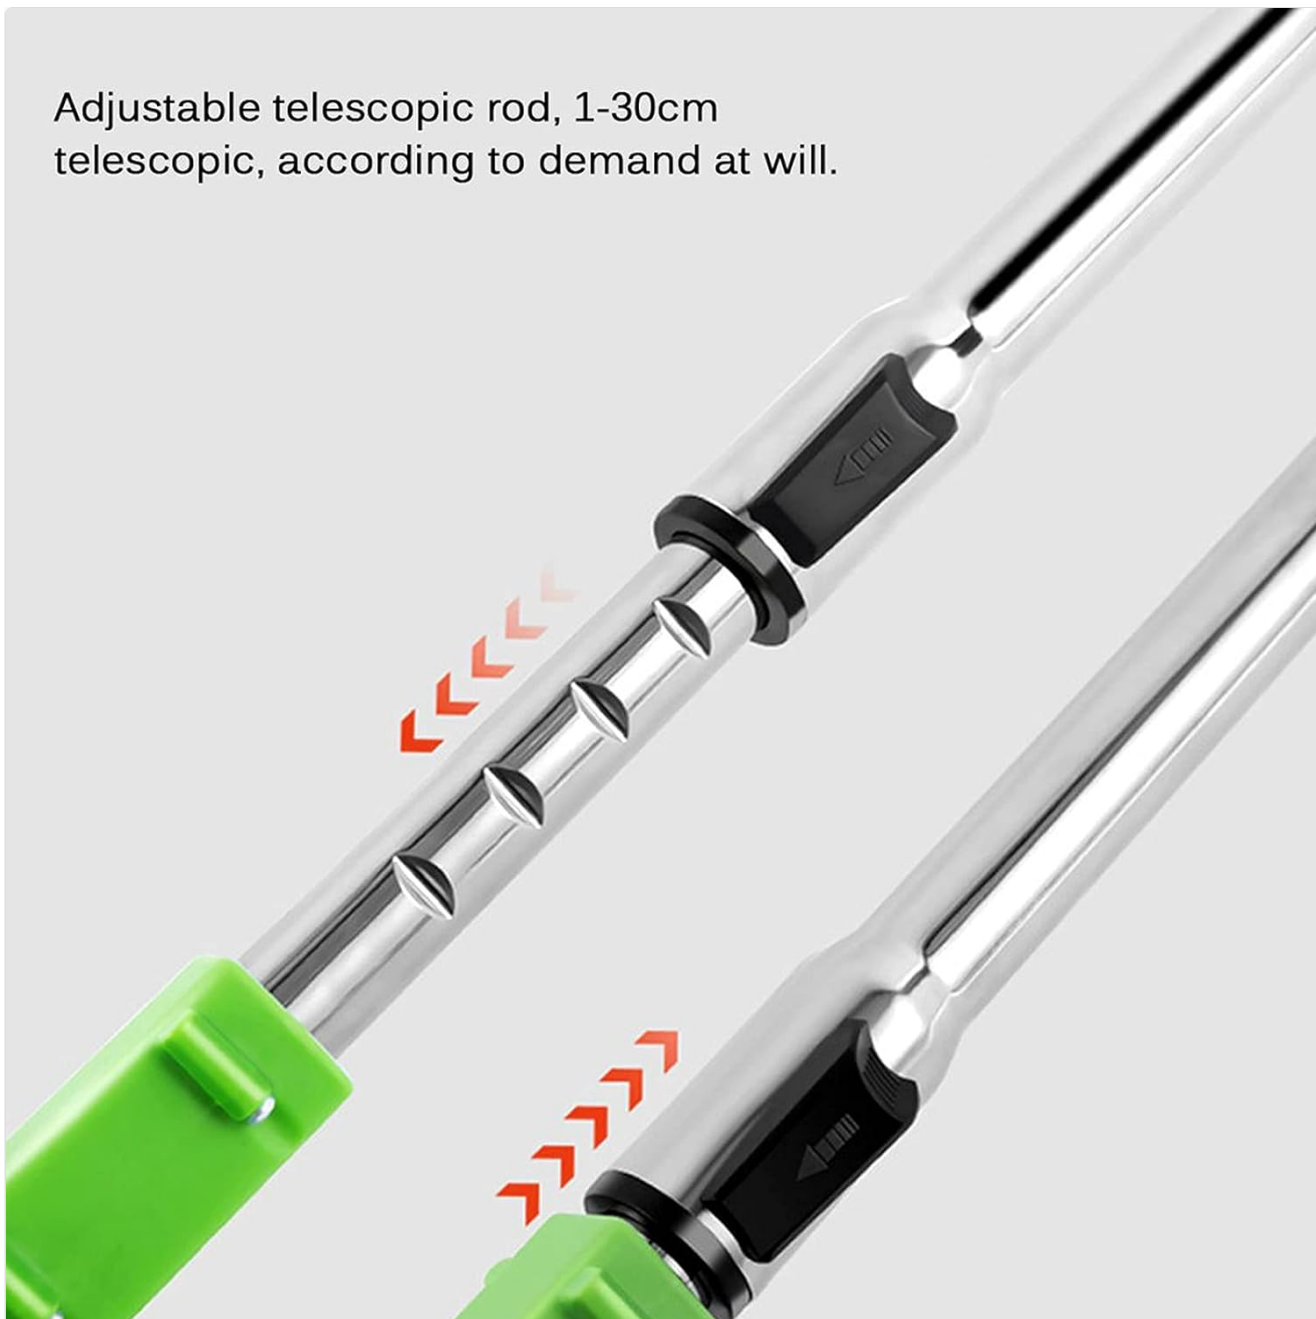


Figure 5: Telescopic Rod Adjustment

### 3.5. Charge the Battery

The 2.0AH lithium-ion battery requires charging before first use. A full charge takes approximately 1 hour and provides up to 30 minutes of operation.

1. Connect the charger to a standard power outlet.
2. Insert the battery into the charger.
3. Wait for the charging indicator to show a full charge.
4. Once charged, disconnect the battery from the charger.

## 4. OPERATING INSTRUCTIONS

---

Familiarize yourself with the trimmer's functions before beginning work.

### 4.1. Powering On/Off

1. Insert the charged battery into the trimmer's battery slot until it clicks into place.

2. To start the trimmer, press and hold the safety lock button, then squeeze the trigger switch.
3. To stop the trimmer, release the trigger switch.

#### 4.2. 2-in-1 Trimmer/Edger Function

The trimmer can be used for both mowing and edging tasks.

1. To switch between modes, adjust the direction of the trimming head.
2. For edging, rotate the head to a vertical position.

#### 4.3. Adjusting the Cutting Head Angle

The cutting head supports 70° random adjustment to reach narrow areas and corners.

1. Press the adjustment button on the trimmer head.
2. Adjust the head to the desired angle.
3. Release the button to lock the head in place.

Sharp blade, protective baffle, effectively prevent grass spatter when mowing.

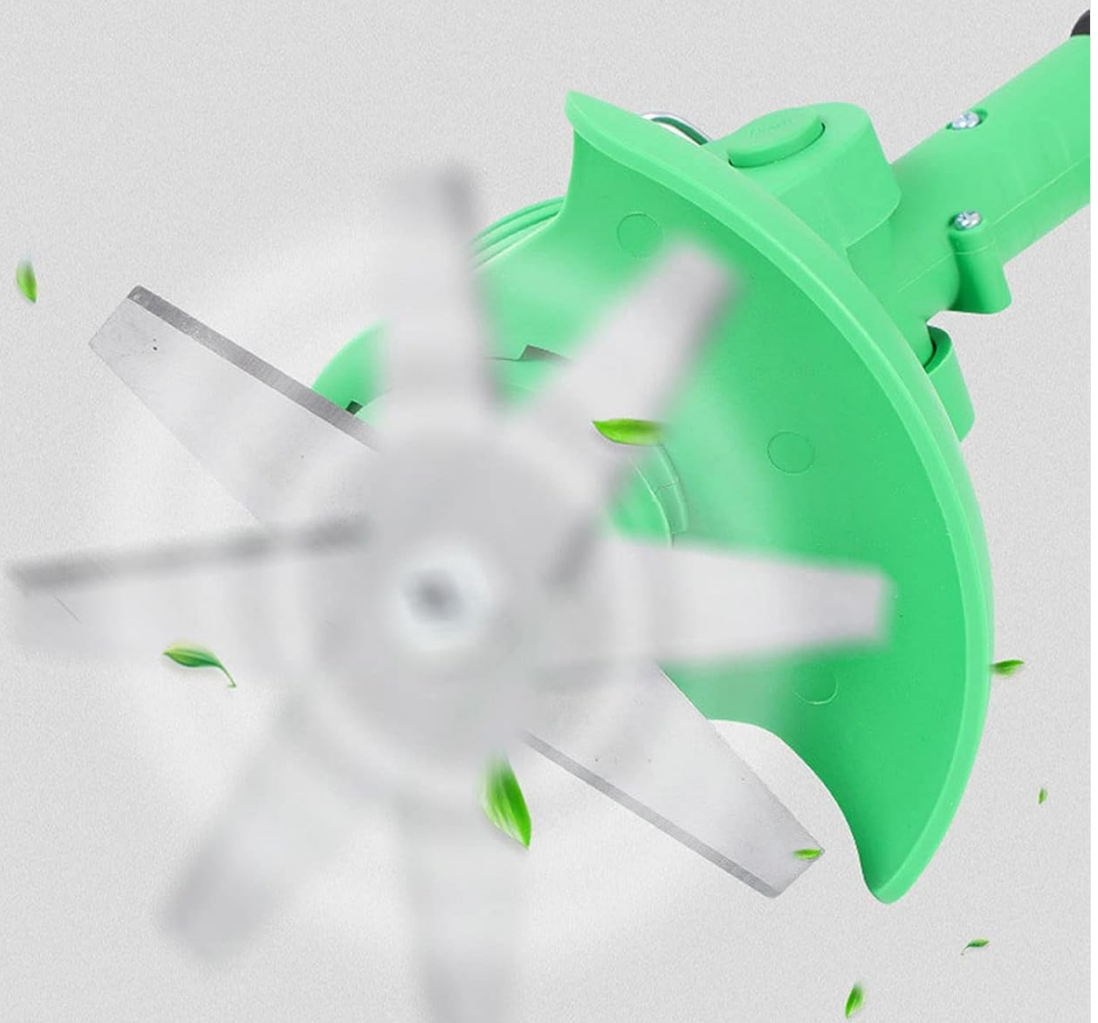


Figure 6: Cutting Head Angle Adjustment

#### 4.4. General Operation Tips

- Hold the trimmer firmly with both hands during operation.
- Maintain a steady pace and avoid forcing the trimmer through dense vegetation.
- Always keep the protective baffle between you and the cutting blade.

Strong power, pure copper motor, power up to 450W, speed up to 6000r/min.



Figure 7: Trimmer in Use

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your trimmer.

### 5.1. Cleaning

1. Always remove the battery before cleaning.
2. Wipe down the trimmer body with a damp cloth.
3. Remove any grass clippings or debris from the cutting head and protective baffle. The low noise head is waterproof and easy to clean.

## 5.2. Blade Replacement

Inspect blades regularly for wear or damage. Replace dull or damaged blades promptly.

1. Ensure the trimmer is off and the battery is removed.
2. Use the provided tools to carefully remove the old blade.
3. Install a new blade, ensuring it is securely fastened.

## 5.3. Battery Care

- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store the battery fully discharged for extended periods.
- Avoid exposing the battery to moisture.

## 6. TROUBLESHOOTING

If you encounter issues with your Suuim Cordless Grass Trimmer, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Trimmer does not start	Battery not charged or improperly inserted	Ensure battery is fully charged and correctly inserted.
Reduced cutting performance	Dull or damaged blade	Replace the blade.
Excessive vibration	Blade improperly installed or damaged	Check blade installation; replace if damaged.
Battery drains quickly	Overworking the trimmer or battery nearing end of life	Avoid continuous heavy use. Consider replacing the battery if it's old.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

Detailed technical specifications for the Suuim Cordless Grass Trimmer.

- **Brand:** Suuim
- **Model:** B0CSNHBQQ5
- **Rated Voltage:** 21V
- **Power:** 650W
- **Battery:** 2000mAh Li-ion battery
- **Cutting Diameter:** 14cm (5.5 inches)
- **Speed:** 18000rpm/min
- **No-load Endurance:** 240 minutes
- **Telescopic Size:** 90-120cm adjustable
- **Power Source:** Battery Powered
- **Assembly Required:** Yes

## 8. WARRANTY AND SUPPORT

---

For warranty information, technical support, or to purchase replacement parts, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details.

Please have your model number (B0CSNHBQQ5) and purchase date available when contacting support.

© 2023 Suuim. All rights reserved.