

[manuals.plus](#) /

› [KAKTIN](#) /

› [KAKTIN Kids Phone User Manual](#)

KAKTIN PH05-03

KAKTIN Kids Phone User Manual

Model: PH05-03

1. INTRODUCTION

Welcome to the KAKTIN Kids Phone user manual. This guide provides detailed instructions on how to set up, operate, and maintain your new kids' smart toy phone. Designed for children aged 3 to 11, this device offers a safe and engaging platform for learning and entertainment with its interactive features and durable design.

2. PRODUCT OVERVIEW

2.1. What's in the Box

- KAKTIN Kids Phone (Pink)
- Unicorn Silicone Protective Case
- USB Charging Cable
- Neck Lanyard
- 8GB Micro SD Card (pre-installed or separate)
- User Manual



Image: KAKTIN Kids Phone with its unicorn case, charging cable, lanyard, and micro SD card.

2.2. Key Features

- **Interactive Touchscreen:** Vibrant 2.8-inch display for easy navigation.
- **Dual Cameras:** Front and rear cameras with 8.0 Megapixels and 1080P video recording capabilities. Features auto-focus and 19 pop photo stickers.
- **Multi-functional Modes:** Includes 12 engaging modes for daily activities (e.g., brushing teeth, washing hands, tidying up) and a painting function.
- **Entertainment Hub:** Video playback, MP3 player, flashlight, timer, alarm clock, calculator, and recorder.
- **Educational Games:** 13 stimulating puzzle games to enhance logical thinking, reaction time, and hand-eye coordination.
- **Music Player:** High-quality speaker and 3.5mm headphone jack for audio enjoyment.
- **Long Battery Life:** Built-in 600mAh battery provides 4-5 hours of continuous use on a single charge.
- **Expandable Storage:** Comes with an 8GB micro SD card to store thousands of photos and music.
- **Safe & Durable Design:** Crafted from non-toxic soft plastic with smooth, rounded edges and a durable silicone case for anti-fall protection.

3. SETUP

3.1. Charging the Device

Before first use, fully charge the KAKTIN Kids Phone. Connect the provided USB charging cable to the phone's charging port and the other end to a standard USB power adapter (not included) or a computer USB port. The battery icon on the screen will indicate charging status. A full charge typically takes approximately 2 hours.

3.2. Inserting the Micro SD Card

The phone comes with an 8GB micro SD card for expanded storage. Locate the SD card slot on the side of the phone (usually under a protective flap). Gently insert the micro SD card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.

3.3. Power On/Off

- **To Power On:** Press and hold the power button (located on the side of the phone) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the power button until a power-off option appears on the screen. Tap to confirm.

4. OPERATING INSTRUCTIONS

4.1. Navigating the Interface

The KAKTIN Kids Phone features a touchscreen interface. Swipe left or right to browse through different app icons. Tap an icon to open the corresponding application.

4.2. Using the Camera

The phone is equipped with dual cameras for photos and videos. Tap the 'Camera' icon to open the camera application. You can switch between front and rear cameras. Use the on-screen button to capture photos or start/stop video recording. Explore the 19 built-in pop photo stickers to add fun effects to your pictures.

19 CREATIVE STICKERS BRING MORE FUN TO YOUR PHOTOS

FRONT AND REAR CAMERAS, SUPPORT FOR SELFIES



FUN STICKERS



Image: Children interacting with the phone's camera feature, applying creative stickers to their photos.

A BIRTHDAY GIFT FOR THE CHILD, A CREATIVE TOOL FOR THE LITTLE PHOTOGRAPHER

GIVE A SPECIAL GIFT TO THE CHILD, ACCOMPANY HIM THROUGH
A DIFFERENT CHILDHOOD



Image: A young girl capturing a moment using the KAKTIN Kids Phone's camera.


4.3. Music Player

Tap the 'Music' icon to access the music player. You can play pre-loaded songs or add your own music files to the SD card. Connect headphones via the 3.5mm jack for private listening.

IMMERSIVE RELAXATION TIME, MAKING EVERY DAY JOYFUL FOR THE CHILD

13 PUZZLE GAMES FOR SELECTION/ENHANCE CHILDREN'S
ATTENTION AND CREATIVITY

FUNNY MUSIC PLAY

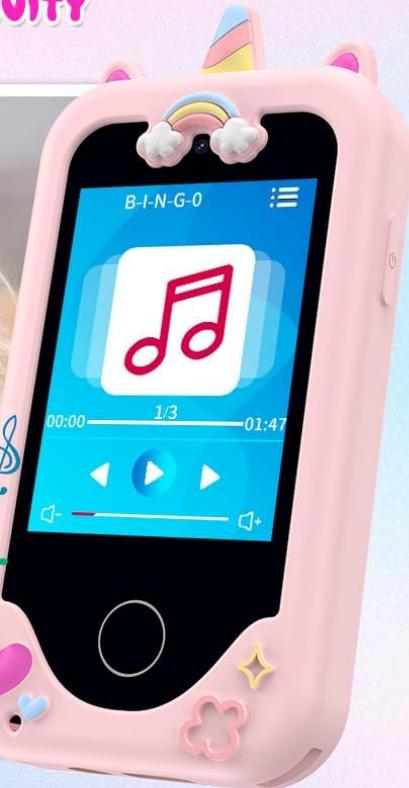

PLAY



GRAFFITI DIY



Image: A child enjoying music through headphones connected to the KAKTIN Kids Phone.

4.4. Educational and Habit Tracking Modes

The phone includes 12 engaging modes designed to encourage positive daily habits and learning. These modes prompt children to follow along with activities such as brushing teeth, washing hands, and tidying up. Additionally, there are learning themes like ABC and country exploration.



Image: The KAKTIN Kids Phone screen showing the habit tracker interface.

MULTIPLE LEARNING THEMES, MAKING CHILDREN ENJOY THE PROCESS

EMPOWER YOUR BABY TO BECOME THEIR OWN TIME
MANAGEMENT MASTER



HOW TO
GET DRESSED

HOW TO
MAKE YOUR BED

HOW TO
GRUSH
YOUR TEETH

HOW TO
WASH
HANDS.

HOW TO
TIE
YOUR SHOES

Image: The KAKTIN Kids Phone screen showing various learning themes and activities.

4.5. Games and Other Applications

Access 13 pre-loaded puzzle games by tapping the 'Game' icon. The phone also features a flashlight, timer, alarm clock, calculator, and a recorder, all accessible via their respective icons on the home screen.

5. MAINTENANCE

5.1. Cleaning

To clean the device, gently wipe the screen and body with a soft, dry, lint-free cloth. Do not use abrasive cleaners, solvents, or aerosol sprays, as these may damage the device.

5.2. Storage

When not in use, store the KAKTIN Kids Phone in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from moisture and dust.

5.3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if it's not in constant use. Do not expose the battery to extreme heat or cold.

6. TROUBLESHOOTING

If you encounter any issues with your KAKTIN Kids Phone, please refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the phone to the charger and try powering it on after a few minutes.
- **Screen unresponsive:** Try restarting the device by holding down the power button until it powers off, then power it back on.
- **SD card not recognized:** Ensure the micro SD card is inserted correctly. Remove and reinsert it. If the issue persists, try formatting the card (this will erase all data on the card).
- **Audio issues:** Check the volume settings. If using headphones, ensure they are fully plugged into the 3.5mm jack.
- **Apps freezing or crashing:** Restart the device. Ensure there is sufficient storage space on the device.

If the problem persists after trying these steps, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	4.13 x 2.36 x 0.47 inches
Item Weight	7 ounces
Model Number	PH05-03
Manufacturer Recommended Age	36 months - 12 years
Batteries	1 Lithium Polymer battery (included)
Manufacturer	KAKTIN

8. WARRANTY AND SUPPORT

8.1. Warranty Information

The KAKTIN Kids Phone comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims. This warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

8.2. Customer Support

For any questions, technical assistance, or warranty inquiries, please contact KAKTIN customer support

through the retailer's platform or the official KAKTIN website. Please have your product model number (PH05-03) and purchase details ready when contacting support.

© 2025 KAKTIN. All rights reserved.