

[Manuals.plus](#) /

› [Paw Patrol](#) /

› Paw Patrol Chase Deluxe Rescue Wheels Vehicle Instruction Manual

Paw Patrol 6070096

Paw Patrol Chase Deluxe Rescue Wheels Vehicle Instruction Manual

Model: 6070096

INTRODUCTION

This manual provides essential information for the safe and proper use of your Paw Patrol Chase Deluxe Rescue Wheels Vehicle. Please read these instructions carefully before use and retain them for future reference. This toy is designed for children aged 3 years and older.



Image: The Paw Patrol Chase Deluxe Rescue Wheels Vehicle, featuring Chase in his police uniform, inside its retail packaging. The vehicle is blue with large wheels, a projectile launcher, and a motorized hook.



Image: Two children, a girl and a boy, smiling and interacting with the blue Chase Deluxe Rescue Wheels Vehicle on a white surface.

WHAT'S INCLUDED

Your package should contain the following items:

- 1 x Paw Patrol Chase Figure
- 1 x Rescue Wheels Vehicle
- 2 x Projectiles



Image: The Paw Patrol Chase Deluxe Rescue Wheels Vehicle, Chase figure, and two green projectiles displayed within the product packaging.

SETUP

1. **Battery Installation:** The vehicle requires 2 AAA batteries. These batteries are included. To install or replace batteries, locate the battery compartment on the underside of the vehicle. Use a small Phillips head screwdriver to open the compartment, insert the batteries according to the polarity indicators (+/-), and secure the cover.
2. **Figure Placement:** Place the Chase figure into the driver's seat of the Rescue Wheels Vehicle. Ensure the figure is seated securely.
3. **Projectile Loading:** Load the two projectiles into their designated storage compartments on the vehicle.



Image: A child's hand placing the Chase figure into the driver's seat of the blue Rescue Wheels Vehicle.

OPERATING INSTRUCTIONS

The Paw Patrol Chase Deluxe Rescue Wheels Vehicle offers several interactive features:

- **Motorized Hook Operation:** The vehicle features a motorized hook at the front. To activate the hook and engage its retraction mechanism, press the designated button on the vehicle. This action also triggers the vehicle's lights and sounds.



Image: The blue Chase vehicle with its yellow motorized tow hook extended from the front bumper.

- **Projectile Launcher:** The vehicle is equipped with a projectile launcher. Load the projectiles into the launcher. To fire, press the button located near the launcher. The vehicle includes two projectiles for repeated play.



Image: The blue Chase vehicle with a green projectile in mid-air after being launched from the top-mounted launcher.

- **Lights and Sounds:** The vehicle features integrated lights and sounds that activate when the motorized hook button is pressed.

MAINTENANCE

- **Cleaning:** Wipe the vehicle and figure with a damp cloth to remove dust and dirt. Do not immerse the toy in water.
- **Battery Care:** If the toy will not be used for an extended period, remove the batteries to prevent leakage. Dispose of used batteries responsibly.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Lights and sounds are not working.	Check if the AAA batteries are correctly installed and not depleted. Replace with new batteries if necessary.
Projectiles are not launching.	Ensure the projectiles are fully loaded into the launcher. Press the launch button firmly.
Motorized hook is not retracting.	Verify that the activation button is pressed. Check for any obstructions preventing the hook's movement.

SPECIFICATIONS

Feature	Detail
Model Number	6070096
UPC	681147017801
Dimensions (L x W x H)	29.2 x 14 x 26.2 cm (11.5 x 5.5 x 10.3 inches)
Weight	1.21 kg (2.67 lbs)
Batteries Required	2 x AAA (included)
Material	Plastic
Recommended Age	36 months - 9 years
Assembly Required	No

SAFETY INFORMATION

For detailed safety guidelines, please refer to the official Safety Information PDF document:
[Download Safety Information \(PDF\)](#)
Always supervise children during play to ensure safe operation of the toy, especially with small parts like projectiles.

WARRANTY AND SUPPORT

This product comes with a limited manufacturer's warranty. For specific details regarding warranty coverage and claims, please refer to the documentation included with your purchase or contact the manufacturer directly.
For further assistance or inquiries, please visit the official Paw Patrol website or contact their customer support.

ADDITIONAL RESOURCES

No relevant product videos were provided in the product data for embedding.
Explore more Paw Patrol products and adventures:

- [Visit the Paw Patrol Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSPBXN3P>

More documents and user manuals: <https://manuals.plus/>