

Hatchimals 6069777

Hatchimals Alive Rainbow Splash Egg Carton

INSTRUCTION MANUAL

Model: 6069777

Introduction

The Hatchimals Alive Rainbow Splash Egg Carton offers an interactive and colorful hatching experience. This set includes five unique Hatchimals characters concealed within color-reveal eggs, along with ten nurturing accessories to enhance imaginative play. The eggs hatch when submerged in water, which changes color to indicate the character inside. This manual provides comprehensive instructions for setting up, operating, and maintaining your Hatchimals Alive Rainbow Splash Egg Carton.

Safety Information

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.
Always supervise children during play, especially when using water. Ensure the play area is easy to clean and protected from water spills.

What's in the Box

- 5 Hatchimals ColLEGGtibles
- 1 Egg Carton (with built-in hatch zone)
- 10 Accessories (5 Pairs of Wings, 5 Nurturing Accessories)
- 1 Checklist
- 1 Instruction Sheet



Image: Contents of the Hatchimals Alive Rainbow Splash Egg Carton, including five eggs, the carton, and various small accessories like wings and nurturing items.

Setup

Follow these steps for the initial setup and hatching process:

1. **Prepare Your Play Area:** Choose a flat, stable surface that is easy to clean. It is recommended to protect the play area from water spills, as the hatching process involves water.
2. **Open the Carton:** Carefully open the sparkly lid of the Hatchimals Alive Rainbow Splash Egg Carton. You will find a built-in hatch zone designed for the eggs.
3. **Place an Egg:** Select one Hatchimals egg and place it securely in the built-in hatch zone. Ensure the egg is stable.
4. **Remove Wings:** Before adding water, gently remove any attached wings from the egg. These will be reattached to the hatched character later.
5. **Add Water:** Slowly fill the hatch zone with water. As the water is added, the egg will begin to react.
6. **Observe Hatching:** In a matter of seconds, the water will change color, indicating the color of the character inside. The egg will then begin to crack, revealing your new Hatchimals friend.

7. **Reveal Character:** Once the egg has fully cracked and the character is visible, you can gently remove the hatched Hatchimal.



Image: Children preparing to hatch a Hatchimals egg by pouring water into the designated hatching zone within the carton.



Image: A sequence of images demonstrating the color reveal eggs, where water changes color as the egg cracks and the Hatchimal character emerges.

Operating

After hatching, your Hatchimals characters are ready for play:

- **Attach Wings:** Each Hatchimal character comes with a pair of wings. Gently attach the appropriate wings to your newly hatched figures.
- **Use Nurturing Accessories:** The set includes 5 nurturing accessories such as a swaddle blanket, rubber ducky, and rattle. Use these accessories to engage in imaginative storytelling and care for your Hatchimals.
- **Display and Transport:** The egg carton can be dried and used to display your collection of Hatchimals characters. Its portable design also allows you to take your characters on-the-go for play anywhere.



Image: A close-up view of a hatched Hatchimal figure, highlighting its detailed design and pose.



Image: Two children interacting with the hatched Hatchimals figures, demonstrating imaginative play scenarios.

Maintenance

Proper care ensures the longevity of your Hatchimals Alive set:

- **Drying the Carton:** After each hatching session, ensure the egg carton is thoroughly dried before storing or displaying the figures. This prevents water damage and maintains hygiene.
- **Cleaning Figures:** If figures become dirty, wipe them gently with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the Hatchimals figures and accessories in the carton or a designated toy storage area to prevent loss and damage.

Troubleshooting

If you encounter any issues with your Hatchimals Alive Rainbow Splash Egg Carton, consider the following:

- **Egg Not Hatching:** Ensure sufficient water is added to the hatch zone and that the egg is fully submerged. Allow a few moments for the reaction to occur.
- **Water Not Changing Color:** The color change is part of the hatching process. If it doesn't occur, ensure the egg is properly placed and water is added.
- **Missing Parts:** Refer to the 'What's in the Box' section and the included checklist. If parts are genuinely missing from a new, unopened package, contact customer support.

Specifications

Feature	Detail
Product Dimensions	9.25 x 4.33 x 2.76 inches
Item Weight	14.1 ounces
Item Model Number	6069777
Manufacturer Recommended Age	3 years and up
Manufacturer	Spin Master
Release Date	June 15, 2024

Warranty and Support

This product is covered by the Spin Master Care Commitment. For full details regarding warranty information, product support, or to address any concerns, please refer to the official Spin Master website or contact their customer service directly. Contact information can typically be found on the product packaging or the manufacturer's official website.

© 2024 Hatchimals. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSPCRBW7>

More documents and user manuals: **<https://manuals.plus/>**