

## DREAMWORKS GABBY'S DOLLHOUSE 6070742

# DREAMWORKS GABBY'S DOLLHOUSE Celebration Dollhouse

Model: 6070742

## INTRODUCTION

---

Welcome to the enchanting world of Gabby's Celebration Dollhouse! This 25-inch tall, rainbow-themed dollhouse offers an immersive play experience with interactive features and various accessories. This manual provides essential information for setting up, operating, and maintaining your dollhouse to ensure hours of imaginative play.

## WHAT'S IN THE BOX

---

Your Gabby's Celebration Dollhouse package includes:

- 1 Gabby's Dollhouse
- 1 Gabby Girl toy figure (3.5-inch)
- Dollhouse furniture and accessories, including:
  - Balloon Arch
  - Kitty-themed Toilet
  - Bathroom Sink
  - Chair
  - Bed
  - Buffet Table
  - Piano/DJ Table
  - Gift Bag
- 2 mystery accessories (toy cake and trophy) inside Dollhouse Deliveries



Image: The Gabby's Dollhouse Celebration Dollhouse with all its components and accessories displayed.

## SETUP INSTRUCTIONS

- 1. Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed items are present.
- 2. Battery Installation:** The dollhouse requires 3 AAA batteries for sound effects. Locate the battery compartment on the underside of the dollhouse, open it with a screwdriver, insert the batteries, and secure the cover.
- 3. Assemble Dollhouse:** The dollhouse is designed for easy assembly. Open the main dollhouse structure to reveal the interior rooms.
- 4. Attach Slide Tower:** Connect the separate slide tower piece to the designated slot on the side of the dollhouse. Ensure it clicks securely into place.
- 5. Place Accessories:** Arrange the dollhouse furniture and accessories within the various rooms as desired.



Image: The dollhouse fully assembled and opened, showcasing its multi-level interior.



Image: The dollhouse in its closed, compact state, ready for storage or transport.

## OPERATING THE DOLLHOUSE

The Gabby's Celebration Dollhouse features several interactive elements for enhanced play:

- **Opening and Closing:** The dollhouse opens and closes like a book, allowing access to its six rooms and rooftop play area. Simply pull the two halves apart to open and push them together to close.
- **Cat-A-Vator (Elevator):** Place the Gabby Girl figure (or other compatible figures) into the Cat-A-Vator. Manually slide the elevator up and down the central pole to move figures between floors.
- **Sound Button:** Press the heart-shaped button located on the floor of the dollhouse to activate 10 different sounds and phrases from the show. Ensure batteries are installed for this feature to work.
- **Dollhouse Delivery Chute:** Insert the Dollhouse Delivery capsules (containing mystery accessories) into the top of the spiral slide tower. Press the heart button on the side of the tower to release the capsule, which will slide down and pop out at the bottom.



Image: Gabby Girl figure positioned on the Cat-A-Vator, ready to move between floors.



Image: A hand inserting a delivery capsule into the top of the spiral chute.

## MAINTENANCE

- **Cleaning:** To clean the dollhouse and its accessories, wipe surfaces with a soft, damp cloth. Do not submerge the dollhouse in water or use harsh chemicals, as this may damage electronic components or painted surfaces.
- **Storage:** When not in use, close the dollhouse to save space and protect the interior. Store in a dry, cool place away from direct sunlight to prevent fading or material degradation.
- **Battery Replacement:** If the sound effects become faint or stop working, it's time to replace the AAA batteries. Refer to the "Setup Instructions" for battery installation.

## TROUBLESHOOTING

- **No Sound/Faint Sound:**  
*Solution:* Check if the batteries are correctly installed. Replace with fresh AAA batteries if necessary. Ensure the on/off switch (located on the bottom of the dollhouse) is in the "on" position.
- **Cat-A-Vator Not Moving Smoothly:**  
*Solution:* Check for any obstructions along the elevator track. Ensure the Gabby figure is properly seated and not catching on any edges.
- **Dollhouse Delivery Capsule Stuck:**  
*Solution:* Ensure the capsule is inserted correctly and the heart button is fully pressed. Check the chute for any foreign objects that might be blocking the path.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	22.13 x 5.38 x 17.13 inches
Item Weight	6.9 pounds
Item Model Number	6070742
Manufacturer Recommended Age	3 years and up
Batteries Required	3 AAA batteries (not included)
Release Date	July 1, 2024
Manufacturer	Spin Master

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Spin Master website. Keep your purchase receipt as proof of purchase.

