

[Manuals.plus](#) /

› [Lenovo](#) /

› [Lenovo WL300 Bluetooth Silent Mouse User Manual](#)

## Lenovo WL300

# Lenovo WL300 Bluetooth Silent Mouse User Manual

Model: WL300 (Part Number: 4Y51N41591)

## INTRODUCTION

The Lenovo WL300 Bluetooth Silent Mouse is designed for professionals seeking a quiet and efficient input device. This mouse features a sculpted grip for comfort, silent left and right clicks, and adjustable DPI settings. It connects wirelessly via Bluetooth 5.0 and supports Microsoft Swift Pair technology for easy device switching.





Image: Top view of the Lenovo WL300 Bluetooth Silent Mouse in white.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert one AA battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover.
5. Turn the mouse ON using the On/Off switch located on the bottom. The indicator light will flash red.

### 2. Bluetooth Pairing

1. Ensure the mouse is powered on.
2. Press and hold the Bluetooth pairing button on the underside of the mouse for 3-5 seconds until the indicator light flashes rapidly. This indicates the mouse is in pairing mode.
3. On your computer or device, open the Bluetooth settings.
4. Search for available devices. The mouse will appear as "Lenovo WL300".
5. Select "Lenovo WL300" to connect. If your device supports Microsoft Swift Pair, the pairing process may be streamlined.
6. Once connected, the indicator light on the mouse will stop flashing.



Image: Step-by-step guide for connecting the Lenovo WL300 mouse via Bluetooth, showing battery installation, pairing button, and device selection.

## OPERATING INSTRUCTIONS

---

### Mouse Functions

- **Left Click:** Primary selection and activation.
- **Right Click:** Accesses contextual menus.
- **Scroll Wheel:** Scrolls content vertically. Pressing the scroll wheel acts as a middle click.
- **Forward Button:** Navigates forward in web browsers or file explorers.
- **Backward Button:** Navigates backward in web browsers or file explorers.
- **DPI Button:** Adjusts cursor sensitivity (DPI).

# Detail



Image: Detailed view of the Lenovo WL300 mouse, labeling the Left Click, Right Click, Scroll Wheel, Scroll Click, Forward, Backward buttons, On/Off Switch, AA Battery Compartment, and Bluetooth Pairing Button.

## DPI Adjustment

The WL300 mouse features a dedicated DPI button to adjust cursor sensitivity on the fly. Press the DPI button to cycle through three sensitivity levels:

- 800 DPI
- 1200 DPI

- 1600 DPI

# Smooth Navigation

Precise Optical Sensor



## 3 Modes

800, 1200, and 1600 DPI

Image: The Lenovo WL300 mouse highlighting its 3 DPI modes: 800, 1200, and 1600.

### Multi-Surface Compatibility

The optical sensor of the WL300 mouse is designed to work effectively on various surfaces, including:

- Wood
- Leather
- Fabric
- Paper
- Resin

# Works With Multi-Surfaces


Resin



Leather



Fabric

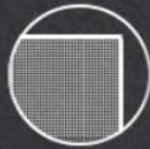

Wood



Paper



Image: The Lenovo WL300 mouse demonstrating its compatibility with multiple surfaces such as resin, leather, fabric, wood, and paper.

## MAINTENANCE

### Battery Replacement

The Lenovo WL300 mouse is powered by one AA battery. When the mouse performance degrades or the indicator light signals low battery, replace the AA battery following the installation steps in the Setup section. To conserve battery life, always turn off the mouse using the On/Off switch when not in use.

## Cleaning

To clean your mouse, gently wipe the exterior with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the surface. Ensure no liquid enters the mouse's internal components.

## TROUBLESHOOTING

- **Mouse not connecting:**
  - Ensure the mouse is powered on and the battery is correctly installed and charged.
  - Verify Bluetooth is enabled on your device.
  - Put the mouse into pairing mode by pressing and holding the Bluetooth pairing button.
  - Remove "Lenovo WL300" from your device's Bluetooth list and attempt to pair again.
  - Try connecting to a different device to rule out an issue with your primary device's Bluetooth.
- **Cursor movement is erratic or unresponsive:**
  - Check the battery level and replace if necessary.
  - Ensure the optical sensor on the bottom of the mouse is clean and free from obstructions.
  - Try using the mouse on a different surface to ensure optimal tracking.
  - Ensure there are no strong wireless interference sources nearby.
- **Buttons are not responding:**
  - Check the battery level.
  - Restart your computer or device.
  - Re-pair the mouse with your device.

## SPECIFICATIONS

<b>Brand</b>	Lenovo
<b>Model Number</b>	WL300 (4Y51N41591)
<b>Connectivity Technology</b>	Bluetooth 5.0
<b>Movement Detection Technology</b>	Optical
<b>DPI Settings</b>	800, 1200, 1600 DPI (Adjustable)
<b>Number of Buttons</b>	5 (Left, Right, Scroll Click, Forward, Backward)
<b>Special Features</b>	Silent Left & Right Click, Sculpted Grip, Microsoft Swift Pair, Lightweight, Portable
<b>Power Source</b>	1 x AA Battery
<b>Average Battery Life</b>	Up to 6 months
<b>Item Weight</b>	3.2 ounces
<b>Product Dimensions (LxWxH)</b>	4.21 x 2.48 x 0.1 inches
<b>Operating System Compatibility</b>	Windows, macOS



4.21"

2.48"

Image: Dimensions of the Lenovo WL300 mouse, showing length (4.21") and width (2.48").

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Lenovo support website. Keep your proof of purchase for warranty claims.

**Lenovo Support Website:** [support.lenovo.com](https://support.lenovo.com)



© 2025 Lenovo. All rights reserved.