

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux Kitchen Assist Stand Mixer E6KM1-4PPT Instruction Manual

Electrolux E6KM1-4PPT

Electrolux Kitchen Assist Stand Mixer

MODEL: E6KM1-4PPT

User Instruction Manual

1. Introduction

Thank you for choosing the Electrolux Kitchen Assist Stand Mixer E6KM1-4PPT. This appliance is designed to simplify your cooking and baking tasks with its powerful planetary mixing action and versatile accessories. Please read this manual carefully before first use to ensure safe and optimal operation.

2. Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Electrolux customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by Electrolux may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter.
- Do not let the cord contact hot surfaces, including the stove.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

3. Product Components

Your Electrolux Kitchen Assist Stand Mixer comes with the following components:

- Motor Unit with Tilt-Head
- 6-Liter Stainless Steel Bowl
- 4-Liter Stainless Steel Bowl
- Dough Hook
- Whisk
- SoftEdgeBeater with integrated silicone spatula
- Cutting Blade (if included with specific model variant)
- Dough Blade (if included with specific model variant)
- PerfectRiseLid for dough proofing
- Splash Guard



Image: Various accessories for the Electrolux Kitchen Assist Stand Mixer, including dough hook, whisk, and SoftEdgeBeater.



Image: The Electrolux Kitchen Assist Stand Mixer shown with both the 6-liter and 4-liter stainless steel bowls, highlighting their versatility.

4. Setup

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the mixer on a clean, dry, and stable surface. Ensure there is enough space around the mixer for safe operation.
3. **Cleaning:** Before first use, wash the bowls, dough hook, whisk, SoftEdgeBeater, and PerfectRiseLid in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
4. **Attach Bowl:** Place the desired stainless steel bowl (6L or 4L) onto the base of the mixer and twist clockwise until it locks securely into place.
5. **Attach Accessory:** Ensure the mixer head is tilted back. Select the appropriate accessory (dough hook, whisk, or

SoftEdgeBeater) for your recipe. Insert the accessory shaft into the attachment hub and twist until it clicks into place.

6. **Lower Head:** Gently lower the mixer head until it locks into the operating position.

5. Operating Instructions

The Electrolux Kitchen Assist Stand Mixer features planetary mixing action for efficient and uniform results, and an integrated LED light for better visibility.



Image: A close-up view of dough being mixed by the dough hook, demonstrating the planetary mixing action for smooth, uniform texture.



Image: The whisk attachment inside the mixing bowl, with the integrated LED light providing clear visibility of the mixing process.

1. **Adding Ingredients:** Add your ingredients to the mixing bowl. For best results, add dry ingredients first, then wet ingredients.
2. **Power On:** Plug the mixer into a suitable electrical outlet (220V).
3. **Select Speed:** Turn the speed control knob to the desired setting. The mixer offers adjustable speed control with 2 main speed settings, allowing you to gradually increase or decrease speed as needed. Start at a low speed to

prevent splashing, then increase as ingredients combine.

- 4. **Mixing:** Allow the mixer to operate until ingredients are thoroughly combined or the desired consistency is achieved. The integrated LED light provides clear visibility of the mixing process.
- 5. **Using the PerfectRiseLid:** For dough proofing, after mixing, remove the mixing accessory and cover the bowl with the PerfectRiseLid. This lid ensures optimal air circulation and humidity, preventing the dough surface from drying out while it rises.



Image: A stainless steel mixing bowl containing rising dough, covered by the PerfectRiseLid to maintain ideal humidity for proofing.

6. Maintenance and Cleaning

Proper maintenance ensures the longevity and performance of your Electrolux Kitchen Assist Stand Mixer.

- **Before Cleaning:** Always unplug the mixer from the power outlet before cleaning.
- **Bowls and Accessories:** The stainless steel bowls, dough hook, whisk, SoftEdgeBeater, cutting blade, dough blade, and PerfectRiseLid are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry immediately.
- **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or scourers. Never immerse the motor unit in water or any other liquid.
- **Storage:** Store the mixer and its accessories in a clean, dry place when not in use.

7. Troubleshooting

If you encounter any issues with your Electrolux Kitchen Assist Stand Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not start.	Not plugged in; power outage; mixer head not fully locked.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. Make sure the mixer head is fully lowered and locked.
Accessory not attaching properly.	Accessory not aligned correctly; debris in attachment hub.	Ensure the mixer head is tilted back. Align the accessory shaft with the hub and twist until it clicks. Clean the attachment hub if necessary.
Dough not mixing evenly.	Too much or too little liquid; incorrect accessory for dough type; ingredients stuck to sides.	Adjust liquid content as per recipe. Ensure you are using the dough hook for heavy doughs. Stop the mixer and scrape down the sides of the bowl with a spatula.

Problem	Possible Cause	Solution
Mixer makes unusual noise or vibrates excessively.	Overloaded; unstable surface; internal issue.	Reduce the amount of ingredients. Ensure the mixer is on a flat, stable surface. If the problem persists, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact Electrolux customer support.

8. Specifications

Feature	Detail
Brand	Electrolux
Model Number	E6KM1-4PPT
Color	Platinum Pearl
Product Dimensions (D x W x H)	38 cm x 24.5 cm x 33 cm
Item Weight	14 Kilograms
Material	Stainless Steel
Container Material	Stainless Steel
Capacity	6 Liters (main bowl), 4 Liters (secondary bowl)
Voltage	220V
Power	50 Watts
Number of Speeds	2
Control Type	Knob
Special Feature	Adjustable Speed Control, Integrated LED Light
Dishwasher Safe	Yes (for removable parts)
Country of Origin	China

9. Warranty and Support

Your Electrolux Kitchen Assist Stand Mixer E6KM1-4PPT is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, spare parts, or warranty claims, please visit the official Electrolux website or contact their customer service department. Keep your proof of purchase for warranty validation.

Online Support: www.electrolux.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSPNF7FX>

More documents and user manuals: <https://manuals.plus/>