

[Manuals.plus](#) /

› [Dtirszy](#) /

› Dtirszy Remote Control for Panasonic Air Conditioner Models A75C3680, A75C3751, A75C2550, A75C4162, A75C4165, A75C2560, A75C3863 Instruction Manual

Dtirszy A75C3680, A75C3751, A75C2550, A75C4162, A75C4165, A75C2560, A75C3863

Dtirszy Remote Control Instruction Manual

For Panasonic Air Conditioner Models: A75C3680, A75C3751, A75C2550, A75C4162, A75C4165, A75C2560, A75C3863

INTRODUCTION

This manual provides instructions for the Dtirszy replacement remote control, designed for use with various Panasonic Air Conditioner models. Please read this manual carefully before using the remote control to ensure proper operation and longevity.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

Important: Do not mix old and new batteries or different types of batteries. Remove batteries if the remote control will not be used for an extended period.



Image: Back of the remote control with the battery compartment open, illustrating where to insert batteries.

2. Initial Use

This remote control does not require any programming or setup. Once batteries are installed, it is ready for immediate use with compatible Panasonic Air Conditioner models.

OPERATING INSTRUCTIONS

To operate your air conditioner, point the remote control directly towards the signal receiving window of the air conditioner unit. Ensure there are no obstructions between the remote and the unit.



Image: Front view of the remote control, displaying all functional buttons.

Button Functions:

- **ON/OFF:** Powers the air conditioner on or off.
- **TEMP ▲/▼:** Adjusts the temperature setting up or down.
- **MODE:** Cycles through operating modes such as Auto, Heat, Cool, and Dry.
- **FAN:** Adjusts the fan speed.
- **TURBO:** Activates or deactivates the turbo cooling/heating function for rapid temperature change.
- **SWING:** Controls the louver swing function for air direction.
- **QUIET:** Activates a low-noise operation mode.
- **TIMER (A/B):** Sets the on/off timer functions.

- **SELECT:** Used for selecting options within timer or other settings.
- **SET/CANCEL:** Confirms or cancels selected settings.
- **AC.RESET/RC.RESET:** Used for resetting the air conditioner or remote control settings, if applicable.

MAINTENANCE

Battery Care:

- Replace batteries when the remote control's response becomes sluggish or the display dims.
- Always remove batteries if the remote control will not be used for a long period (e.g., during off-season) to prevent leakage and damage.

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these may damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly and are not depleted. Replace if necessary.
 - Ensure there is a clear line of sight between the remote control and the air conditioner's receiver. Remove any obstructions.
 - Verify that you are pointing the remote control directly at the air conditioner's signal receiving window.
- **Limited range:**
 - Ensure batteries are fresh. Weak batteries can reduce the remote's effective range.
 - Confirm no strong light sources (like direct sunlight or fluorescent lights) are interfering with the infrared signal.

SPECIFICATIONS

Feature	Description
Brand	Dtirszy
Compatible Devices	Panasonic Air Conditioners (Models: A75C3680, A75C3751, A75C2550, A75C4162, A75C4165, A75C2560, A75C3863)
Connectivity Technology	Infrared
Maximum Range	10 Meters
Controller Type	Air-conditioning
Max Number of Supported Devices	1
Color	Black

UPC	764956981683
-----	--------------

WARRANTY AND SUPPORT

Warranty:

This Dtirszxy remote control comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

Support:

For further assistance or troubleshooting not covered in this manual, please contact the retailer or manufacturer's customer support. Refer to your purchase documentation for specific contact information.

© 2024 Dtirszxy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSPS7W8R>

More documents and user manuals: <https://manuals.plus/>