

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [DJFHDIHRFHBVCASIJ](#) /
- › DJFHDIHRFHBVCASIJ iCleaner-200 Robotic Pool Cleaner User Manual

DJFHDIHRFHBVCASIJ iCleaner-200

DJFHDIHRFHBVCASIJ iCleaner-200 Robotic Pool Cleaner User Manual

1. INTRODUCTION

Thank you for choosing the DJFHDIHRFHBVCASIJ iCleaner-200 Robotic Pool Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new robotic pool cleaner. Please read this manual thoroughly before using the device and retain it for future reference.

2. SAFETY INSTRUCTIONS

- Always disconnect the power supply before performing any maintenance or cleaning on the unit.
- Do not operate the cleaner if the power cable is damaged. Contact customer support for replacement.
- Ensure the power outlet is protected by a Ground Fault Circuit Interrupter (GFCI) or Residual Current Device (RCD).
- Keep children and pets away from the pool area while the cleaner is operating.
- The cleaner is designed for use in swimming pools only. Do not use it for other purposes.
- Do not attempt to repair the cleaner yourself. Refer all servicing to qualified personnel.
- Ensure the cleaner is fully submerged in water before starting operation.

3. PRODUCT OVERVIEW

The DJFHDIHRFHBVCASIJ iCleaner-200 is an advanced robotic pool cleaner designed for comprehensive cleaning of your swimming pool's bottom and walls. It features a 15-meter cable for extensive reach and comes with a trolley cart for easy transport and storage.

Key Features:

- **Automatic Cleaning:** Default mode for hands-free operation.
- **Overall Cleaning:** Cleans both the pool bottom and walls, simultaneously filtering water.
- **Timing Cleaning:** Customizable cleaning cycle duration.
- **Manual Cleaning:** Remote control for targeted cleaning of specific areas.

- **Self-Protection Out of Water:** Impeller stops immediately when removed from water to prevent injury.
- **Stop Protection:** Unit stops if impeller is obstructed.

Components:

- iCleaner-200 Robotic Cleaner Unit
- Control Box (integrated with trolley)
- 15m Power Cable
- Trolley Cart (for models with trolley)
- Remote Control
- Filter Bag (default accuracy: 70um)



Figure 1: The DJFHDIHRFHBVCASIJ iCleaner-200 Robotic Pool Cleaner with its accompanying trolley cart. The cleaner unit is blue and black, featuring large rollers and a handle, connected to a control box mounted on the white trolley.



Figure 2: A close-up view of the DJFHDIHRFHBVCASIJ iCleaner-200 robotic pool cleaner unit. The image highlights the blue body, black rollers, and the top handle, along with the antenna for remote control.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble Trolley (if applicable):** If your model came with a disassembled trolley, follow the separate assembly instructions provided with the trolley. Ensure the control box is securely mounted.
3. **Connect Cable:** Uncoil the 15m power cable and connect it securely to the cleaner unit and the control box. Ensure the connection is tight to prevent water ingress.
4. **Place in Pool:** Gently lower the cleaner into the pool. Allow it to sink to the bottom, ensuring all trapped air escapes. The cleaner must be fully submerged before operation.
5. **Connect to Power:** Plug the control box into a suitable, GFCI/RCD protected electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Automatic Cleaning Mode

When the machine is powered on, the default operating mode is automatic. In this mode, the iCleaner-200 will autonomously clean the pool bottom and walls according to its pre-programmed algorithm.

- Ensure the cleaner is submerged and connected to power.
- Press the 'Power' button on the control box or remote control. The cleaner will begin its automatic cleaning cycle.

5.2 Manual Cleaning Mode

For targeted cleaning of specific areas, use the remote control to switch to manual mode.

- While the cleaner is operating (or after powering it on), use the directional buttons on the remote control. This action will automatically switch the cleaner from automatic to manual mode.
- Guide the cleaner to the desired areas using the remote control.
- To return to automatic mode, stop using the remote control for a period, and the cleaner may revert, or restart the unit.

5.3 Timing Cleaning

You can set a specific cleaning duration for the iCleaner-200.

- Use the remote control to access the timing settings.
- Select the desired cleaning cycle time.
- The machine will operate for the set duration and then automatically shut down.

6. MAINTENANCE

6.1 Cleaning the Filter Bag

Regular cleaning of the filter bag is crucial for maintaining optimal cleaning performance.

1. Disconnect the power supply from the control box.
2. Carefully remove the cleaner from the pool.
3. Open the cleaner unit to access the filter bag.
4. Remove the filter bag. The default accuracy is 70um; other accuracy filter bags may be available separately.
5. Rinse the filter bag thoroughly with a garden hose until all debris is removed.
6. Ensure the filter bag is completely dry before reinserting it into the cleaner unit.
7. Close the cleaner unit securely.

6.2 General Care and Storage

- After each use, rinse the cleaner unit with fresh water to remove any pool chemicals or debris.
- Inspect the power cable for any signs of damage or wear.
- Store the cleaner in a cool, dry place, away from direct sunlight and extreme temperatures.
- If your model includes a trolley, use it for convenient transport and storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cleaner does not start	No power; Cable not connected; Impeller obstructed	Check power connection; Ensure cable is secure; Remove any obstructions from impeller.
Poor cleaning performance	Filter bag is full or dirty; Worn brushes/rollers	Clean the filter bag thoroughly; Inspect and replace brushes/rollers if necessary.
Cleaner gets stuck	Obstruction in pool; Cable tangled	Remove large debris from pool; Untangle cable; Use manual mode to navigate past obstacles.
Cleaner does not climb walls	Filter bag full; Water chemistry imbalance; Worn climbing rings	Clean filter bag; Check and adjust pool water chemistry; Inspect and replace climbing rings if worn.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model:** iCleaner-200
- **Brand:** DJFHDIHRFHBVCASIJ
- **Power Source:** Corded Electric
- **Cable Length:** 15 meters
- **Special Feature:** Self Propelled
- **Filter Accuracy (Default):** 70um
- **Color:** Blue/Black (With Trolley Cart variant)

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your seller directly. For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact the DJFHDIHRFHBVCASIJ customer service department or your authorized dealer.