

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Vari](#) /
- › [Vari Ergo 54x26 Electric Standing Desk User Manual](#)

Vari 402388

Vari Ergo 54x26 Electric Standing Desk User Manual

Model: 402388

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your Vari Ergo 54x26 Electric Standing Desk. Please read this manual thoroughly before use to ensure proper function and safety.



Image: The Vari Ergo 54x26 Electric Standing Desk, featuring a butcher block top and slate-colored legs, set up with dual monitors, keyboard, and mouse.

SAFETY INFORMATION

Adhere to the following safety guidelines to prevent injury and damage to the product:

- Always ensure the desk is properly anchored to the floor if applicable, or placed on a stable, level surface.
- Do not exceed the maximum weight capacity of **200 lbs (90.7 kg)**.
- Exercise caution when adjusting the height of the desk to avoid pinching or crushing hazards. Keep hands and objects clear of moving parts.
- Keep children and pets away from the desk during operation.
- Ensure all cables are managed properly to prevent tripping hazards and damage during height adjustments.

- Do not attempt to disassemble or repair the electrical components yourself. Contact qualified service personnel.

ASSEMBLY INSTRUCTIONS

The Vari Ergo Standing Desk features a quick, two-step assembly process designed for ease of installation. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging. The desk is shipped in two boxes. Ensure all components are present according to the packing list.
2. **Attach Legs:** Position the desktop upside down on a soft, protected surface. Align the desk legs with the pre-drilled slots on the underside of the desktop. Secure the legs using the provided bolts and tools.
3. **Attach Feet:** Secure the feet to the bottom of the desk legs using the remaining bolts and tools.
4. **Install Control Panel:** Slide the control panel into its designated assembly slot. The control panel can be installed on either the right or left side by removing two screws, repositioning, and re-screwing into the pre-drilled holes.
5. **Cable Connections:** Connect the motor cables to the power unit as instructed.
6. **Position Desk:** With assistance, carefully flip the desk upright and place it in its desired location.

Built Strong

This desk has a solid one-piece desktop, 200 lb weight capacity, a durable, easy-to-clean laminate finish, and meets or exceeds BIFMA standards.

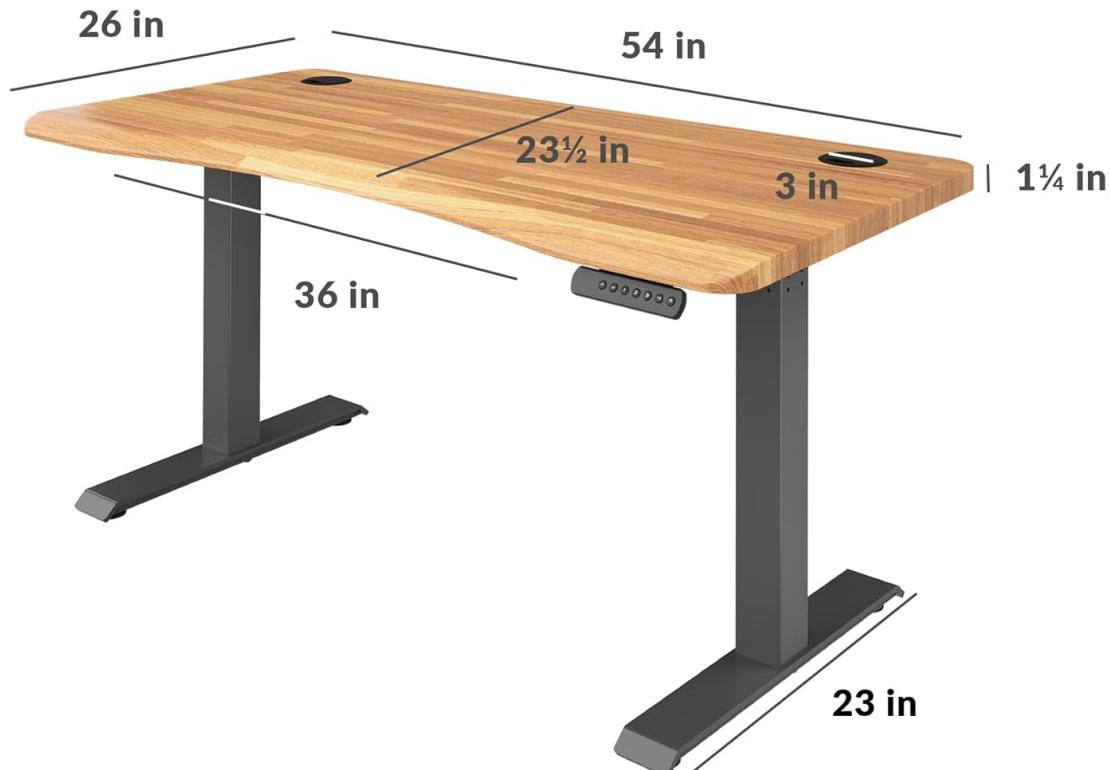


Image: A diagram illustrating the dimensions of the Vari Ergo desk, including its 54-inch width, 26-inch depth, and 1.25-inch tabletop thickness, along with leg span measurements.

OPERATING INSTRUCTIONS

Your Vari Ergo Electric Standing Desk allows for easy height adjustments and programmable memory settings.

Height Adjustment

- Use the **Up** and **Down** arrow buttons on the control panel to smoothly raise or lower the desk to your desired height. The desk operates quietly.
- The height range is from **25 inches to 50.5 inches**, accommodating various user heights.

Memory Settings

The desk features 4 programmable memory settings to save your preferred sitting and standing heights.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the "**M**" button (Memory) on the control panel. The display will flash.
3. Within 3 seconds, press one of the numbered preset buttons **1, 2, 3, or 4** to save the current height to that preset.
4. To recall a saved height, simply press the corresponding numbered preset button. The desk will automatically move to the saved position.

Style & Stability

The modern aesthetic of this standing desk is paired with a steel frame and T-style legs with a three-tier system for steady adjustments between 25" to 50½".

Desk Height Adjusts from 25" to 50 ½"



Image: A visual representation of the Vari Ergo desk's height adjustment range, from its lowest point of 25 inches to its maximum height of 50.5 inches, highlighting the three-tier leg system.


FEATURES

- **Ergonomic Curved Edge Design:** The smooth, rounded waterfall front edge is designed to support better posture and reduce strain on forearms during extended use.



Image: The Vari Ergo desk showcasing its curved, waterfall edge, designed for enhanced comfort and reduced wrist stress.

- **Customizable Height Control:** Electric lift mechanism with 4 programmable memory settings for seamless transitions between sitting and standing positions.
- **Spacious & Sturdy Build:** A 54-inch wide by 26-inch deep surface provides ample space for multiple monitors and accessories. The durable 1.25-inch thick laminate top supports up to 200 lbs (90.7 kg).
- **Built-In Cable Management:** Dual grommets are integrated into the desktop to help organize and conceal wires, maintaining a tidy workspace.

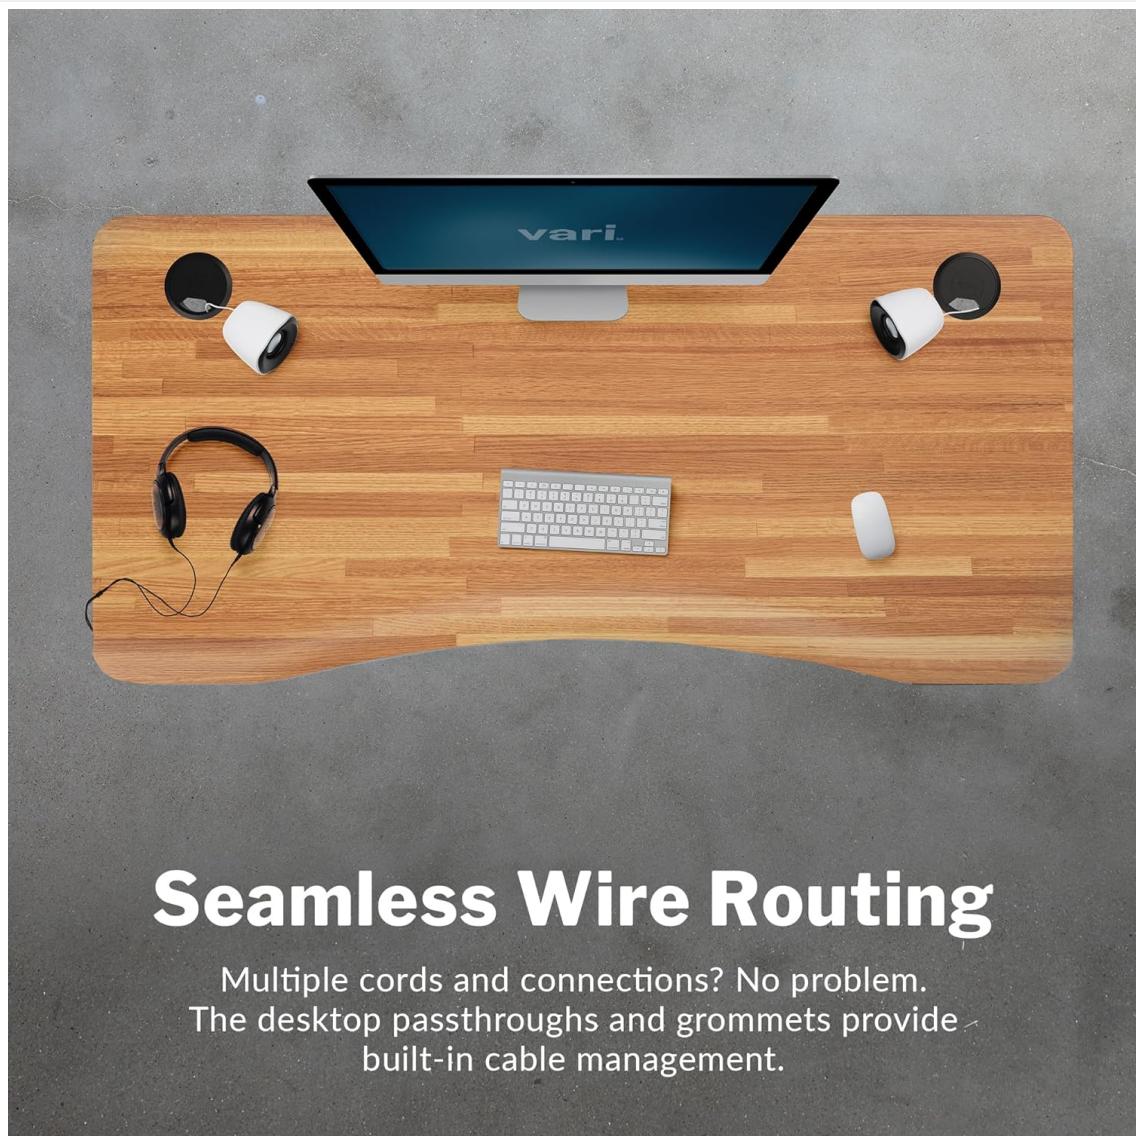

Seamless Wire Routing

Multiple cords and connections? No problem. The desktop passthroughs and grommets provide built-in cable management.

Image: An overhead view of the Vari Ergo desk, highlighting the dual grommets for efficient cable management, keeping the workspace organized.

- **Quick Assembly:** Patented quick-attach system allows for assembly in minutes with minimal tools.

MAINTENANCE

To maintain the appearance and functionality of your Vari Ergo Electric Standing Desk:

- **Cleaning:** Wipe the desktop and legs with a damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Inspection:** Periodically check all bolts and connections to ensure they are secure. Tighten if necessary.
- **Cable Management:** Regularly inspect cables for wear or damage and ensure they are properly routed to prevent interference with desk movement.

TROUBLESHOOTING

If you encounter issues with your Vari Ergo Electric Standing Desk, consider the following common solutions:

- **Desk Not Moving:**

- Check if the power cord is securely plugged into both the desk and a working wall outlet.
- Ensure all motor cables are properly connected to the control box.
- If the desk has been overloaded, remove some weight and try again.

- **Uneven Movement:**

- Verify that the desk is placed on a level surface.
- Ensure no objects are obstructing the legs during movement.

- **Memory Settings Not Working:**

- Re-program the memory settings following the "Operating Instructions" section.

If problems persist, please contact Vari customer support for assistance.

SPECIFICATIONS

Brand	Vari
Model Number	402388
UPC	840194506335
Product Dimensions (D x W x H)	26"D x 54"W x 50.5"H
Minimum Height	25 Inches
Maximum Height	50.5 Inches
Tabletop Thickness	1.25 Inches
Maximum Weight Capacity	200 Pounds (90.7 kg)
Top Material Type	Engineered Wood (Laminate Finish)
Base Material	Alloy Steel
Lifting Mechanism	Electric
Required Assembly	Yes (Includes All Assembly Tools)
Product Weight	85 Pounds (38.5 kg)

WARRANTY AND SUPPORT

Your Vari Ergo Electric Standing Desk is backed by a**Limited Lifetime Warranty**, covering parts and labor for the lifetime of the product.

For warranty claims, technical support, or any questions not addressed in this manual, please contact Vari customer service. Refer to the official Vari website for current contact information.

Online Resources: For additional information and support, visit the official Vari website:www.vari.com

IMPORTANT NOTES

This product may expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.