

ECONTROLLY BP59-00149A

ECONTROLLY BP59-00149A Voice Remote Control User Manual

Compatible with Samsung Monitor TV Models

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY BP59-00149A voice replacement remote control. This remote is designed to be compatible with various Samsung Monitor TV models, offering voice control functionality. Please read this manual carefully before use to ensure proper setup and operation.

Note: This remote control does not work with cable boxes.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA ALKALINE batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Important: Do not use rechargeable batteries. Only use AAA ALKALINE batteries.

2.2 Pairing the Remote Control

This voice remote control requires pairing with your Samsung Monitor TV before use to enable all functionalities, especially voice control.

1. Ensure your Samsung Monitor TV is powered on.
2. Point the remote control towards your TV.

3. Press and hold the **Return** button and the **Play/Pause** button simultaneously for 3 seconds or more.
4. A pairing message should appear on your TV screen, indicating that the remote is connecting.
5. Once paired, the remote control is ready for use.



Figure 1: Front view of the ECONTROLLY BP59-00149A Voice Remote Control, showing button layout.

3. OPERATING INSTRUCTIONS

After successful pairing, the remote control can be used to navigate and control your Samsung Monitor TV.

- **Power Button:** Turns the TV on or off.
- **Voice Control Button:** Press and hold to activate voice commands. Speak clearly into the remote.
- **Navigation Pad (Circular):** Use the directional buttons to move through menus and select items. The center button acts as 'Enter' or 'OK'.

- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Return Button:** Goes back to the previous screen or menu.
- **Home Button:** Accesses the TV's Smart Hub or main menu.
- **Play/Pause Button:** Controls media playback.
- **Quick Access Buttons:** Dedicated buttons for services like Netflix, Samsung TV Plus, Disney+, and Prime Video (availability may vary by region and TV model).



Figure 2: Angled view of the ECONTROLLY BP59-00149A Voice Remote Control.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries with new AAA ALKALINE batteries. Follow the battery installation steps in Section 2.1.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote and the TV.
 - Re-attempt the pairing process as described in Section 2.2.
- **Voice control not working:**
 - Ensure the remote is properly paired with the TV.
 - Speak clearly and hold the remote closer to your mouth when using voice commands.
 - Check your TV's settings to ensure voice control is enabled.
- **Remote does not control cable box:**
 - This remote is designed for Samsung Monitor TVs and is not compatible with cable boxes.

6. SPECIFICATIONS

Model Number	BP59-00149A
Brand	ECONTROLLY
Special Feature	Voice Search
Color	White
Compatible Devices	Samsung Monitor TV (e.g., S32BM80GUN, LS32BM80GUNXGO, S43BM702UN, LS43BM702UNXZA, S32BM80BUN, LS32BM80BUNXGO, S32BM80PUN, LS32BM80PUNXGO, S32BM801UN, LS32BM801UNXGO, BN59-01462A)
Connectivity Technology	Bluetooth
Maximum Range	33 Feet
Battery Type	2 x AAA ALKALINE batteries (not included)
Item Dimensions (L x W x H)	6.03" x 1.55" x 0.56"
Item Weight	50 Grams

7. WARRANTY INFORMATION

This product comes with a 12-month warranty from the date of purchase. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper battery usage.

8. SUPPORT

For further assistance or if you encounter issues not covered in this manual, please refer to the product's listing page or contact the seller directly. Ensure you have your product model number (BP59-00149A) and purchase details ready when seeking support.