

ECONTROLLY Q6/Q650G Series

ECONTROLLY Voice Replace Remote Control User Manual

Model: Q6/Q650G Series

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ECONTROLLY Voice Replace Remote Control. This remote is designed to be compatible with specific QLED HDR 4K Smart TVs from the Q6 and Q650G Series. Please read this manual carefully before using the product to ensure proper functionality and to avoid any issues.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping or subjecting the remote control to strong impacts.
- Keep the remote control away from water or other liquids.
- Do not attempt to disassemble or modify the remote control. This will void the warranty.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x ECONTROLLY Voice Replace Remote Control

Note: Batteries and additional instructions are not included in the package.

4. SETUP

4.1. Battery Installation

The remote control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not supported.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.





Figure 1: Front view of the ECONTROLLY Voice Replace Remote Control. This image shows the layout of the buttons, including the directional pad, volume controls, channel controls, and dedicated app buttons for Netflix, Prime Video, YouTube, and TV Plus.

4.2. Pairing the Remote Control with Your TV

Pairing is required for the remote control to function with your television, especially for voice control features. Follow these steps:

1. Ensure your TV is powered on and in Google TV mode.
2. Hold the remote control within 3 feet (approximately 1 meter) of your television.
3. Simultaneously press and hold the **"HOME"** button and the **"OK"** button on your remote control.
4. Continue holding both buttons until a pairing confirmation message appears on your TV screen.
5. Once paired, the remote control is ready for use.

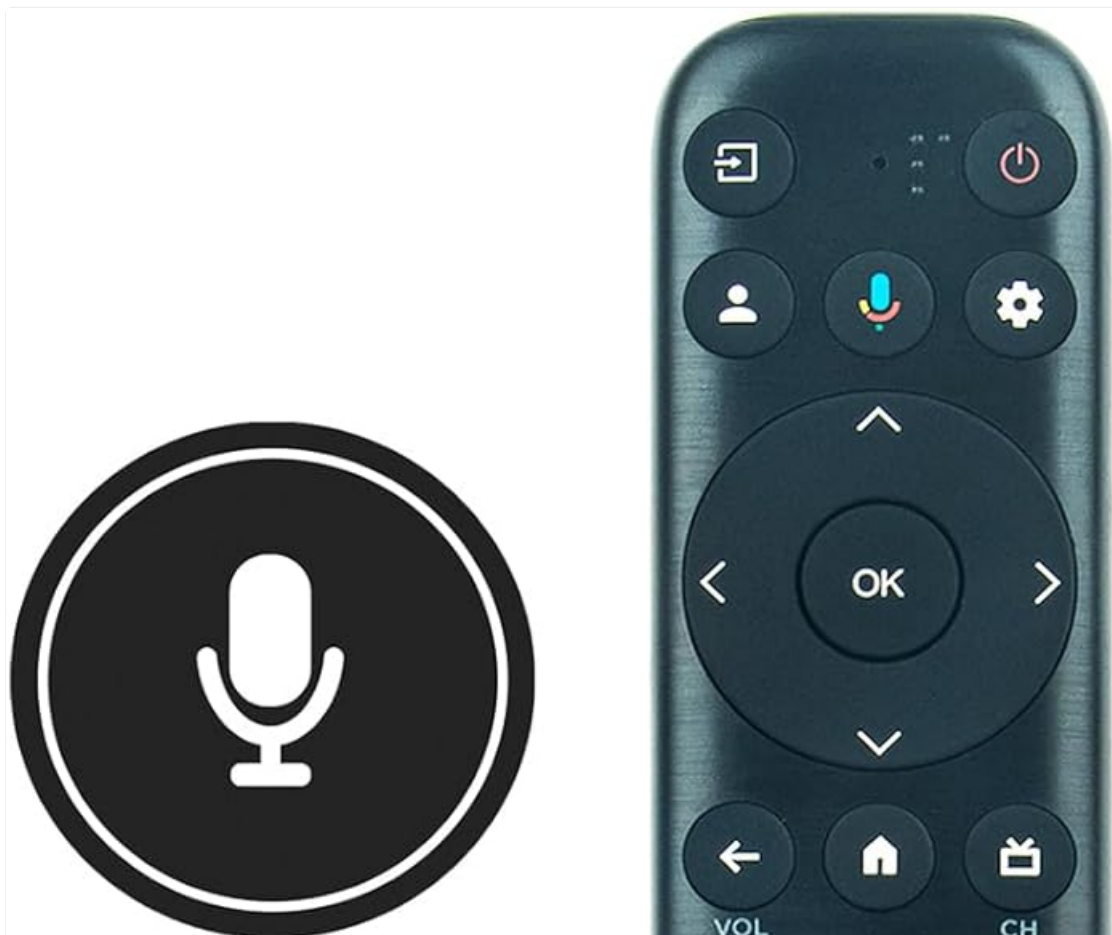




Figure 2: The remote control with the microphone button highlighted, indicating the voice control feature. This button is used to activate voice commands after successful pairing.

5. OPERATING INSTRUCTIONS

5.1. Basic Functions

- **Power Button:** Turns the TV on or off.
- **Directional Pad (Up/Down/Left/Right) & OK Button:** Navigate menus and confirm selections.
- **Volume Up/Down:** Adjust the TV volume.
- **Channel Up/Down:** Change TV channels.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's home screen or main menu.

- **Settings Button:** Opens the TV's settings menu.
- **Dedicated App Buttons:** Quick access to Netflix, Prime Video, YouTube, and TV Plus.

5.2. Voice Control

After successful pairing, you can use the voice control feature:

1. Press the **Microphone Button** (usually located near the top center of the remote).
2. Speak clearly into the microphone on the remote control.
3. Release the button when you have finished speaking.

Examples of voice commands include: "Open Netflix," "Search for action movies," "Change to channel 5," "What's the weather?"



Figure 3: A person holding the remote control, pointing it towards a television setup, demonstrating typical usage. This illustrates the remote's intended application in a home entertainment environment.

6. COMPATIBILITY

This ECONTROLLY Voice Replace Remote Control is compatible with the following QLED HDR 4K Smart TV models from the Q6 and Q650G Series:

- 55Q650G
- 65Q650G
- 75Q650G
- 85Q650G

Ensure your TV model is listed above for guaranteed compatibility.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Low or dead batteries. Incorrect battery orientation. Remote not paired.	Replace batteries with new AAA ALKALINE batteries. Check battery polarity. Re-attempt pairing process (Section 4.2).
Voice control not working.	Remote not paired correctly. Not in Google TV mode. Obstruction between remote and TV.	Ensure remote is paired (Section 4.2). Confirm TV is in Google TV mode. Ensure clear line of sight to the TV.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Gently clean the remote surface with a soft, dry cloth. Do not use liquids.

8. SPECIFICATIONS

- **Brand:** ECONTROLLY
- **Model:** Voice Replace Remote Control
- **Product Dimensions:** 3.94 x 1.57 x 0.59 inches
- **Item Weight:** 1.76 ounces
- **Batteries Required:** 2 x AAA ALKALINE batteries (not included)
- **Special Feature:** Voice Search
- **Color:** Black
- **Compatible Devices:** Television (Q6/Q650G Series QLED HDR 4K Smart TVs)





Figure 4: The ECONTROLLY remote control shown with its approximate dimensions (8.1 inches length, 1.5 inches width) indicated by

green arrows and text. This provides a visual reference for the remote's physical size.

9. MAINTENANCE

- Clean the remote control regularly with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these may damage the surface.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

10. WARRANTY AND SUPPORT

ECONTROLLY strives to provide high-quality products. For any questions, concerns, or technical support regarding your remote control, please refer to the retailer's return policy or contact the seller directly through your purchase platform. Specific warranty details may vary by retailer and region.