

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY BN59-00700A Replacement Remote Control User Manual for Samsung TV Models

ECONTROLLY BN59-00700A

ECONTROLLY BN59-00700A Replacement Remote Control User Manual

For Samsung TV Models

1. INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY BN59-00700A replacement remote control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible Samsung TV.

The BN59-00700A is an infrared remote control designed for immediate use without requiring programming.

2. PRODUCT OVERVIEW

The ECONTROLLY BN59-00700A is a direct replacement remote control for various Samsung TV models. It features a standard button layout for easy navigation and control of your television's functions.





Figure 1: Front view of the ECONTROLLY BN59-00700A remote control. This image displays the full layout of the remote, including power, channel, volume, navigation, and numeric buttons.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Once batteries are installed, the remote control is ready for use. No programming is required.



Figure 2: Angled view of the ECONTROLLY BN59-00700A remote control. This image provides a perspective of the remote's ergonomic design and button placement.

4. OPERATING INSTRUCTIONS

The BN59-00700A remote control functions identically to the original Samsung remote. Point the remote directly at your Samsung TV's infrared receiver.

4.1 Basic Functions

- **Power Button:** Turns the TV on or off.

- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes the TV channel.
- **Mute Button:** Silences or restores TV audio.
- **Source Button:** Selects input sources (e.g., HDMI, AV).
- **Numeric Keypad (0-9):** Directly enters channel numbers.

4.2 Navigation and Menu Functions

- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **Enter/OK Button:** Confirms selections.
- **Menu Button:** Opens the TV's main menu.
- **Return/Back Button:** Returns to the previous screen or menu.
- **Exit Button:** Closes the current menu or application.

Refer to your Samsung TV's original user manual for specific functions of less common buttons, as their behavior is determined by the TV model.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA ALKALINE batteries.
 - Check for any obstructions between the remote and the TV's infrared receiver.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some buttons not working:**
 - This remote is pre-programmed and should work for all listed compatible models. If specific buttons do not function, it may indicate a compatibility issue with your exact TV model or a fault with the remote.
 - Ensure the TV is not in a specific mode (e.g., "Smart Hub" mode might change button functions).

7. SPECIFICATIONS

Model	BN59-00700A
Brand	ECONTROLLY
Compatibility	Samsung TVs (specific models listed below)

Control Type	Infrared (IR)
Power Source	2 x AAA ALKALINE Batteries (not included)
Dimensions (L x W x H)	3.94 x 1.57 x 0.59 inches (approx.)
Weight	1.76 ounces (without batteries)
Special Feature	Pre-programmed, no setup required

8. COMPATIBLE SAMSUNG TV MODELS

This ECONTROLLY BN59-00700A replacement remote control is compatible with the following Samsung TV models:

- LN46A860S2FXZA
- LN46A850S1FXZA
- LN52A860S2FXZA
- LN52A850S1FXZA
- LN46A950D1F
- LN55A950D1F
- LN46A950D1FXZA
- LN55A950D1FXZA
- LN46A850
- LN55A950
- LN52A860
- LN52A860S2F
- LN46A850S1F
- LN46A860S2F
- LN52A850S1F
- LN46A950
- N46A860
- LN52A850

If your TV model is not listed, please verify compatibility before use.

9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support for the ECONTROLLY BN59-00700A remote control was not provided in the product details. For warranty claims or technical assistance, please refer to the seller's return policy or contact the manufacturer directly through their official channels.