

ECONTROLLY EN2J36H

ECONTROLLY EN2J36H Replacement Remote Control User Manual

Model: EN2J36H | Brand: ECONTROLLY

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY EN2J36H replacement infrared remote control. This remote is designed to be compatible with various Hisense 4K ULED LED LCD TV models, offering a straightforward, pre-programmed solution for controlling your television.

The EN2J36H remote control operates using infrared technology and does not require any programming or pairing. Simply insert the batteries, and it is ready for use with compatible Hisense TV models.

2. PRODUCT OVERVIEW

The ECONTROLLY EN2J36H remote control features a standard layout for easy navigation and control of your Hisense television. Key buttons include power, input selection, volume control, channel navigation, and dedicated buttons for popular streaming services.





Figure 2.1: Front view of the ECONTROLLY EN2J36H remote control, showing all buttons including power, input, navigation, volume, channel, and app shortcuts.



Figure 2.2: Angled view of the ECONTROLLY EN2J36H remote control, highlighting its ergonomic design and button placement.



Figure 2.3: A different angled perspective of the ECONTROLLY EN2J36H remote control, showcasing the full button array from a side angle.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Important: Do not use rechargeable batteries. Only use AAA ALKALINE batteries for optimal performance

and to prevent damage to the remote control.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

The ECONTROLLY EN2J36H remote control is pre-programmed and ready for immediate use with compatible Hisense TV models. Point the remote directly at your television's infrared receiver for best performance.

- **Power Button ():** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Volume Up/Down (VOL +/-):** Adjusts the television's volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Navigation Pad (▲ ▼ ◀ ▶ OK):** Used to navigate menus and select options.
- **Back (↶):** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Home (△):** Accesses the TV's smart home screen or main menu.
- **Mute ():** Mutes or unmutes the TV audio.
- **Subtitle:** Toggles subtitles on/off.
- **Text:** Accesses teletext or similar text-based services.
- **Info:** Displays information about the current program or input.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **Guide:** Opens the electronic program guide.
- **CH.LIST:** Displays the channel list.
- **App Shortcut Buttons (e.g., NETFLIX, YouTube, Plex, VIDAA TV):** Provide direct access to specified streaming applications.

4.2 Compatible Hisense TV Models

This remote control is compatible with the following Hisense 4K ULED LED LCD TV models:

- 65U7HQ
- 55U8HQ
- 55U8HAU
- 65U8HQ
- 75U8HAU
- 55E7HQ
- 65U8HAU
- 50E77HQ
- 55E77HQ

Note: This list may not be exhaustive. If your Hisense TV model is not listed but uses a similar remote, it may still be compatible.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with

water. Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's surface or internal components.

5.2 Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Replace all batteries at the same time. Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

6. TROUBLESHOOTING

6.1 Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with fresh AAA ALKALINE batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor. The remote requires a clear line of sight to operate.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet or 6 meters).
- **TV Compatibility:** Verify that your Hisense TV model is listed as compatible. While this remote is pre-programmed, it is designed for specific models.

6.2 Intermittent Operation

- Weak batteries can cause intermittent operation. Replace them with new AAA ALKALINE batteries.
- Ensure the TV's infrared sensor is clean and not covered.

7. SPECIFICATIONS

Feature	Detail
Model	EN2J36H
Brand	ECONTROLLY
Compatibility	Hisense 4K ULED LED LCD TVs (Specific models listed in Section 4.2)
Connectivity Technology	Infrared (IR)
Programming Required	No (Pre-programmed)
Power Source	2 x AAA ALKALINE Batteries (not included)
Product Dimensions	3.94 x 1.57 x 0.59 inches (10 x 4 x 1.5 cm)
Item Weight	1.76 ounces (50 grams)

8. WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your ECONTROLLY EN2J36H remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty terms and contact information.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSRWQVGW>

More documents and user manuals: <https://manuals.plus/>