



[Manuals.plus](#) /

> [JISOWA](#) /

> JISOWA Replacement Remote Control Instruction Manual for Samsung Smart TVs

JISOWA BN59-01315A, BN59-01315J, BN59-01315E, BN59-01315B

JISOWA Replacement Remote Control for Samsung Smart TVs

Instruction Manual

1. INTRODUCTION

This manual provides instructions for the JISOWA replacement remote control, designed for use with a wide range of Samsung Smart TVs. This remote is pre-programmed and requires no additional setup or pairing for most compatible models. Simply insert batteries to begin use.



Image: Front, back, and side views of the JISOWA replacement remote control, showcasing its ergonomic design and button layout.

2. PACKAGE CONTENTS

- 1 x JISOWA Replacement Remote Control
- **Note:** 2 x 1.5V AAA Batteries are **NOT** included and must be purchased separately.

3. SETUP INSTRUCTIONS

The JISOWA replacement remote control is designed for immediate use with compatible Samsung Smart TVs. No programming or pairing is typically required.

1. **Open the Battery Compartment:** Locate the battery compartment on the back of the remote control. Slide the cover downwards to open it.
2. **Insert Batteries:** Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. **Close the Battery Compartment:** Slide the battery cover back into place until it clicks securely.
4. **Test the Remote:** Point the remote control towards your Samsung Smart TV and press the Power button. The TV should respond.



Image: The JISOWA remote control, with an inset showing the back of the remote and two AAA batteries, illustrating the battery insertion process.

Remote Control for **Samsung** Smart TVs

No Setup Required

No Programming or Pairing Required.



Long-distance Control

Transmission Singal Range is father than 40 ft.

Image: The JISOWA remote control shown with its physical dimensions (6.7 inches length, 1.57 inches width, 0.8 inches thickness) and a clear indication that no setup is required.

4. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your JISOWA replacement remote control.

Using the remote



Power Button (⏻): Turn on/off TV

SOURCE: Displays and selects the available video sources

CH LIST: Accesses to the saved channels list

PRE-CH: Returns to the previous channel

VOL +/-: Accesses to volume

CH +/-: Accesses to channels

MUTE: Cuts off the sound temporarily

CHLIST: Displays channel lists on the screen

NETFLIX: Accesses to "NETFLIX"

prime video: Accesses to "INTERNET"

hulu: Accesses to "hulu"

HOME: Press to access the SM home dashboard or hold it down to access your most recently used apps, as well as any notifications

GUIDE: Displays and Electronic Program Guide

RETURN: Return to the previous menu

EXIT: Exits the menu

COLOR BUTTONS: ([A]RED / [B]GREEN / [C]YELLOW / [D]BLUE):
Shortcut keys for interactive functionst

INFO: Displays information on the TV screen

Image: A detailed diagram of the JISOWA remote control, highlighting each button and its corresponding function, such as Power, Source, Volume, Channel, and dedicated app buttons.

Power Button (⏻): Turns the TV on or off.

SOURCE: Displays and selects available video input sources (e.g., HDMI 1, AV, TV).

Number Buttons (0-9): Directly enter channel numbers.

PRE-CH: Returns to the previously viewed channel.

VOL +/-: Adjusts the volume level.

CH +/-: Changes channels up or down.

MUTE: Temporarily mutes or unmutes the TV sound.

CH LIST: Displays the channel list on the screen.

NETFLIX: Direct access to the Netflix application.

Prime Video: Direct access to the Prime Video application.

Hulu: Direct access to the Hulu application.

Home Button (⏠): Press to access the Smart Hub home dashboard or hold down to access your most recently used apps and notifications.

GUIDE: Displays the Electronic Program Guide (EPG).

Directional Pad (Up, Down, Left, Right) & Enter: Navigate menus and confirm selections.

RETURN: Returns to the previous menu or screen.

EXIT: Exits the current menu or application.

Color Buttons (A, B, C, D): Provide shortcut functions depending on the TV application or menu.

SETTINGS: Accesses TV settings menu.

INFO: Displays information about the current program or input.

CC/VD: Activates Closed Captions or Video Description.

Playback Controls (Rewind, Play/Pause, Fast Forward, Stop): Control media playback.

5. COMPATIBILITY

This JISOWA replacement remote control is compatible with a wide range of Samsung Smart TV models, including but not limited to:

- Samsung Neo QLED, Ultra HD (UHD), LED, HDR Smart TVs
- Specific models such as UN50RU7200FXZA, UN58RU710DFXZA, UN75RU7100FXZA, UN50TU700DFXZA, UN70TU7000FXZA, UN40JU650DFXZA, UN43NU710DFXZA, UN50NU6900BXZA, UN55JU650DFXZA, and many others listed in the product description.
- Remote control model numbers: BN59-01315A, BN59-01315J, BN59-01315E, BN59-01315B.

Note: While this remote is broadly compatible, specific button functions (e.g., dedicated app buttons) may only work if your TV's original remote control also featured those functions or if the TV supports them.



Image: The JISOWA remote control positioned in front of a collage of various Samsung TV screens, visually representing its wide compatibility with different Samsung Smart TV series.

6. PRODUCT FEATURES

- **Pre-Programmed:** Ready to use out of the box; no complex setup or pairing required.
- **Ergonomic Design:** Comfortable to hold and operate, designed for ease of use.
- **Durable Construction:** Made from new ABS material, ensuring environmental friendliness and longevity.
- **Quick Response:** Features an upgraded smart chip for fast and reliable command execution.
- **Dedicated App Buttons:** Includes shortcut keys for popular streaming services like Netflix, Prime Video, and Hulu.
- **Long-Distance Control:** Offers a transmission signal range exceeding 40 feet.

Product Features



New upgraded smart chip.

Quick response, easy to use.

Special soft plastic buttons.

Feel comfortable.



Ergonomic design

Comfortable to hold, agile to operate.



New ABS material

Environmentally

Durable

Quality assurance



Image: The JISOWA remote control with graphical callouts emphasizing its key features: a new upgraded smart chip for quick response, special soft plastic buttons for comfort, ergonomic design, and durable, environmentally friendly ABS material.



Sensitive & Durable



Signal stabilization



Precise Control



No Programming



Image: The JISOWA remote control overlaid with a graphic representing its internal smart chip, accompanied by icons and text indicating sensitive and durable operation, signal stabilization, precise control, and no programming requirement.

7. MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new 1.5V AAA batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact to prevent damage.

8. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new 1.5V AAA batteries.
- Check for any obstructions between the remote and the TV's infrared receiver.
- Ensure the remote is pointed directly at the TV.

- **Specific app buttons (Netflix, Prime Video, Hulu) not working:**

- These buttons function as shortcuts. If your TV's original remote did not have these specific buttons, or if your TV model does not support direct access to these apps via a dedicated button, the function may not work.
- Ensure your TV is connected to the internet and the apps are installed and updated.

- **Limited range:**

- Replace batteries.
- Ensure there are no strong light sources or electronic devices interfering with the infrared signal.

9. SPECIFICATIONS

Brand	JISOWA
Compatible Devices	Samsung Smart Televisions
Model Numbers (Remote)	BN59-01315A, BN59-01315J, BN59-01315E, BN59-01315B
Power Source	2 x 1.5V AAA Batteries (not included)
Product Dimensions	6.7 x 1.57 x 0.8 inches
Item Weight	1.76 ounces
Color	Black
Special Features	Ergonomic, No Programming Required, Pre-Programmed

10. WARRANTY AND SUPPORT

For any defective remote control, please contact the seller directly for assistance. The seller aims to provide a suitable solution within 1 business day.

Please refer to your purchase documentation or the seller's contact information for specific warranty details and support procedures.