

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY G10 Voice Remote Control Instruction Manual for MECOOL KM7 Plus S905Y4 Android TV Box

ECONTROLLY G10 Voice Remote Control, S905Y4

ECONTROLLY G10 Voice Remote Control Instruction Manual

For MECOOL KM7 Plus S905Y4 Android TV Box

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ECONTROLLY G10 Voice Remote Control. This remote is designed as a replacement and is compatible with the MECOOL KM7 Plus S905Y4 Android TV Box.

The G10 Voice Remote Control features intuitive button layouts and integrated voice control functionality, enhancing your navigation and interaction with your compatible Android TV Box.





Image 1.1: Front view of the ECONTROLLY G10 Voice Remote Control, showing all buttons including the directional pad, voice assistant button, and dedicated app buttons.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align

correctly with the markings inside the compartment.

4. Close the battery compartment cover securely.

Important: Only use AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or could damage the remote control.

2.2 Pairing the Remote Control

The G10 Voice Remote Control requires pairing with your MECOOL KM7 Plus S905Y4 Android TV Box to enable full functionality, especially the voice control feature. The specific pairing procedure may vary slightly depending on your TV Box's firmware version.

Generally, the pairing process involves:

1. Ensure your Android TV Box is powered on and functioning.
2. Navigate to the **Settings** menu on your Android TV Box (usually accessible via the existing remote or on-screen navigation).
3. Look for options such as **Bluetooth**, **Connected Devices**, **Remotes & Accessories**, or similar.
4. Select the option to **Add new device** or **Pair remote**.
5. Follow the on-screen instructions. This typically involves pressing and holding specific buttons on the G10 remote (e.g., the Home button and Back button simultaneously, or a dedicated pairing button if present) until an indicator light on the remote flashes, signifying it is in pairing mode.
6. Once the G10 remote appears in the list of discoverable devices on your TV Box screen, select it to complete the pairing process.

If you encounter difficulties, refer to the user manual provided with your MECOOL KM7 Plus S905Y4 Android TV Box for precise pairing instructions.

3. OPERATING INSTRUCTIONS

3.1 Button Functions

Familiarize yourself with the layout and function of each button on your G10 Voice Remote Control:



Image 3.1: Angled view of the ECONTROLLY G10 Voice Remote Control, illustrating button placement.

- **Power Button (⏻):** Turns the Android TV Box on or off.
- **Voice Assistant Button (🎤):** Activates the voice control feature. Press and hold to speak commands.
- **Navigation Pad (Circular Ring):** Use the up, down, left, and right directions to navigate menus and select items.
- **OK/Select Button (Center of Nav Pad):** Confirms selections or opens items.
- **Back Button (←):** Returns to the previous screen or menu.
- **Home Button (🏠):** Returns to the main home screen of the Android TV Box.
- **Volume Up/Down Buttons (+/-):** Adjusts the audio volume.
- **Mute Button (🔇):** Mutes or unmutes the audio.
- **App Shortcut Buttons (YouTube, Netflix, prn video, Disney):** Provides direct access to these streaming applications.

3.2 Voice Control

To use the voice control feature:

1. Ensure the remote is successfully paired with your Android TV Box.
2. Press and hold the **Voice Assistant Button**.
3. While holding the button, speak your command clearly into the microphone located at the top of the remote.
4. Release the button once you have finished speaking.

Examples of voice commands include: "Open Netflix," "Search for action movies," "Play [movie title]," "What's the weather?"

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, use a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's performance degrades or if it stops responding. Always replace both AAA batteries at the same time with new alkaline batteries. Do not mix old and new batteries or different types of batteries.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage and potential damage to the remote control.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and have sufficient charge. Replace with fresh AAA alkaline batteries if necessary.
- **Re-pair Remote:** If the remote was previously working but stopped, try re-pairing it with your Android TV Box following the instructions in Section 2.2.
- **Obstruction:** Ensure there is no obstruction between the remote and the Android TV Box.
- **Distance:** Make sure you are within the effective operating range of the TV Box.

5.2 Voice Control Not Working

- **Pairing Status:** Voice control requires the remote to be properly paired via Bluetooth. Verify pairing status in your TV Box's settings.
- **Microphone Obstruction:** Ensure the microphone hole at the top of the remote is not covered or blocked.
- **Speak Clearly:** Speak directly into the microphone in a clear, moderate voice.
- **Hold Button:** Remember to press and hold the Voice Assistant button while speaking your

command.

- **TV Box Settings:** Check the Android TV Box's settings for any voice input or assistant configurations that might be disabled.

6. SPECIFICATIONS

- **Product Dimensions:** 3.94 x 1.57 x 0.59 inches
- **Item Weight:** 1.76 ounces
- **Batteries Required:** 2 AAA batteries (Alkaline recommended)
- **Special Feature:** Voice Control
- **Compatible Devices:** MECOOL KM7 Plus S905Y4 Android TV Box
- **Color:** Black

7. WARRANTY AND SUPPORT

For warranty information or technical support regarding your ECONTROLLY G10 Voice Remote Control, please refer to the documentation provided at the time of purchase or contact the seller/manufacturer directly. Keep your purchase receipt as proof of purchase.