

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [yorraka](#) /

› [yorraka Electric Spin Scrubber Cordless Model C2 Instruction Manual](#)

yorraka C2

yorraka Electric Spin Scrubber Cordless Instruction Manual

MODEL: C2

1. Introduction

Thank you for choosing the yorraka Electric Spin Scrubber Cordless. This device is designed to simplify your cleaning tasks with its powerful motor, versatile brush heads, and ergonomic design. Please read this manual carefully before use to ensure proper operation, maintenance, and safety.

2. Safety Information

- **Do not immerse the entire machine in water.** The main unit is IPX7 waterproof, meaning it can withstand splashes and brief immersion, but prolonged submersion should be avoided.
- Keep the device out of reach of children and pets.
- Ensure the power adapter (not included) meets the specified voltage requirements (7.4V DC).
- Do not operate the scrubber if any part is damaged. Contact customer support for assistance.
- Always use appropriate brush heads for the surface being cleaned to prevent damage.
- Avoid applying excessive pressure, as this may reduce motor efficiency or damage the unit.

3. Package Contents

Verify that all items listed below are included in your package:

- 1 x Electric Spin Scrubber Main Unit
- 1 x Extension Handle
- 1 x Wall Hook
- 1 x USB-C Charging Cable (Note: Charger not included)

- 9 x Replaceable Brush Heads (various types)



Image: Overview of the yorraka Electric Spin Scrubber and its complete set of accessories, including the main unit, extension handle, charging cable, wall hook, and all nine brush heads.

4. Product Features

- **Powerful Motor & All-Metal Gears:** Equipped with high-speed motor and durable all-metal internal gears, providing consistent power for stubborn stains. Offers two speed settings.
- **Two Speed Settings:** Low speed at 350 RPM and High speed at 450 RPM for varying cleaning needs.
- **9 Replaceable Brush Heads:** A comprehensive set of anti-wear PP bristles and soft material pads for diverse cleaning tasks.
- **Extendable Long Handle:** Adjustable to three lengths (9.4 inches, 39.3 inches, 47.3 inches) for comfortable reach without bending or stretching.
- **Fast Charging & Long Working Time:** Fully charges in approximately 2 hours via USB Type-C, providing up to 90 minutes of continuous operation.
- **Cordless Design:** Enhances portability and ease of use in various locations.

- **IPX7 Waterproof Rating:** The main unit is designed to resist water splashes and brief immersion.
- **Lightweight Design:** Weighs approximately 2 pounds for easy maneuverability.



Image: Diagram illustrating the powerful motor and its two speed settings: Low (350 RPM) and High (450 RPM).



Image: The scrubber demonstrating its three adjustable lengths, ranging from a compact 9.4 inches to an extended 47.3 inches, with detail on the locking mechanism.

5. Setup

5.1 Assembly

1. **Attach a Brush Head:** Align the desired brush head with the rotating shaft on the main unit and press firmly until it clicks into place.
2. **Attach Extension Handle (Optional):** If using the extension handle, align it with the main unit and twist to secure. Adjust the length by twisting the locking collar, extending the pole, and twisting back to lock.

5.2 Charging the Battery

Before first use, fully charge the scrubber. A full charge takes approximately 2 hours.

1. Connect the USB-C charging cable to the charging port on the scrubber.
2. Connect the other end of the USB-C cable to a compatible USB power adapter (not included).
3. The indicator lights on the handle will illuminate to show charging status. All lights will be solid when fully charged.

charged.

4. Disconnect the charging cable once fully charged.



Image: The scrubber's handle connected to a power adapter for charging, with illuminated battery indicator lights.

6. Operating Instructions

6.1 Power On/Off and Speed Adjustment

- Press the power button once to turn on the scrubber at the low speed setting (350 RPM).
- Press the power button a second time to switch to the high speed setting (450 RPM).
- Press the power button a third time to turn off the scrubber.

6.2 General Usage Tips

- Apply a suitable cleaning solution to the surface or directly to the brush head before scrubbing.
- Start with the low speed for lighter cleaning or delicate surfaces, and switch to high speed for tougher stains.
- Move the scrubber slowly and steadily over the surface. Avoid pressing down too hard.
- For optimal results, allow the scrubber's rotation to do the work.

7. Brush Head Guide

The yorraka Electric Spin Scrubber comes with 9 different brush heads, each designed for specific cleaning tasks:

Make Housework Easier!

Say goodbye to sore knees
arms and aching back




Image: A visual representation of all nine interchangeable brush heads included with the scrubber.

- **Wide Flat Brush:**



Ideal for large flat areas such as floors and tiles.

- **Dome Brush:**

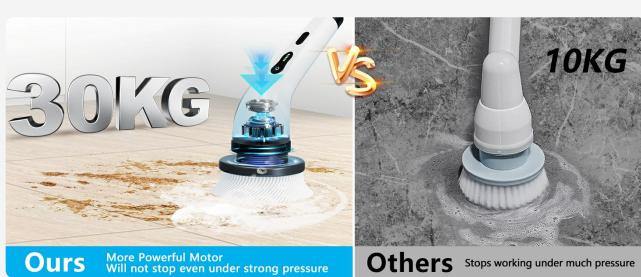

Suitable for curved surfaces like bathtubs and toilets.

- **Flat Brush:**



Designed for small flat areas, stoves, and sinks.

- **Corner Brush:**



Effective for crevices, tile grout, corners, and wheels.

- **Fibre Sponge:**



For oily areas, kitchenware, and stoves.

- **Coral Mop:**



Suitable for windows, car glass, tiles, and ceilings.

- **Large Coral Mop:**



Ideal for large areas such as swimming pools.

- **Wool Cloth:**



For car paint and leather furniture, suitable for polishing or gentle cleaning.

- **Sponge Pad:**



For waxing or cleaning of leather furniture.

8. Maintenance

8.1 Cleaning the Scrubber

- After each use, remove the brush head and rinse it thoroughly under running water.
- Wipe the main unit and handle with a damp cloth. Do not use abrasive cleaners or immerse the entire unit in water.
- Ensure all parts are dry before storing.

8.2 Storage

- Store the scrubber in a cool, dry place, away from direct sunlight and extreme temperatures.
- Use the provided wall hook for convenient storage.

8.3 Battery Care

- To prolong battery life, avoid completely draining the battery before recharging.
- If the scrubber will not be used for an extended period, charge it periodically (e.g., every 3 months) to maintain battery health.

9. Troubleshooting

- **Scrubber does not turn on:** Ensure the battery is fully charged. If the issue persists, contact customer support.
- **Reduced scrubbing power:** Check if the brush head is clogged with debris. Clean or replace the brush head. Ensure the battery is adequately charged.
- **Brush head detaches during use:** Ensure the brush head is securely attached and clicked into place.
- **Short battery life:** Ensure the unit is fully charged before use. Battery performance may decrease over time with repeated charging cycles.

10. Specifications

Brand	yorraka
Model Number	C2
Color	Whiteblack
Material	Plastic (Handle: Stainless Steel)
Product Dimensions	17.3" L x 6.7" W x 2.8" H (Compact)
Item Weight	2 Pounds
Motor Speeds	Low: 350 RPM, High: 450 RPM
Battery	7.4V DC High Voltage Battery (3000mAh)
Charging Time	Approx. 2 hours
Working Time	Up to 90 minutes
Waterproof Rating	IPX7 (Main Unit)
Number of Brush Heads	9
Assembly Required	Yes

11. Warranty and Support

The yorraka Electric Spin Scrubber Model C2 typically comes with a 1-year warranty. For warranty claims, technical support, or any questions regarding your product, please contact yorraka customer service through your purchase platform or the official brand website.

© 2025 yorraka. All rights reserved.

Related Documents - C2

 <p>SILVERCREST STEAM MOP SDM 1500 C2 Operating Instructions</p> <p>Comprehensive operating instructions for the SILVERCREST STEAM MOP SDM 1500 C2, covering setup, safe usage, maintenance, and troubleshooting for effective floor cleaning.</p>	
--	--

