

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [seasonlife](#) /

› [seasonlife R612 Vintage Belt-Drive Turntable with External Speakers User Manual](#)

seasonlife R612

seasonlife R612 Vintage Belt-Drive Turntable with External Speakers User Manual

Model: R612 | Brand: seasonlife

[Setup Guide](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. SETUP GUIDE

This section provides instructions for the initial setup of your seasonlife R612 turntable and its components. Please follow these steps carefully to ensure proper functionality.

1.1 Unboxing and Component Check

Carefully remove all items from the packaging. Verify that all components listed below are present and undamaged.

- 1. Turntable Unit R612
- 2. External Speakers (2 PCS)
- 3. Power Adapter (DC 12V 2000mA)
- 4. 45 RPM Adapter
- 5. Instruction Manual (this document)
- 6. Detachable Dust Cover



Image: The seasonlife R612 turntable unit with its two external speakers, ready for setup.

1.2 Connecting the Speakers

The turntable comes with two external speakers for enhanced stereo sound. Connect the speaker wires from the back of each speaker to the corresponding RCA output jacks on the rear of the turntable unit. Ensure the positive (+) and negative (-) terminals are matched correctly.

Double External Speakers

Equipped with a separable pair of speakers, let you enjoy the full, real and live vinyl audio in dual speakers easily



Image: A detailed view of the turntable's rear panel, highlighting the RCA line out/external speaker jacks and the 12V DC power jack.

1.3 Power Connection

Connect the provided DC 12V 2000mA power adapter to the 'DC 12V 2A Power Jack' on the back of the turntable. Plug the other end of the adapter into a standard wall outlet.

1.4 Dust Cover Installation

Attach the detachable dust cover to the hinges located at the back of the turntable unit. This cover helps protect your records and the turntable from dust when not in use.

2. OPERATING YOUR TURNTABLE

This section details how to operate your seasonlife R612 turntable for various audio playback options.

2.1 Playing Vinyl Records

1. **Power On:** Rotate the Power Button/Volume Knob clockwise to turn on the unit. The power indicator light will illuminate.
2. **Place Record:** Place a vinyl record on the turntable platter. If playing a 7-inch record, use the included 45 RPM adapter.
3. **Select Speed:** Adjust the 3 Speed Selector to match the RPM of your record (33 $\frac{1}{3}$, 45, or 78 RPM).
4. **Lift Tonearm:** Use the Tonearm Lift Lever to gently raise the tonearm.
5. **Position Stylus:** Carefully move the tonearm so the stylus is positioned directly over the desired track on the record.
6. **Lower Tonearm:** Gently lower the Tonearm Lift Lever to place the stylus onto the record. Playback will begin.
7. **Adjust Volume:** Rotate the Power Button/Volume Knob to adjust the listening volume.
8. **Auto-Stop Function:** The turntable features an auto-stop function that will automatically stop the platter rotation when the record reaches its end. This helps protect your records and stylus.

Belt-Drive 3 Speeds

33 1/3, 45 or 78 RPM



Supports any size of vinyl record including 7, 10 & 12 sizes.

Image: A vinyl record actively playing on the turntable, demonstrating the tonearm and stylus in position.

2.2 Bluetooth Connectivity

The R612 turntable can function as a Bluetooth speaker, allowing you to stream audio wirelessly from compatible devices.

1. **Select BT Mode:** Switch the Phono/BT Switch to the 'BT' position. The Bluetooth indicator light will begin to flash, indicating it is in pairing mode.
2. **Pair Device:** On your Bluetooth-enabled device (smartphone, tablet, etc.), search for 'Turntable' in the Bluetooth settings and select it to pair.
3. **Playback:** Once paired, the Bluetooth indicator light will stop flashing and remain solid. You can now play audio from your device through the turntable's speakers.



Wireless
Connectivity



AUX-in &
Headphone Jack



Stereo Dual
Speakers



Three-speed
Vinyl Player



External Speaker
Connection



Come With 45
Speed Adapter

Image: A visual representation of a smartphone screen displaying the Bluetooth pairing process, with 'Turntable' selected as a device.

2.3 AUX Input

Connect external audio devices (e.g., MP3 players) to the turntable using a 3.5mm AUX cable. Plug one end into your device's headphone jack and the other into the 'AUX-in Jack' on the back of the turntable. The turntable will automatically switch to AUX input mode.

2.4 Headphone Output

For private listening, plug headphones into the 'Headphone Jack' located on the back of the turntable. The external speakers will mute automatically when headphones are connected.

3. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your turntable.

3.1 Cleaning the Turntable and Stylus

- **Turntable Unit:** Wipe the surface of the turntable with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Stylus:** Gently clean the stylus using a soft brush designed for stylus cleaning, brushing from back to front. Exercise extreme caution to avoid damaging the delicate stylus.

3.2 Dust Cover Care

Clean the dust cover with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, dry cloth. Avoid scratching the surface.

3.3 Stylus Replacement

The stylus has a limited lifespan (approximately 200 hours of playback). If you notice a decrease in sound quality or skipping, the stylus may need replacement. Refer to the manufacturer's guidelines for purchasing and installing a compatible replacement stylus.

4. TROUBLESHOOTING GUIDE

If you encounter any issues with your turntable, consult the following table for common problems and their solutions.

| Problem | Possible Cause | Solution |
|------------------------|---|--|
| No power | Power adapter not connected or faulty outlet. | Ensure power adapter is securely plugged into the turntable and a working wall outlet. |
| No sound from speakers | Speakers not connected, volume too low, or headphones plugged in. | Check speaker connections. Increase volume. Disconnect headphones. |
| Record skipping | Dirty record, damaged stylus, or unstable surface. | Clean the record. Inspect and replace stylus if damaged. Place turntable on a stable, level surface. |
| Bluetooth not pairing | Turntable not in pairing mode, or device too far. | Ensure Phono/BT Switch is in 'BT' position and indicator is flashing. Move device closer to turntable. |



Image: A close-up view of the turntable's control panel, showing the power/volume knob, speed selector, and Phono/BT switch.

5. PRODUCT SPECIFICATIONS

Key technical details for the seasonlife R612 turntable.

- **Model Name:** R612
- **Brand:** seasonlife
- **Package Dimensions:** 17.8 x 12.4 x 10.2 inches
- **Item Weight:** 9.53 pounds

- **Maximum Rotational Speed:** 78 RPM
 - **Material:** Plastic (with wood-look finish)
 - **Motor Type:** DC Motor
 - **Special Features:** Auto Stop, Removable Dust Cover, Built-in Bluetooth Receiver, AUX Input, Headphone Input, RCA Line Out, Anti-vibration Belt-driven System, Two Dual External Speakers.
 - **Included Components:** Turntable Unit R612, External Speakers (2 PCS), Power Adapter (DC 12V 2000mA), 45 RPM Adapter, Instruction Manual, Detachable Dust Cover.
-

6. WARRANTY AND CUSTOMER SUPPORT

For warranty information or technical assistance, please refer to the contact details provided with your purchase documentation or visit the official seasonlife website. Keep your proof of purchase for warranty claims.