

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler (Model BDB26HB) Instruction Manual

BLACK+DECKER BDB26HB

BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler (Model BDB26HB) Instruction Manual

Your guide to safe and efficient use of your beverage cooler.

1. INTRODUCTION

Thank you for choosing the BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler, Model BDB26HB. This manual provides important information regarding the installation, operation, and maintenance of your appliance. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not touch cold surfaces, especially when the appliance is operating.
- Ensure proper ventilation around the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended for household use only.
- Unplug the appliance before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler
- Instruction Manual

Note: The cooler includes 5 wire shelves, which are pre-installed or packaged separately.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials. Ensure no parts are missing or damaged. Keep packaging materials away from children.

4.2 Placement

Place the beverage cooler on a flat, stable surface away from direct sunlight and heat sources. Allow at least 5 inches of space between the back and sides of the cooler and any adjacent walls to ensure proper air circulation.



Image: Front view of the BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler, showing its compact design suitable for various room settings.

4.3 Leveling the Appliance

The cooler is equipped with adjustable leveling legs. Adjust these legs to ensure the appliance is perfectly level.

This is crucial for proper operation and door alignment.



Image: Close-up of the adjustable leveling legs on the beverage cooler, highlighting their function for stability.

4.4 Door Reversibility

The double pane glass door is reversible, allowing it to open from either the left or right side to suit your space. Refer to the detailed instructions in the separate manual for door reversal if needed.

See Through Double Glass Doors

Recessed Door Handle



Reversible Door

Image: The beverage cooler with its double glass door open, illustrating the reversible door feature.

4.5 Initial Power-On

After placement and leveling, plug the cooler into a dedicated electrical outlet. Allow the unit to stand for at least 2-4 hours before loading with beverages to allow the refrigerant to settle.

5. OPERATING INSTRUCTIONS

5.1 Temperature Control

The beverage cooler features an adjustable thermostat with a temperature range of 37°F to 61°F (3°C to 16°C). Use the electronic controls located on the top front of the unit to set your desired temperature.

Adjustable LED Display | Thermostat Control |



Image: The beverage cooler with an overlay showing the adjustable LED display and thermostat control, indicating a temperature range of 37°F to 61°F.

5.2 Loading Beverages

The 2.4 cu. ft. interior can hold up to 76 standard 12-oz cans. Arrange beverages on the wire shelves for optimal cooling and air circulation.

2.4 Cu. Ft.

*76 can
max capacity*



Image: The beverage cooler filled with cans, demonstrating its 2.4 Cu. Ft. capacity and ability to hold up to 76 cans.

5.3 Wire Shelves

The cooler includes 5 durable wire shelves. These shelves are removable and can be adjusted to accommodate different beverage sizes. Ensure shelves are securely placed before loading.

5 Wire Shelves



Image: Interior view of the beverage cooler, showing the arrangement of its 5 wire shelves.

5.4 Official Product Video

Watch this video for a visual overview of the BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler's features and design.

Your browser does not support the video tag.

Video: An official product video showcasing the BLACK+DECKER 2.4 Cu. Ft. Beverage Cooler, highlighting its capacity, adjustable temperature, and design.

6. MAINTENANCE

6.1 Cleaning

Always unplug the appliance before cleaning. Clean the interior and exterior surfaces with a soft cloth and a mild detergent. Do not use abrasive cleaners or harsh chemicals. The double pane glass door can be cleaned with a glass cleaner.

6.2 Defrosting

This appliance features manual defrost. When frost accumulates to a thickness of 1/4 inch (6mm) or more, the unit should be defrosted. To defrost, unplug the unit, remove all contents, and leave the door open. Place a towel or shallow pan to catch melted ice. Once defrosted, clean and dry the interior thoroughly before plugging back in.

7. TROUBLESHOOTING

Before contacting customer service, please review the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	Not plugged in; circuit breaker tripped; temperature control set to OFF.	Ensure plug is secure; reset circuit breaker; adjust temperature control.
Temperature is not cold enough.	Door opened too frequently; door not closed completely; warm beverages added; poor ventilation; excessive frost.	Minimize door openings; ensure door seals properly; allow new beverages to cool; ensure adequate space around unit; defrost if necessary.
Appliance makes unusual noise.	Unit not leveled; loose parts; compressor cycling.	Adjust leveling legs; check for loose items; compressor noise is normal during operation.
Door does not close properly.	Unit not leveled; gasket dirty or damaged; shelves out of position.	Level the unit; clean or replace gasket; reposition shelves.

8. SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Number	BDB26HB
Capacity	2.4 Cu. Ft. (76 Cans)
Product Dimensions (D x W x H)	18.1 x 16.9 x 29.1 inches
Item Weight	44.1 pounds
Installation Type	Freestanding
Temperature Range	37°F - 61°F
Defrost System	Manual
Door Type	Double Pane Glass, Reversible
Shelves	5 Wire Shelves
Voltage	120 Volts
Color	Black & stainless steel

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website. Keep your purchase receipt for warranty claims.

Contact Information: Please refer to the contact details provided in your product packaging or on the

manufacturer's official website for technical assistance and service inquiries.