



[Manuals.plus](#) /

> [HONEY JOY](#) /

> HONEY JOY 6-in-1 Foldable Baby Walker and Bouncer Combo Instruction Manual

## HONEY JOY B0CSSWMB7D

# HONEY JOY 6-in-1 Foldable Baby Walker and Bouncer Combo Instruction Manual

Model: B0CSSWMB7D

[Safety Information](#)

[Product Features](#)

[Setup & Assembly](#)

[Operating](#)

[Modes](#)

[Maintenance](#)

[Specifications](#)

[Warranty & Support](#)

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions before assembly and use of the HONEY JOY Baby Walker. Keep this manual for future reference. Failure to follow these instructions could result in serious injury or death.

- Always keep your child in view while in the walker.
- Never leave your child unattended.
- Ensure all locking mechanisms are securely engaged before each use.
- Do not use near stairs, steps, or uneven surfaces.
- Keep away from heat sources, open flames, and electrical appliances.
- The walker is designed for children aged 7-14 months and weighing up to 26.5 lbs (12 kg).
- Regularly inspect the product for loose parts, damage, or wear. Discontinue use if any issues are found.
- This product is certified by ASTM & CPSIA for safety.



Food-grade  
PP Material



Heavy-duty  
Metal Tubes



Soft Foot Pad



Ergonomic  
Backrest

**Stable Anti-rollover  
Pyramid Frame**

Image: A baby in the HONEY JOY walker, illustrating the stable anti-rollover pyramid frame and proper distance against walls for safety. The image also highlights the 2 universal wheels, 2 speed-reduction wheels, and 6 bottom anti-skid pads.

## PRODUCT FEATURES

The HONEY JOY 6-in-1 Baby Walker is designed to adapt to your child's developmental stages, offering multiple modes for play and learning.

- **6-in-1 Multipurpose Design:** Includes jumping, rocking, baby walker, push-behind, early education, and baby eating modes.
- **Adjustable Height:** Features 3 adjustable height positions (14.5", 15.5", 16.5") to grow with your child.
- **Interactive Play Tray:** Detachable music play tray with lights and rotatable balls (requires 3 AA batteries, not included).
- **Enhanced Safety:** Stable anti-rollover pyramid frame, 7.5" proper distance against walls, 2 speed-reduction wheels, and 6 bottom anti-skid pads.
- **Comfort & Hygiene:** Detachable, skin-friendly, breathable, and machine-washable seat cushion with an ergonomic

backrest and soft foot pad.

- **Easy Storage:** Foldable design for compact storage.

## 6 in 1 Multipurpose Design

Meet the needs of different growing stages of the baby

Jumping Mode



Reversible Rocking Legs

Rocking Mode



Push Behind Mode



Removable Foot Pad

Baby Walker Mode



Early Education Mode



Removable Music Tray

Baby Eating Mode



Image: Visual representation of the six different modes: Jumping, Rocking (with reversible rocking legs), Push Behind, Baby Walker (with removable foot pad), Early Education, and Baby Eating (with removable music tray).

## SETUP AND ASSEMBLY

Follow these steps to assemble your HONEY JOY Baby Walker. Ensure all parts are present before beginning.

1. **Unfold the Frame:** Carefully unfold the main walker frame until it locks into place.
2. **Attach Anti-Skid Pads:** Securely attach the 6 bottom anti-skid pads to the designated slots on the base of the walker.
3. **Install Wheels:** Insert the 2 universal wheels and 2 speed-reduction wheels into their respective positions on the walker base. Ensure they click into place.
4. **Install Seat Cushion:** Place the detachable seat cushion into the seat opening, securing all straps and fasteners.

5. **Attach Music Play Tray:** Position the detachable music play tray onto the front of the walker and press down until it locks. Insert 3 AA batteries (not included) into the battery compartment of the play tray.
6. **Adjust Height:** Use the adjustment button to set the walker to one of the three desired heights (14.5", 15.5", or 16.5").

Your browser does not support the video tag.

Video: An official HONEY JOY video demonstrating the assembly process of the baby walker, including unfolding the frame, attaching wheels, installing the seat, and securing the activity tray.



Image: Close-up view of a person attaching the wheels to the base of the HONEY JOY baby walker, showing the secure attachment points.

## OPERATING MODES

---

The HONEY JOY Baby Walker offers six versatile modes to support your child's development:

- **Jumping Mode:** Allows the baby to bounce gently within the walker.
- **Rocking Mode:** Engage the reversible rocking legs to convert the walker into a gentle rocker.

- **Baby Walker Mode:** With the foot pad removed, the child can use the wheels to move around independently.
- **Push-Behind Mode:** The walker can be used as a push-behind toy to assist with early walking steps.
- **Early Education Mode:** Utilize the detachable music play tray with lights and sounds for sensory development.
- **Baby Eating Mode:** Remove the music play tray to create a clean surface for snacks or meals.



Image: A detailed view of the detachable music toy tray, showing the various interactive elements including buttons, lights, and rotatable balls designed to engage the baby.

## MAINTENANCE

Proper maintenance ensures the longevity and safety of your baby walker.

- **Cleaning the Seat Cushion:** The detachable seat cushion is machine washable. Remove it from the walker and wash according to the care label instructions.
- **Cleaning the Frame:** Wipe down the plastic and metal parts of the walker with a damp cloth and mild soap. Do not use abrasive cleaners.

- **Wheel Maintenance:** Periodically check the wheels for debris or hair that may impede movement. Clean as necessary.
- **Battery Replacement:** Replace the 3 AA batteries in the music play tray when sounds or lights become dim.



Image: The detachable seat cushion of the walker shown being prepared for machine washing, emphasizing its easy-to-clean feature.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Music play tray not working.	Batteries are dead or incorrectly installed.	Replace with new 3 AA batteries, ensuring correct polarity.
Walker not moving smoothly.	Debris caught in wheels; wheels not properly installed.	Clean wheels of any obstructions. Re-install wheels, ensuring they are securely clicked into place.

Problem	Possible Cause	Solution
Walker frame feels unstable.	Frame not fully unfolded or locked; parts not securely attached.	Ensure the frame is fully extended and all locking mechanisms are engaged. Check all assembly points.

## PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	HONEY JOY
Model Number	B0CSSWMB7D
Suitable Age	7-14 Months
Weight Capacity	26.5 Pounds (12 kg)
Adjustable Heights	14.5", 15.5", 16.5"
Material Type	PP + TPR + Metal
Item Dimensions (L x W x H)	28"L x 24"W x 19.5"H
Item Weight	10 Pounds (4.5 kg)
Color	Gray
Certifications	ASTM & CPSIA



Image: A diagram illustrating the key dimensions of the HONEY JOY baby walker, including length, width, and height, along with suitable age and weight capacity.

## WARRANTY AND SUPPORT

---

For warranty information, product support, or to purchase replacement parts, please contact HONEY JOY customer service directly. Refer to the product packaging or the official HONEY JOY website for contact details.

**Return Policy:** This product typically has a 90-day return/replacement policy. Please check your purchase receipt or retailer's policy for specific terms.

