

Manuals.plus /

› CYCLAMI /

› CYCLAMI S2 Nylon Out Front Bike Computer Mount Instruction Manual

CYCLAMI S2

CYCLAMI S2 Nylon Out Front Bike Computer Mount Instruction Manual

Model: S2-Nylon

1. PRODUCT OVERVIEW

The CYCLAMI S2 Nylon Out Front Bike Computer Mount is designed to securely hold your cycling computer and compatible accessories, positioning them conveniently in front of your handlebars. This mount is constructed from reinforced nylon for durability and features a low wind drag design.

Key Features:

- **Wide Compatibility:** Supports XOSS, iGPSPORT, CooSpo, and Garmin Edge series cycling computers (e.g., Edge Touring, Edge 830, Edge 130 Plus, Edge 530).
- **Handlebar Fit:** Designed for circular bike handlebars with diameters between 1" and 1.25" (25.4mm-31.8mm).
- **Out Front Positioning:** Places your device forward for improved visibility and reduced distraction.
- **Durable Construction:** Made from reinforced nylon for strength and longevity.
- **Water Resistance:** Designed to withstand various weather conditions.

Multifunction bike computer mount

Can install gopro/bike computer/headlights /sport camera /flashlight



Image 1.1: The CYCLAMI S2 mount showcasing its multifunctionality with a bike computer and a headlight.

Low Wind Drag Design

Fits better with your bike and reduces wind resistance

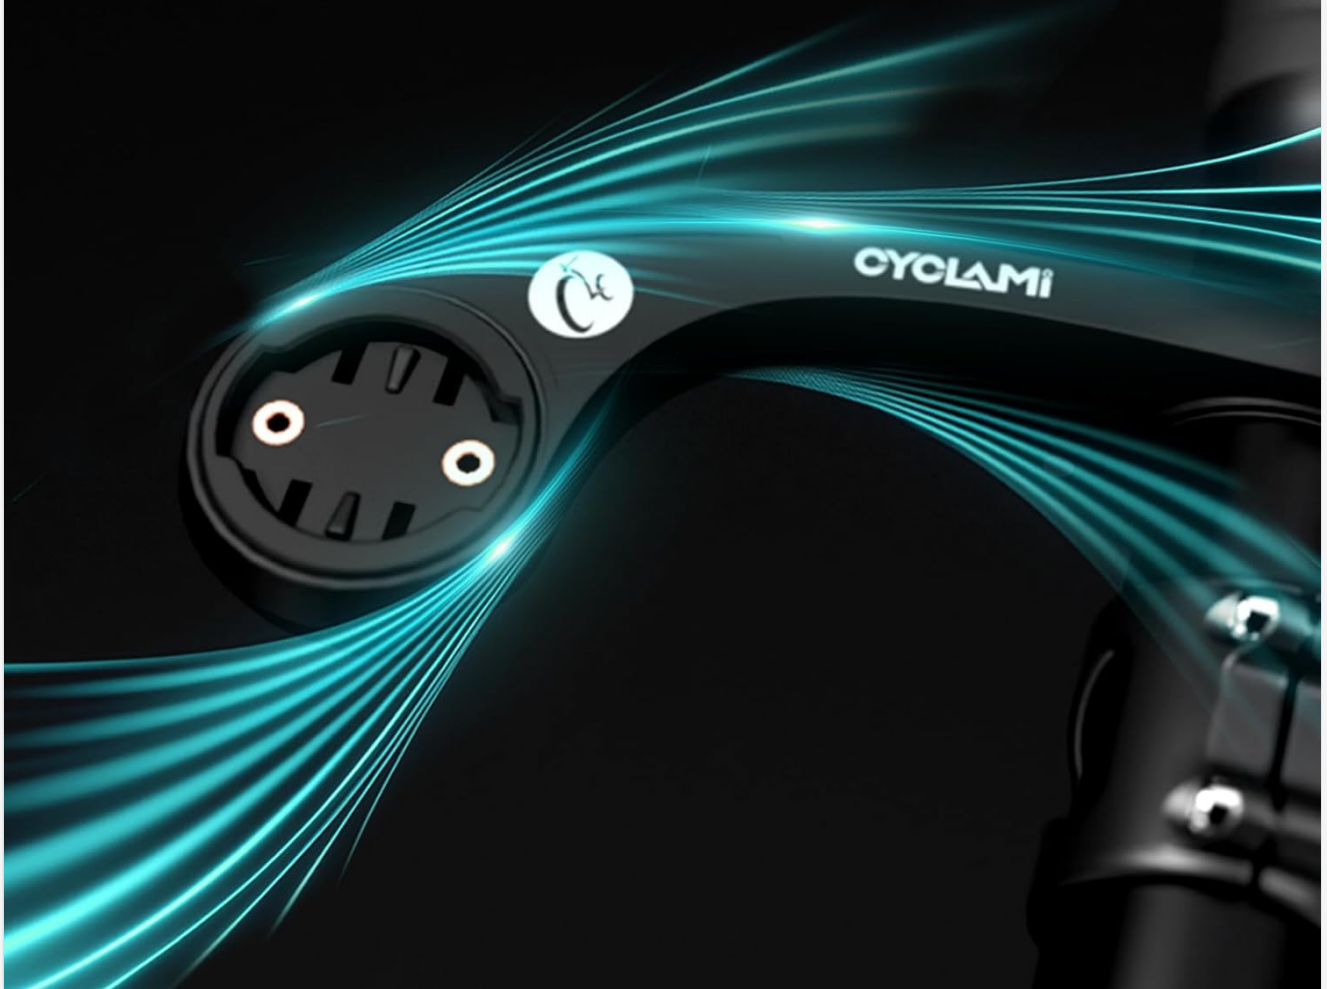


Image 1.2: Illustration of the mount's low wind drag design, optimizing aerodynamics.

2. WHAT'S IN THE BOX

Upon opening your package, please verify that all components are present:

- 1 x CYCLAMI S2 Out Front Bike Computer Mount (Nylon)
- 1 x Allen Wrench (for installation)
- Various adapters for different cycling computers (e.g., Garmin, XOSS, iGPSPORT)
- Mounting screws and hardware

3. INSTALLATION GUIDE

Follow these steps to correctly install your CYCLAMI S2 Out Front Bike Computer Mount:

1. **Prepare Handlebar:** Ensure your bike handlebar is clean and free of obstructions in the desired mounting area. The mount is compatible with circular handlebars of 1" to 1.25" (25.4mm-31.8mm) diameter.

2. **Position the Mount:** Place the mount around your handlebar, ensuring the CYCLAMI logo faces forward and the computer interface is positioned correctly.
3. **Secure the Clamp:** Use the provided Allen wrench to tighten the screws on the mount's clamp. Tighten evenly until the mount is secure and does not rotate freely. Do not overtighten.
4. **Adjust Angle (Optional):** The mount allows for slight angle adjustment. Loosen the main screw slightly, adjust to your preferred viewing angle, and then re-tighten securely.
5. **Attach Computer Adapter:** Select the appropriate adapter for your cycling computer (Garmin, XOSS, iGPSport). Attach it to the top of the mount using the small screws provided. Rotate left to tighten the adapter.
6. **Attach Bottom Extension (Optional):** If you plan to attach a headlight or action camera below the computer, use the bottom extension piece and secure it with the provided screws.
7. **Mount Your Device:** Twist your cycling computer onto the adapter until it locks into place. If using a headlight, attach it to the bottom extension.



Image 3.1: Visual guide for installing the CYCLAMI S2 mount, detailing each step from overview to completion.

Video 3.1: This video demonstrates the installation process of the CYCLAMI S2 bike computer mount, including attaching the mount to the handlebar, adjusting its angle, and securing various compatible cycling computers and headlights.

4. OPERATING INSTRUCTIONS

Once installed, the CYCLAMI S2 mount provides a stable platform for your devices.

- **Attaching a Device:** Align your compatible cycling computer or accessory with the installed adapter on the mount. Gently push down and twist clockwise until it clicks securely into place.
- **Detaching a Device:** To remove your device, twist it counter-clockwise until it releases from the adapter, then lift it off.
- **Headlight/Camera Attachment:** If using the bottom extension, ensure your headlight or action camera is compatible with the mounting interface and securely fastened.

5. PRODUCT FEATURES

The CYCLAMI S2 mount offers several design advantages:

- **Enhanced Visibility:** Positions your bike computer further forward, allowing for easier viewing of data without diverting attention from the road.
- **Space Optimization:** Frees up valuable handlebar space by integrating multiple devices (computer and light) into one streamlined mount.
- **Robust Material:** Constructed from reinforced nylon, providing a strong and stable platform for your electronics, even on challenging terrain.
- **Aerodynamic Design:** Engineered to minimize wind resistance, contributing to a smoother ride.



S1



**NEW
UPGRADE**



S2

Lower wind resistance

Longer length

Image 5.1: A visual comparison between the S1 and S2 mounts, illustrating the S2's improved design for lower wind resistance and increased length.

Excellent Water Resistance

Unaffected by harsh environments longer service life



Image 5.2: The mount demonstrating its excellent water resistance, suitable for various weather conditions.

6. SPECIFICATIONS

Attribute	Detail
Brand	CYCLAMI
Model Name	S2
Color	Black
Material	Reinforced Nylon
Mounting Type	Handlebar
Compatible Handlebar Diameter	1" - 1.25" (25.4mm - 31.8mm)
Compatible Devices	Garmin Edge (Touring, 830, 130 Plus, 530), XOSS, iGPS SPORT, CooSpo
Water Resistance Level	Waterproof
Item Weight	0.07 Kilograms

Note: Not compatible with Wahoo/Bryton devices or handlebars outside the specified diameter range.

7. MAINTENANCE

To ensure the longevity and optimal performance of your CYCLAMI S2 mount, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the mount regularly with a damp cloth to remove dirt and grime. Avoid using harsh chemicals or abrasive cleaners, which can damage the nylon material.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Vibrations from cycling can sometimes loosen fasteners. Re-tighten with the Allen wrench if necessary.
- **Storage:** When not in use for extended periods, store the mount in a cool, dry place away from direct sunlight.

8. TROUBLESHOOTING

If you encounter any issues with your CYCLAMI S2 mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mount slides on handlebar	Clamp screws are loose.	Tighten the clamp screws evenly with the Allen wrench. Ensure the handlebar diameter is within the compatible range.
Device does not attach securely	Incorrect adapter used or adapter not fully tightened.	Verify you are using the correct adapter for your device. Ensure the adapter is twisted fully and locked onto the mount.
Mount feels flimsy	Screws are not fully tightened.	Check all mounting screws, including those for the computer adapter and bottom extension, and tighten them securely.

If the issue persists, please contact customer support.

9. WARRANTY AND SUPPORT

The CYCLAMI S2 Out Front Bike Computer Mount comes with a **1-year warranty** as specified in the product

details. For any warranty claims or technical support, please refer to your purchase documentation or contact the seller directly.

For further assistance, you may visit the [CYCLAMI Store on Amazon](#).