

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Saker](#) /

› [Saker 6-Inch Cordless Mini Electric Chainsaw Instruction Manual - Model B0CSSY2N7N](#)

## Saker 6-Inch Cordless Mini Electric Chainsaw (ASIN: B0CSSY2N7N)

# Saker 6-Inch Cordless Mini Electric Chainsaw Instruction Manual

Model: B0CSSY2N7N

## 1. INTRODUCTION

Thank you for choosing the Saker 6-Inch Cordless Mini Electric Chainsaw. This portable and efficient tool is designed for light pruning, small tree cutting, and general garden maintenance. Its compact size and cordless operation provide convenience and ease of use. Please read this manual thoroughly before operating the chainsaw to ensure safe and effective use.

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions to reduce the risk of fire, electric shock, and serious personal injury. Keep this manual for future reference.

- **Personal Protective Equipment (PPE):** Always wear safety glasses, gloves, and sturdy footwear. Hearing protection is recommended.
- **Work Area:** Keep the work area clean and well-lit. Do not operate the chainsaw in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Avoid body contact with earthed or grounded surfaces. Do not expose power tools to rain or wet conditions.
- **Chainsaw Handling:** Hold the chainsaw firmly with both hands during operation. Ensure a stable footing. Never operate with one hand unless specifically designed for it and you are trained.
- **Kickback Prevention:** Be aware of the kickback danger zone. Avoid cutting with the tip of the guide bar.
- **Maintenance:** Disconnect the battery pack before making any adjustments, changing accessories, or storing the chainsaw.
- **Children and Bystanders:** Keep children and bystanders at a safe distance from the work area.

## 3. PACKAGE CONTENTS

Your Saker Mini Electric Chainsaw package typically includes the following items:

- Saker Mini Electric Chainsaw Unit (6-inch guide bar)
- 2 x 20V MAX 1.5Ah Li-ion Batteries
- Battery Charger
- 2 x Chains
- Oil Bottle (empty, for chain lubrication)
- Screwdriver
- Wrench
- Protective Carrying Case
- Instruction Manual



Image 3.1: Overview of the Saker Mini Chainsaw kit, showing the chainsaw units, two batteries, charger, spare chains, oil bottle, tools, and the protective carrying case.

## 4. SETUP

### 4.1. Charging the Battery

1. Connect the charger to a standard power outlet.

2. Insert the 20V MAX 1.5Ah Li-ion battery into the charger.
3. Allow the battery to charge fully. The indicator light on the charger will change to signal a full charge.
4. Remove the battery from the charger once fully charged.

## 4.2. Chain and Guide Bar Installation

Ensure the battery is removed before installation.

1. Unscrew the side cover retaining nut using the provided wrench and remove the side cover.
2. Place the chain around the guide bar, ensuring the cutting edges face the correct direction (away from the motor).
3. Align the chain with the sprocket on the chainsaw body and fit the guide bar into its slot.
4. Replace the side cover and lightly tighten the retaining nut. Do not fully tighten yet.

## 4.3. Chain Tension Adjustment

Proper chain tension is crucial for safe operation and efficient cutting.

1. Using the screwdriver, adjust the chain tensioning screw until the chain is snug against the guide bar but can still be pulled freely by hand.
2. Ensure there is no excessive slack or tightness. A properly tensioned chain should not sag from the guide bar and should move smoothly.
3. Once tensioned, fully tighten the side cover retaining nut with the wrench.

## 4.4. Chain Lubrication

Regular lubrication extends chain life and improves cutting performance.

1. Fill the provided oil bottle with appropriate chain lubricant (not included).
2. Apply a small amount of lubricant directly onto the chain and guide bar before each use and periodically during extended operation.



Image 4.1: Detail of the chainsaw chain and guide bar, illustrating the cutting surface and overall length.

## 5. OPERATING INSTRUCTIONS

### 5.1. Pre-Operation Check

- Ensure the battery is fully charged and securely inserted.
- Verify the chain is properly tensioned and lubricated.
- Check that all nuts and bolts are tight.
- Inspect the work area for any obstructions or hazards.

### 5.2. Starting and Stopping

1. **To Start:** Press and hold the safety lock-off button (often located on the handle). While holding the safety button, squeeze the trigger switch to start the chainsaw.
2. **To Stop:** Release the trigger switch. The chain will stop rotating.



Image 5.1: Key components of the chainsaw, including the safety lock-off level and protective baffle.

### 5.3. Cutting Techniques

- Always hold the chainsaw firmly with both hands.
- Position yourself to maintain balance and control.
- Allow the chainsaw to reach full speed before engaging the wood.
- Apply light, steady pressure. Do not force the saw through the cut.
- Be mindful of the protective baffle, which helps prevent debris from flying towards the user.
- For branches, cut from the top down to avoid pinching the guide bar.



## HIGH EFFICIENT CUTTING

Image 5.2: The Saker Mini Chainsaw performing a cut, illustrating its high efficiency.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your chainsaw.

### 6.1. Cleaning

- After each use, remove the battery.
- Clean the guide bar and chain of sawdust and debris using a brush or compressed air.
- Wipe down the chainsaw body with a damp cloth. Do not use harsh chemicals.

### 6.2. Chain Care

- **Lubrication:** Re-lubricate the chain frequently during use, especially during long cutting sessions.
- **Sharpening:** A dull chain requires more force and can cause kickback. Sharpen the chain regularly or replace it with a new one when necessary. Refer to the chain manufacturer's instructions for sharpening.
- **Replacement:** Use only Saker-approved replacement chains.

### 6.3. Battery Storage

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge batteries to approximately 50% capacity.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or improperly inserted; Safety lock-off not engaged; Faulty switch.	Charge battery and ensure proper insertion; Press safety lock-off button before trigger; Contact support if switch is faulty.
Chain does not move or moves slowly	Chain too tight; Chain dull or damaged; Insufficient lubrication; Debris obstructing chain.	Adjust chain tension; Sharpen or replace chain; Apply chain lubricant; Clean guide bar and chain.
Excessive vibration	Loose chain; Damaged chain or guide bar.	Adjust chain tension; Inspect and replace damaged parts.
Motor overheating	Overload; Blocked ventilation.	Reduce cutting load; Clear ventilation openings.

## 8. SPECIFICATIONS

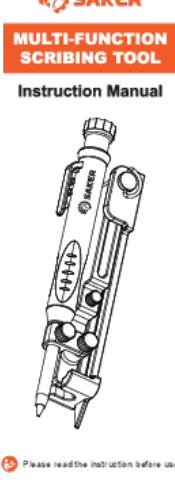
Feature	Detail
Brand	Saker
Model Identifier (ASIN)	B0CSSY2N7N
Guide Bar Length	6 inches (cuttable face length)
Total Steel Plate Length	9 inches
Motor Type	Pure Copper Motor
Horsepower	550 Watts
Battery Type	20V MAX 1.5Ah Li-ion
Item Weight (with battery)	1.1 Kilograms (approx. 2.42 pounds)
Chain Speed	Achieves 5m/s (as per product features)
Special Features	Overload Protection, Protective Baffle, Comfortable Handle, Lightweight and Portable

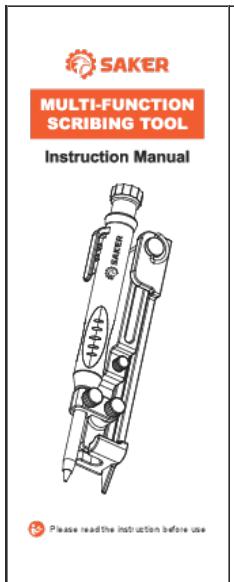
 
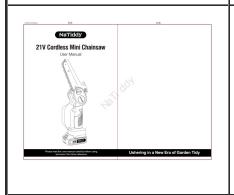
## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the contact information provided with your product packaging or visit the official Saker website. Keep your purchase

receipt as proof of purchase.

## Related Documents - 6-Inch Cordless Mini Electric Chainsaw (ASIN: B0CSSY2N7N)

	<p><a href="#">SAKER Mini Electric Chainsaw Instruction Manual (SK1804D, SK1806D, SK1806F)</a></p> <p>Comprehensive instruction manual for the SAKER Mini Electric Chainsaw models SK1804D, SK1806D, and SK1806F. Covers specifications, safety warnings, operation, maintenance, and troubleshooting.</p>
	<p><a href="#">Saker Foam Cannon Dual Connector Accessory Instruction Manual</a></p> <p>Instruction manual for the Saker Foam Cannon Dual Connector Accessory, detailing its features, installation, operation, and safety precautions for use with pressure washers. Supports up to 4000 PSI.</p>
	<p><a href="#">Saker Multi-Function Scribing Tool Instruction Manual</a></p> <p>This manual provides instructions for using the Saker Multi-Function Scribing Tool, including its various components and functions such as deep hole pencil holding, angle adjustment, and compass functionality. It also includes troubleshooting tips for the deep hole pencil.</p>
	<p><a href="#">Saker SK-SG04A One Gear Electric Spray Gun Instruction Manual</a></p> <p>This instruction manual provides detailed information on the Saker SK-SG04A One Gear Electric Spray Gun, covering its specifications, package contents, operating instructions, and troubleshooting tips for optimal performance.</p>

 <p><b>SAKER</b> <b>MULTI-FUNCTION SCRIBING TOOL</b> <b>Instruction Manual</b></p> <p></p> <p> Please read the instruction before use</p>	<p><a href="#"><u>SAKER Multi-Function Scribing Tool Instruction Manual</u></a></p> <p>Comprehensive instruction manual for the SAKER Multi-Function Scribing Tool, detailing its features, usage for marking and scribing on various materials, compass functionality, and troubleshooting tips.</p>
 <p><b>NaTiddy</b> <b>21V Cordless Mini Chainsaw</b> <b>User Manual</b></p> <p></p> <p> Only for use on wood</p>	<p><a href="#"><u>NaTiddy 21V Cordless Mini Chainsaw User Manual</u></a></p> <p>Comprehensive user manual for the NaTiddy 21V Cordless Mini Chainsaw, covering safety instructions, product specifications, operation, maintenance, and after-sales information. Learn how to safely and effectively use your cordless chainsaw.</p>