

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Electrolux](#) /

› [Electrolux Clean 500 Vacuum Cleaner EB51C1OG User Manual](#)

Electrolux EB51C1OG

Electrolux Clean 500 Vacuum Cleaner EB51C1OG User Manual

Model: EB51C1OG

1. INTRODUCTION

Thank you for choosing the Electrolux Clean 500 Vacuum Cleaner, model EB51C1OG. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read these instructions carefully before using the appliance and keep them for future reference.

The Electrolux Clean 500 is a compact and efficient canister vacuum cleaner designed for effective dust and dirt absorption on various floor types. It features an AllFloor nozzle, manual power control, and a high filtration system for a cleaner home environment.



Image: The Electrolux Clean 500 vacuum cleaner, highlighting its durable construction, partially made from recycled plastic.

2. SAFETY INFORMATION

Important Safety Instructions:

- Always ensure the voltage indicated on the rating label corresponds to your mains voltage.
- Do not use the vacuum cleaner to pick up water or other liquids.
- Do not vacuum hot ashes, sharp objects, or flammable substances.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the appliance from the power outlet before cleaning or performing maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is for domestic use only.

3. PACKAGE CONTENTS

Verify that all components are present in the packaging:

- Electrolux Clean 500 Vacuum Cleaner unit
- Flexible Hose
- Telescopic Wand
- AllFloor Combination Nozzle
- Dust Brush
- Crevice Tool

- User Manual (this document)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Hose:** Insert the flexible hose into the suction inlet on the main vacuum unit until it clicks securely into place.
2. **Connect the Telescopic Wand:** Attach the telescopic wand to the handle end of the flexible hose.
3. **Attach the Nozzle:** Connect the AllFloor combination nozzle to the end of the telescopic wand. Ensure it is firmly attached.
4. **Check Dust Bag:** Ensure a dust bag is correctly installed inside the vacuum cleaner. Refer to the 'Maintenance' section for dust bag replacement.
5. **Power Connection:** Extend the power cord and plug it into a suitable electrical outlet (230 Volts).



Image: Assembled Electrolux Clean 500 vacuum cleaner, ready for use.

5. OPERATING INSTRUCTIONS

Powering On/Off:

- Press the **ON/OFF** button (usually marked with a power symbol) located on the main unit to start or stop

the vacuum cleaner.

Adjusting Suction Power:

- Rotate the **Manual Power Control** dial on the main unit to adjust the suction power from MIN (minimum) to MAX (maximum) according to the cleaning task and surface type.

Using the AllFloor Combination Nozzle:

- The AllFloor nozzle is designed for both hard floors and carpets.
- To switch between modes, press the foot pedal on the nozzle. The brush strip will extend for hard floors and retract for carpets.

Using Accessories:

- The included dust brush and crevice tool can be attached directly to the hose handle or the telescopic wand for cleaning specific areas such as upholstery, corners, or delicate surfaces.

Movement and Range:

- The vacuum cleaner features large wheels for smooth movement across floors.
- The 8.5-meter operating radius allows for cleaning large areas without frequently changing power outlets.



Image: Close-up of the control panel on the Electrolux Clean 500, indicating power and suction settings.



Image: The Electrolux Clean 500 vacuum cleaner in operation within a room, showcasing its hose and nozzle.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Dust Bag Replacement:

- The vacuum cleaner is equipped with a dust bag full indicator. Replace the dust bag when the indicator shows it is full, or when suction power noticeably decreases.
- To replace, open the dust bag compartment, remove the old bag, and insert a new Electrolux S-Bag. Ensure it is properly sealed.

Filter Cleaning/Replacement:

- The vacuum cleaner uses a Rinsable Hygiene 12 Filter. This filter should be cleaned regularly (e.g., every 3-6 months, depending on usage).
- To clean, remove the filter from its compartment and rinse it under lukewarm running water. Allow it to dry completely (at least 24 hours) before reinserting. Do not use detergents or brushes.
- Replace the filter if it is damaged or if cleaning does not restore performance.

Nozzle and Hose Cleaning:

- Periodically check the nozzle and hose for blockages. Remove any hair, threads, or debris that may have accumulated.

Storage:

- The compact size of the Electrolux Clean 500 allows for easy storage.
- Accessories can be conveniently stored on the vacuum cleaner itself, ensuring they are always at hand.



Image: The Electrolux Clean 500 vacuum cleaner neatly stored in a cabinet, illustrating its compact design and integrated accessory storage.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not start.	No power supply.	Check if the plug is securely inserted into the outlet. Check the circuit breaker.
Low suction power.	Dust bag is full. Blockage in hose/nozzle. Filter is dirty.	Replace dust bag. Clear any blockages. Clean or replace the filter.
Unusual noise during operation.	Blockage in fan or motor area. Damaged dust bag.	Turn off and unplug. Check for and remove blockages. Ensure dust bag is correctly installed and not damaged.
Dust escapes from the vacuum cleaner.	Dust bag not installed correctly or damaged. Filter not installed or dirty.	Check and correctly install or replace the dust bag. Clean or replace the filter.

8. SPECIFICATIONS

- **Model:** EB51C10G
- **Form Factor:** Canister

- **Item Weight:** 5 Kilograms
- **Capacity:** 3 Liters
- **Power Source:** Corded Electric
- **Voltage:** 230 Volts
- **Filter Type:** Rinsable Hygiene 12 Filter
- **Surface Recommendation:** All floors
- **Special Features:** AllFloor Nozzle, Advanced Filtration
- **Included Components:** Instruction manual, User Manual, Vacuum Cleaner
- **Manufacturer:** Electrolux
- **Date First Available:** May 7, 2024

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Electrolux website. For technical support, spare parts, or service inquiries, please contact Electrolux customer service in your region. Contact details can typically be found on the Electrolux website or in the product packaging.

When contacting support, please have your model number (EB51C1OG) and serial number (if applicable) ready.