Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Electrolux /
- > Electrolux ENT6ME19S Combi Refrigerator User Manual

Electrolux ENT6ME19S

Electrolux ENT6ME19S Combi Refrigerator User Manual

Model: ENT6ME19S

1. Introduction

This manual provides essential information for the safe and efficient use of your Electrolux ENT6ME19S combi refrigerator. Please read these instructions carefully before installation and operation, and keep them for future reference. Proper installation, operation, and maintenance are crucial for optimal performance and longevity of your appliance.

For your safety, always follow the safety guidelines provided in this manual. This appliance is designed for household use only.

2. PRODUCT OVERVIEW

The Electrolux ENT6ME19S is a Total No Frost combi refrigerator designed to provide efficient cooling and freezing. It features a Twintech Total No Frost cooling system, ensuring consistent temperatures and preventing ice build-up in both compartments. The appliance includes a CustomFlex door with an adjustable shelving system for flexible storage solutions and a digital temperature display for precise control.



Image 1: Interior view of the Electrolux ENT6ME19S combi refrigerator, showing the refrigerator compartment with various food items and the freezer drawers below.

Key Features:

- Twintech Total No Frost cooling system.
- CustomFlex door with adjustable shelving system.
- Digital temperature display.
- Energy efficiency class E.
- Net capacity: 269 liters (207 liters refrigerator, 62 liters freezer).
- Low noise level of 37 dB.

3. SETUP AND INSTALLATION

The Electrolux ENT6ME19S is designed for either freestanding or built-in installation. Ensure the appliance is placed on a stable, level surface and that there is adequate ventilation around it.

Dimensions and Placement:

- Appliance Dimensions (H x W x D): $188.4 \text{ cm} \times 54.6 \text{ cm} \times 54.9 \text{ cm}$
- Built-in Niche Dimensions (H x W x D): 189.4 cm x 56.0 cm x 55.0 cm
- Net Weight: 64 kg

Electrical Connection:

Before connecting the appliance, ensure that the voltage and frequency indicated on the rating plate match your household power supply.

Voltage: 220-240 VFrequency: 50 HzCable Length: 2.4 m

Allow the refrigerator to stand upright for at least 4 hours after transport before plugging it in. This allows the refrigerant to settle. Clean the interior of the appliance with a damp cloth before first use.

4. OPERATING INSTRUCTIONS

Your Electrolux ENT6ME19S refrigerator is equipped with user-friendly controls for optimal food preservation.

Temperature Control:

The digital temperature display allows you to set and monitor the temperature in both the refrigerator and freezer compartments. Refer to the control panel section in the full manual for detailed instructions on adjusting settings.

Food Storage Guidelines:

- Store fresh food in the refrigerator compartment (207 liters volume).
- Utilize the CustomFlex door's adjustable shelves to organize items efficiently.
- The freezer compartment (62 liters volume) has 3 drawers for frozen goods. It has a freezing capacity of 5 kg in 24 hours.
- Avoid placing hot food directly into the refrigerator or freezer. Allow it to cool down first.
- Ensure food is properly sealed to prevent moisture loss and odor transfer.

Total No Frost System:

The Twintech Total No Frost system automatically prevents ice build-up in both the refrigerator and freezer compartments, eliminating the need for manual defrosting of the freezer.

5. MAINTENANCE

Regular cleaning and maintenance will help keep your appliance in optimal condition.

Cleaning the Interior:

- Always unplug the appliance before cleaning.
- Clean the interior regularly with a mild detergent and warm water.
- · Wipe dry thoroughly to prevent mold and odors.
- Removable shelves and drawers can be washed separately.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth.
- Avoid abrasive cleaners or solvents that could damage the glossy white finish.

Door Hinge:

The appliance comes with a right-hand door hinge. Consult a qualified technician if you need to reverse the door swing.

6. TROUBLESHOOTING

If you encounter any issues with your appliance, please refer to the following general troubleshooting tips. For more complex problems, contact Electrolux customer service.

Common Issues:

- **Appliance not cooling:** Check if the power cord is properly plugged in and if the circuit breaker has tripped. Ensure the temperature settings are correct.
- **Unusual noises:** Minor noises are normal during operation. Ensure the appliance is level and not touching any walls or cabinets.
- Water on the floor: Check if the drain hole is blocked or if the appliance is not level.
- Excessive frost in refrigerator: Ensure the door is closing properly and the door seal is intact.

7. Specifications

Detailed technical specifications for the Electrolux ENT6ME19S combi refrigerator:

Feature	Specification
Brand	Electrolux
Model Number	ENT6ME19S
Туре	Combi Refrigerator (Freezer at bottom)
Installation Type	Freestanding or Built-in
Total Net Capacity	269 Liters
Refrigerator Volume	207 Liters
Freezer Volume	62 Liters
Freezing Capacity	5 kg / 24 hours
Defrost System	Frost-free (Total No Frost)
Energy Efficiency Class	Е
Annual Energy Consumption	215 kWh/year
Noise Level	37 dB
Climate Class	SN-N-ST-T
Product Dimensions (H x W x D)	188.4 cm x 54.6 cm x 54.9 cm
Net Weight	64 kg

Feature	Specification
Color	White
Finish Type	Glossy
Number of Doors	1
Maximum Power Consumption	120 W



Image 2: Energy label for the Electrolux ENT6ME19S, indicating an energy efficiency class of E.


8. WARRANTY AND SUPPORT

Your Electrolux ENT6ME19S combi refrigerator comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Electrolux customer support. You can find contact information on the official Electrolux website or in the documentation provided with your product.

© 2023 Electrolux. All rights reserved. This manual is for informational purposes only.

Related Documents - ENT6ME19S

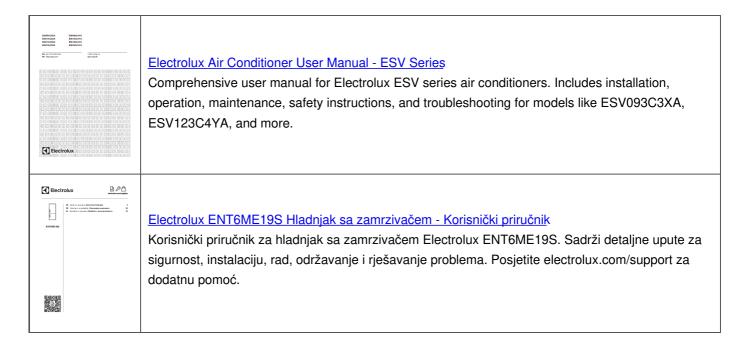

FOLIAND THE REPORT OF THE PROPERTY OF THE PRO	Electrolux EQE6000 French Door Refrigerator User Manual This user manual provides comprehensive instructions for the Electrolux EQE6000 French Door refrigerator, covering installation, operation, safety, cleaning, food storage, and troubleshooting. Learn how to get the most out of your appliance.
Let Dec Soon all the Annual Soundards all the Annual Soundards and	Electrolux LNT5ME36U1 Korisnički priručnik Korisnički priručnik za hladnjak s zamrzivačem Electrolux LNT5ME36U1. Upute za uporabu, instalaciju, funkcije, održavanje i sigurnosne informacije.
BOOMER COMMITTEE OF THE	Electrolux IK2355BL/IK2355BR User Manual: Installation, Operation & Care Guide Discover essential information for your Electrolux IK2355BL and IK2355BR refrigerator/freezer. This comprehensive user manual covers installation, daily use, safety instructions, maintenance, and troubleshooting tips.
Decirolax	Electrolux Single-Door Refrigerator: Quick Start Guide Get started quickly with your new Electrolux single-door refrigerator. This guide covers setup, care, cleaning, and frequently asked questions for optimal performance.