

Philips MG5940/15

Philips Multigroom Series 5000 All-in-One Trimmer User Manual

Model: MG5940/15

1. INTRODUCTION

The Philips Multigroom Series 5000 is a versatile all-in-one grooming kit designed for comprehensive styling of your face, head, and body. This device features 12 tools and 11 length settings, ranging from 0.5 mm to 16 mm, to help you achieve your desired look with precision and comfort. Its self-sharpening stainless steel blades ensure long-lasting performance without the need for lubrication.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Avoid use on infants.
- Keep the appliance away from water sources. Although it is waterproof, do not submerge it completely.
- Follow all recommended cleaning and maintenance instructions.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. WHAT'S IN THE BOX

Your Philips Multigroom Series 5000 package includes the following items:

- 1x Multigroom handle
- 1x Steel trimmer
- 1x Nose and ear trimmer
- 1x Body shaver with skin protector
- 1x Steel precision trimmer

- 2x Stubble combs
- 1x Adjustable comb (3-7 mm)
- 3x Hair combs
- 1x Body comb
- 1x Soft pouch
- 1x Cleaning brush
- 1x USB-A charging cable (wall adapter not included)



Image: The Philips Multigroom Series 5000 trimmer displayed with its full set of 12 versatile attachments, designed for complete face, head, and body styling.

4. SETUP

4.1 Charging the Device

Before first use, fully charge your Multigroom trimmer. The powerful Li-ion battery provides up to 120 minutes of runtime on a full charge. A 5-minute quick charge option is available for a single trim.

- Connect the provided USB-A charging cable to the trimmer and to a compatible USB power source (e.g., a computer USB port or a USB wall adapter, which is not included).
- The battery indicator will show the charging status.

Li-Ion

**Batería de larga
duración dura
hasta 2 horas**



Image: The Philips Multigroom Series 5000, highlighting its Li-ion battery that offers up to 2 hours of continuous use.



Image: Visual representation of the included USB-A charging cable and a note that the wall adapter is not part of the package.

4.2 Attaching and Detaching Accessories

To attach an accessory, align it with the trimmer head and press firmly until it clicks into place. To detach, gently pull the accessory away from the trimmer head.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button once to turn the trimmer on. Press it again to turn the trimmer off.

5.2 Trimming Face (Beard, Stubble, Edges)

Use the steel trimmer or precision trimmer with the appropriate stubble combs (0.5mm, 1mm, 2mm) or the adjustable comb (3-7mm) to achieve your desired beard length and style. The BeardSense technology scans beard density 125 times per second, automatically increasing power when needed to handle dense or long beards effectively.

5.3 Trimming Hair (Head)

Attach one of the hair combs to the steel trimmer to cut hair to various lengths. Move the trimmer against the direction of hair growth for an even cut.

5.4 Body Grooming

For comfortable body grooming, use the body shaver with skin protector. This attachment is designed to protect sensitive areas while effectively trimming body hair.

5.5 Nose and Ear Trimming

Attach the nose and ear trimmer for safe and comfortable removal of unwanted hair in these delicate areas.



Image: Demonstrations of the Philips Multigroom Series 5000 being used for grooming facial hair, head hair, and body hair.

Tecnología BeardSense aumenta la potencia para un recorte preciso



Image: An illustration detailing the BeardSense technology, which intelligently adapts the trimmer's power based on beard density for consistent performance.

6. MAINTENANCE


6.1 Cleaning the Trimmer

The Philips Multigroom Series 5000 is 100% waterproof, making it easy to clean. After each use:

- Turn off the appliance and detach any combs or attachments.
- Rinse the trimmer head and attachments under running tap water.
- Use the provided cleaning brush to remove any stubborn hair particles.
- Allow all parts to air dry completely before reattaching or storing.

6.2 Blade Care

The trimmer features self-sharpening stainless steel blades that remain sharp over time, providing a precise cut without the need for lubrication. No special maintenance is required for the blades.

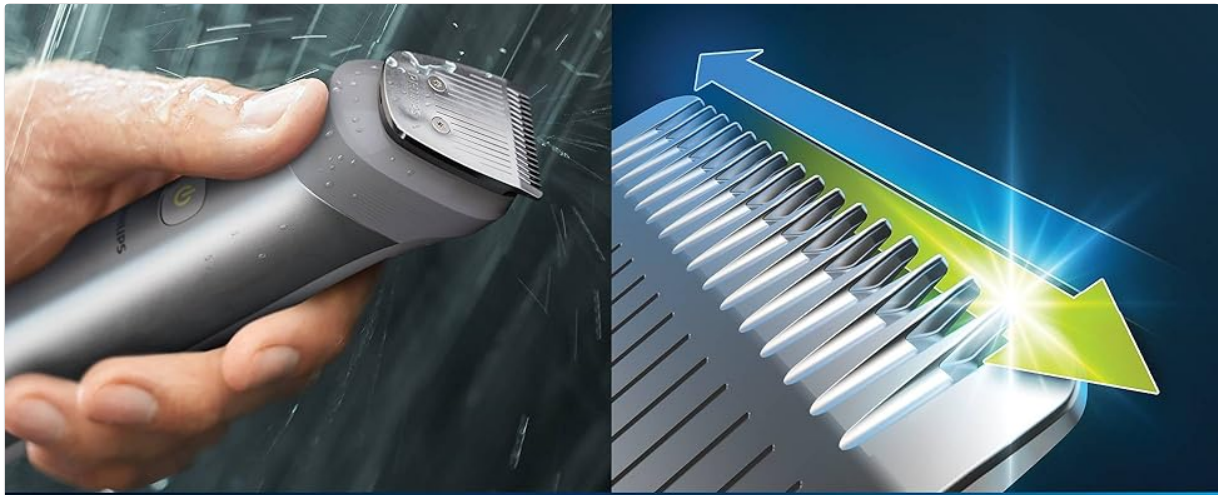

**100% Resistente
al agua**

Fácil de limpiar

**Cuchillas de acero
autoafilables**

para un corte superior

Image: The Philips Multigroom Series 5000 demonstrating its 100% waterproof capability by being rinsed under water, and an illustration of its self-sharpening blades for superior cutting performance.

6.3 Storage

Store the trimmer and its accessories in the provided soft pouch in a dry, safe place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your Philips Multigroom Series 5000, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the device is fully charged. If the battery is depleted, connect it to the charger for at least 5 minutes for a quick charge.
- **Poor trimming performance:** Check if the blades are clean and free of hair. Ensure the correct attachment is securely fitted. If the issue persists, the blades may be worn (though designed for longevity, extreme use can affect them).
- **Device feels hot:** It is normal for the trimmer to warm up during extended use. If it becomes excessively hot, turn it off and allow it to cool down before resuming use.
- **Unusual noise:** Ensure no hair or debris is lodged in the trimmer head or motor. Clean the device thoroughly.

For further assistance, please contact Philips customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Name	MG5940/15

Power Source	Cordless (Rechargeable Battery)
Battery Type	Li-ion
Run Time	Up to 120 minutes
Quick Charge	5 minutes for one trim
Blade Material	Stainless Steel
Special Features	Self-sharpening blades, Ergonomic design, Cordless, Battery indicator, Rechargeable, 100% Waterproof, BeardSense Technology
Length Settings	11 (0.5 mm to 16 mm)
Target Audience	Men
Recommended Uses	Face, Scalp, Chest, Back Hair, Pubic Area

9. WARRANTY & SUPPORT

The Philips Multigroom Series 5000 is designed for durability and comes with a standard 2-year global warranty. You can extend this warranty by an additional 3 years (total of 5 years) by registering your device within 90 days of purchase on [Philips.com](https://philips.com) or through the GroomTribe application.

For product support, spare parts, or warranty claims, please visit the official Philips website or contact their customer service department in your region.