

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aero-Flex](#) /

› [Aero-Flex Snap & Trim Trimmer Head Replacement Manual for Craftsman & Black + Decker Auto-Feed String Trimmers](#)

## Aero-Flex STBDB16

# Aero-Flex Snap & Trim Trimmer Head Replacement Manual

For Craftsman & Black + Decker Auto-Feed String Trimmers (Model: STBDB16)

## 1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Aero-Flex Snap & Trim Trimmer Head. Designed for compatibility with specific Craftsman and Black + Decker auto-feed string trimmers, this system offers an efficient alternative to traditional string spools.

The Aero-Flex Snap & Trim system simplifies blade replacement and enhances trimming performance with its flexible, durable blades and ground-control glider feature.

## 2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Read and understand all safety warnings and instructions provided with your string trimmer before installing or using the Aero-Flex Snap & Trim head. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- Wear appropriate personal protective equipment (PPE), including eye protection, hearing protection, long pants, and sturdy footwear.
- Ensure the trimmer is turned off and the battery removed (for cordless models) or unplugged (for corded models) before performing any installation, maintenance, or blade changes.
- Keep bystanders, especially children and pets, at a safe distance (at least 50 feet/15 meters) from the operating area.
- Inspect the trimmer head and blades for damage before each use. Replace damaged blades immediately.
- Operate the trimmer only in well-lit conditions and on stable ground.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Aero-Flex Snap & Trim Trimmer Head
- 16 Flexible Replacement Blades



Figure 3.1: Aero-Flex Snap & Trim Trimmer Head and 16 Blades as packaged.

## 4. COMPATIBILITY

The Aero-Flex Snap & Trim Trimmer Head is specifically designed for use with **Craftsman** and **Black + Decker** auto-feed string trimmers. It is not compatible with bump-feed string trimmers.

### Compatible Models:

- **BLACK & DECKER:** BCASK890E1, BEST935, BESTA510, BESTA512, BESTE620, CST1000, CST1100, CST1200, CST2000, GH400, GH500, GH600, GH610, GH900, GH912, LCC140, LCC221, LCC222, LCC2223ZP, LCC340C, LST1018, LST120, LST126, LST136B, LST140, LST140C, LST201, LST220, LST300, LST400, LST420, LST522, LSTE522, LSTE523, LSTE523, MTC220, MTE912, NST1018, NST1024, NST1118, NST1810, NST2018, NST2118, PS76110A, ST6600, ST7000, ST7200, ST7700, ST7701, ST8600, ST9000

- **CRAFTSMAN:** CMCST900D1, CMCST910M1, CMEST900, CMEST913, CMESTHOS912, CMST915C1



Figure 4.1: The Aero-Flex Snap & Trim system is compatible with Craftsman and Black+Decker auto-feed trimmers.

## Fits Craftsman Auto-Feed String Trimmers



## Does NOT Fit Craftsman Bump Feed String Trimmers



Figure 4.2: Visual guide for compatible auto-feed trimmer heads versus incompatible bump-feed trimmer heads.

## 5. SETUP AND INSTALLATION

The Aero-Flex Snap & Trim system is designed for easy, tool-free installation, replacing your trimmer's existing auto-feed spool and spring.

1. **Prepare Your Trimmer:** Ensure your string trimmer is turned off and disconnected from its power source (battery

removed or unplugged).

2. **Remove Existing Head:** Carefully remove the existing auto-feed spool and spring from your trimmer head. This typically involves pressing tabs or twisting the cap to access the spool.
3. **Install Aero-Flex Blades:** Insert the flexible Aero-Flex blades into the designated slots on the new trimmer head. Ensure they are securely seated.
4. **Attach Aero-Flex Head:** Snap the Aero-Flex Snap & Trim head directly into place where the original spool and spring were located. No retrofitting is required.
5. **Verify Installation:** Gently tug on the installed head to ensure it is firmly attached and does not wobble.



Figure 5.1: Step-by-step diagram for replacing the auto-feed head with the Aero-Flex Snap & Trim head.



Figure 5.2: Demonstrates the simple process of inserting the flexible blades into the Aero-Flex head.

Your browser does not support the video tag.

Video 5.1: Official Aero-Flex video demonstrating the installation of the Snap & Trim head on Craftsman auto-feed trimmers.

## 6. OPERATING INSTRUCTIONS

Once the Aero-Flex Snap & Trim head is securely installed, operate your string trimmer according to its manufacturer's instructions. The Aero-Flex system enhances your trimming experience with the following features:

- **Efficient Cutting:** The aerodynamically designed blades are engineered to cut effectively even at lower speeds, potentially extending battery life and reducing effort.
- **Ground-Control Glider:** The integrated glider allows the trimmer head to rest on the ground, reducing arm fatigue and helping maintain a consistent cutting height. This feature can also convert your trimmer into a small plot mower.
- **Increased Cutting Control:** The neon-colored blades provide better visibility of your cutting path, allowing for more precise trimming and edging.



Figure 6.1: Demonstrates the Aero-Flex system in use for trimming along a fence line.



Figure 6.2: The ground-control glider allows the trimmer head to rest on the ground for easier operation.

## 7. BLADE REPLACEMENT

Aero-Flex blades are designed for durability but will eventually wear down or break. Replacing them is quick and easy, eliminating the need for spools, springs, or rewinding.

1. **Power Off:** Ensure the trimmer is turned off and disconnected from its power source.
2. **Remove Worn Blades:** Gently pull out the worn or broken blades from their slots on the Aero-Flex head.
3. **Insert New Blades:** Snap new flexible blades into the empty slots. Ensure they are fully seated and secure before resuming operation.



Figure 7.1: Illustrates the simple process of replacing a worn blade with a new one.

## 8. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your Aero-Flex Snap & Trim Trimmer Head.

- **Clean After Each Use:** Remove grass clippings and debris from the trimmer head and shield. A stiff brush or cloth can be used.
- **Inspect Blades:** Before each use, check the flexible blades for signs of wear, cracks, or damage. Replace them as needed.
- **Storage:** Store the trimmer head in a clean, dry place away from direct sunlight and extreme temperatures.

## 9. TROUBLESHOOTING

---

If you encounter issues with your Aero-Flex Snap & Trim Trimmer Head, consider the following:

- **Blades wearing quickly:**
  - Ensure you are not attempting to cut excessively thick or woody vegetation beyond the trimmer's capacity.
  - Avoid contact with hard surfaces like concrete, rocks, or metal fences, which can rapidly degrade blades.
  - Verify that the blades are correctly installed and fully seated.
- **Reduced cutting efficiency:**
  - Check if blades are worn and require replacement.
  - Ensure your trimmer's battery is fully charged or that it is receiving adequate power.
- **Trimmer head not staying attached:**
  - Re-check the installation steps to ensure the head is properly snapped into place.
  - Confirm compatibility with your specific trimmer model.

For further assistance, please contact Aero-Flex customer support.

## 10. SPECIFICATIONS

---

<b>Model Number</b>	STBDB16
<b>Product Dimensions</b>	5 x 5 x 5 inches
<b>Item Weight</b>	8.4 ounces
<b>Manufacturer</b>	Aero-Flex Technologies
<b>Compatibility</b>	Craftsman & Black + Decker Auto-Feed String Trimmers

## 11. WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your Aero-Flex Snap & Trim Trimmer Head, please contact Aero-Flex Technologies, Inc. directly. Contact details may be available on the product packaging or the official Aero-Flex website.

**Manufacturer:** Aero-Flex Technologies, Inc.

For additional information, you may visit the [Aero-Flex Store on Amazon](#).



© 2025 Aero-Flex Technologies. All rights reserved.