



[Manuals.plus](#) /

> [LG](#) /

> LG DF365FWS Dishwasher User Manual

## LG DF365FWS

# LG DF365FWS Dishwasher User Manual

Model: DF365FWS

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your LG DF365FWS dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before use.
- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids recommended for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Always load sharp items with the points down to avoid injury.
- Do not tamper with controls.
- Disconnect power before servicing.

## SETUP

---

### Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your dealer immediately.

### Location

Install the dishwasher on a level, stable surface. Ensure adequate clearance for the door to open fully. Avoid installing near heat sources or in direct sunlight.

## **Water Connection**

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Ensure all connections are tight to prevent leaks. The AquaStop safety system provides protection against water leaks.

## **Drain Connection**

Connect the drain hose to a suitable drain pipe, ensuring it is properly secured to prevent kinks or blockages.

## **Electrical Connection**

Connect the dishwasher to a dedicated, grounded electrical outlet. Refer to the rating label for voltage and frequency requirements. Do not use extension cords.

## **OPERATING INSTRUCTIONS**

---

### **Loading the Dishwasher**

The LG DF365FWS features an EasyRack+ flexible basket system and a 3rd cutlery tray for versatile loading. Ensure dishes do not block the spray arms.



Image: The interior of the LG DF365FWS dishwasher, showing the three racks (upper, middle, and lower) and the spray arms. The door is fully open.



Image: A side view of the LG DF365FWS dishwasher with the door open, showing the racks loaded with various dishes, including plates, glasses, and cutlery in the top tray.

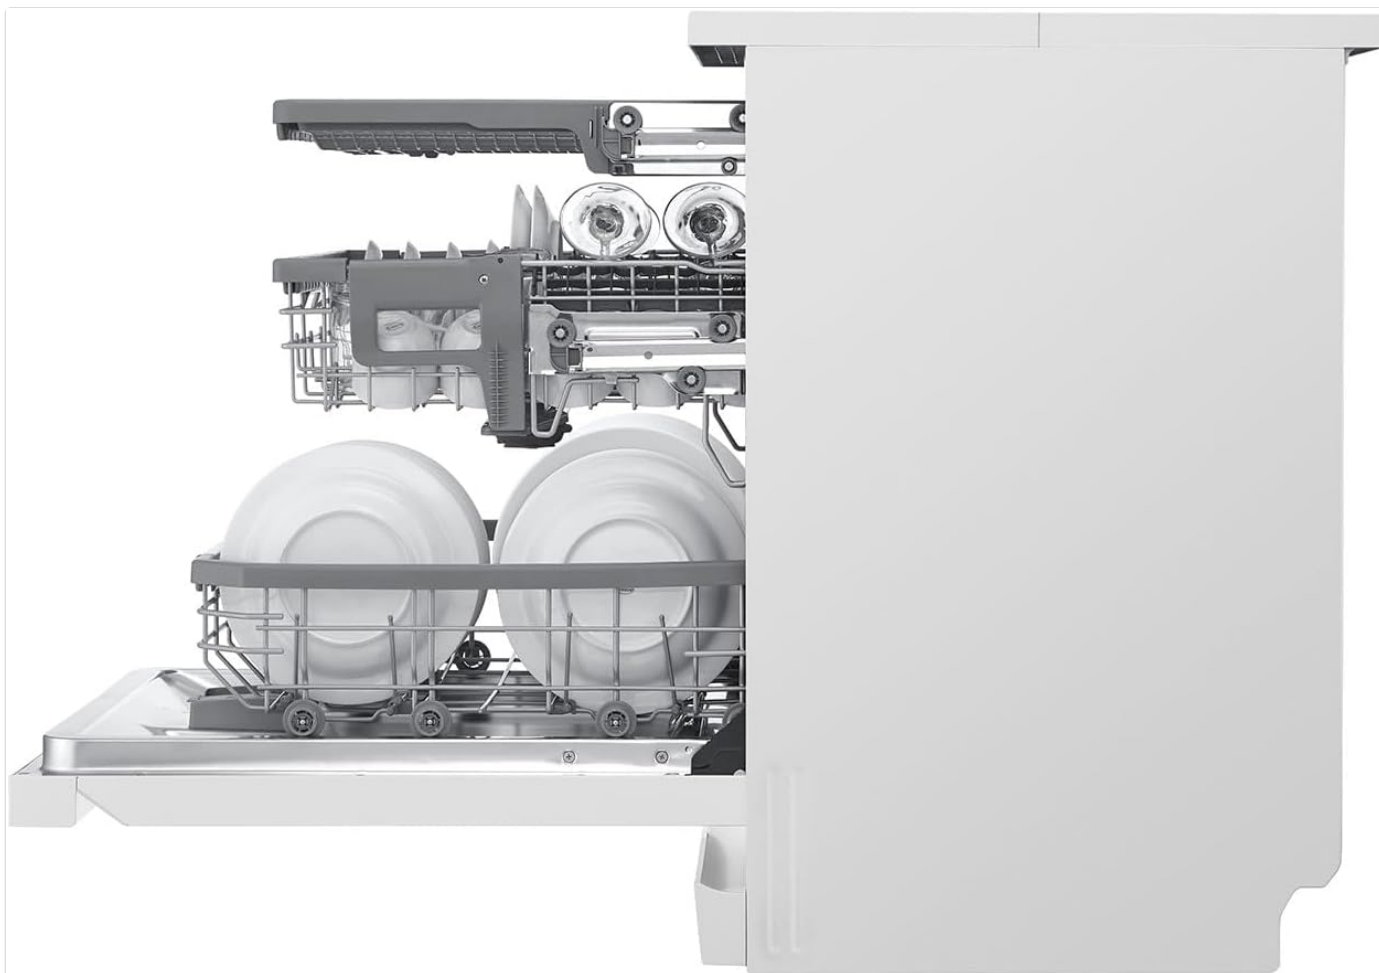


Image: A close-up side view of the LG DF365FWS dishwasher's interior, illustrating the middle and lower racks extended outwards, demonstrating the flexible loading system.

## Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Add rinse aid to the rinse aid dispenser as needed. The LED display will indicate when rinse aid is low.

## Selecting a Program

The LG DF365FWS offers various wash programs:

- **Auto:** Automatically detects soil level and adjusts wash cycle.
- **Intensive:** For heavily soiled dishes.
- **Delicate:** For fragile items.
- **Eco:** Energy-saving program.
- **Turbo:** For quick washing of lightly soiled dishes.
- **Program Download:** Additional cycles available via WiFi connectivity.

Additional options include Half Load, DualCare, Steam, High Temperature, Extra Dry, and Delay Start. Use the touch screen LED display to select your desired program and options.

## Starting a Wash Cycle

Close the dishwasher door firmly. Select your program and options, then press the Start button. The dishwasher will begin the cycle. The automatic door opening feature will activate at the end of the cycle to assist with drying.

## MAINTENANCE

---

---

## Cleaning the Filters

Regularly clean the filters located at the bottom of the dishwasher tub to ensure optimal performance. Remove food particles and rinse under running water.

## Cleaning the Spray Arms

Check the spray arm nozzles for blockages and clean them if necessary. Remove the spray arms by unscrewing them and rinse any debris.

## Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## Winterizing (if applicable)

If the dishwasher is to be left in an unheated place during winter, drain all water from the appliance to prevent freezing and damage.

---

## TROUBLESHOOTING

Before contacting service, refer to the following common issues and solutions:

- **Dishwasher does not start:** Check power supply, ensure door is fully closed, and program is selected.
- **Dishes are not clean:** Check spray arms for blockages, ensure proper loading, use adequate detergent, and clean filters.
- **Water not draining:** Check drain hose for kinks or blockages, clean filters.
- **Error codes on display:** Refer to the full user manual for specific error code meanings. The Smart Diagnosis feature can assist in identifying issues via the LG ThinQ app.
- **Excessive noise:** Ensure dishes are loaded correctly and not interfering with spray arms.

---

## SPECIFICATIONS

<b>Brand</b>	LG
<b>Model Number</b>	DF365FWS
<b>Capacity</b>	14 Place Settings
<b>Noise Level</b>	43 dB(A)
<b>Dimensions (W x D x H)</b>	60 x 60 x 85 cm
<b>Water Consumption (per cycle)</b>	9.5 Liters
<b>Energy Consumption (per 100 cycles)</b>	65 kWh
<b>Display Type</b>	LED with Touch Screen
<b>Connectivity</b>	WiFi (Smart Diagnosis)
<b>Key Technologies</b>	Inverter Direct Drive, TrueSteam, QuadWash, EasyRack+

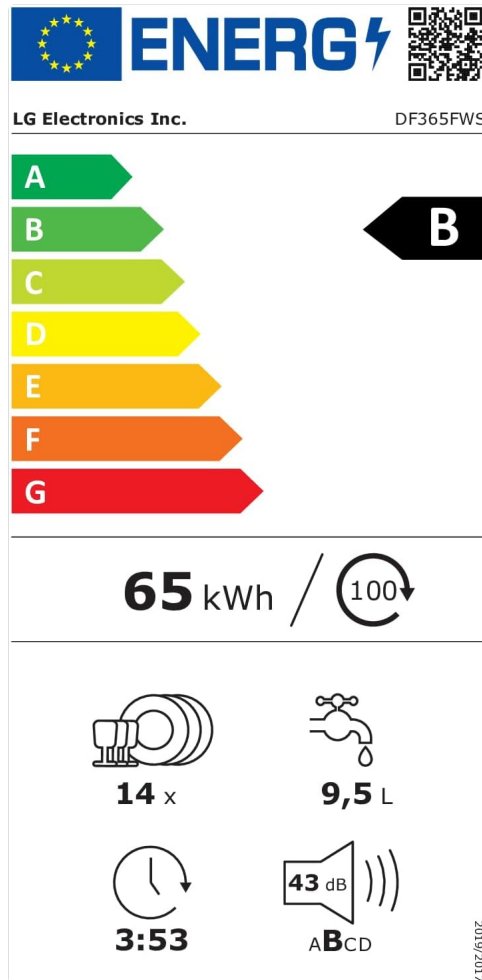


Image: The EU Energy Label for the LG DF365FWS dishwasher, showing an energy efficiency class B, 65 kWh per 100 cycles, 14 place settings, 9.5 liters water consumption, and 43 dB noise level. A QR code is visible for more information.

For detailed energy information, scan the QR code or visit: <https://eprel.ec.europa.eu/qr/1225712>

## WARRANTY AND SUPPORT

Your LG DF365FWS dishwasher comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, spare parts, or to schedule a service appointment, please contact LG Customer Support. You can find contact information on the LG official website or in the warranty documentation.

The Smart Diagnosis feature allows for quick and efficient troubleshooting by transmitting data to LG service centers via your smartphone. Consult the LG ThinQ app for more details.