

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FABULETTA](#) /
- › [FABULETTA FSV011 Corded Stick Vacuum Cleaner User Manual](#)

## FABULETTA FSV011

# FABULETTA FSV011 Corded Stick Vacuum Cleaner User Manual

Model: FSV011

## 1. PRODUCT OVERVIEW AND COMPONENTS

The FABULETTA FSV011 is a versatile 600W corded stick vacuum cleaner designed for efficient cleaning of various surfaces. It can be easily converted into a handheld vacuum for detailed cleaning.



Image: Main components of the FABULETTA FSV011 vacuum cleaner, including the main motor, telescopic tube, floor brush, 2-in-1 crevice brush, long crevice tool, wall mount, cleaning tool, and spare HEPA filters.

### Included Components:

- Main Motor Unit
- Adjustable Telescopic Alloy Tube
- Power Floor Brush with LED Lights
- 2-in-1 Crevice Brush
- Long Crevice Tool
- Wall Mount Bracket
- Cleaning Tool
- 2 HEPA Filters (1 pre-installed, 1 spare)
- User Manual

## 2. SETUP AND ASSEMBLY

Follow these steps to assemble your FABULETTA FSV011 vacuum cleaner.

### 2.1 Assembling the Stick Vacuum

1. **Attach the Telescopic Tube:** Insert the adjustable telescopic alloy tube into the main motor unit until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the power floor brush to the other end of the telescopic tube, ensuring it locks firmly.
3. **Install Wall Mount (Optional):** Choose a suitable location for the wall mount. Secure it to the wall using appropriate screws (not included). The accessory bracket can be attached to the wall mount for storing additional tools.



Image: Illustration of the stable wall support and accessory bracket for convenient storage of the vacuum and its tools.

### 2.2 Converting to Handheld Vacuum

To use as a handheld vacuum, detach the telescopic tube and floor brush from the main motor unit. Directly attach the desired accessory (2-in-1 crevice brush or long crevice tool) to the main motor unit.

## 3. OPERATING INSTRUCTIONS

Understand how to effectively use your FABULETTA FSV011 vacuum cleaner for various cleaning tasks.

### 3.1 Powering On/Off

The vacuum features a simple one-touch power button. Press the ON/OFF button located on the main motor unit to start or stop the vacuum.



Image: Close-up of the ON/OFF button on the main motor unit, indicating its location for easy operation.

### 3.2 Using the Floor Brush

- The power floor brush is equipped with 4 built-in LED lights to illuminate hidden debris.
- Its V-shaped design helps prevent hair entanglement on the roller.
- The brush head can rotate 160° sideways and 90° up and down, allowing access under furniture like beds and sofas.
- Suitable for wooden floors, tiled floors, and short-haired carpets.



## Flexible Floor Brush with 4 LED Lights

Every corner could be cleaned thoroughly

Image: The flexible floor brush with its 4 LED lights, demonstrating its ability to clean under low furniture and illuminate dust.

### 3.3 Using Attachments

- **2-in-1 Crevice Brush:** Ideal for cleaning sofas, curtains, and other upholstered surfaces.
- **Long Crevice Tool:** Perfect for narrow gaps, corners, window tracks, and bookshelves.



## Multi-Purpose Vacuum Cleaner

2 in 1 tool brush for sofa, carpet, crevices

Image: Demonstrates the vacuum's versatility, showing it used as a handheld unit with the 2-in-1 crevice brush for cleaning a keyboard and sofa, and as a stick vacuum for high-reach areas.

### 3.4 Adjustable Telescopic Tube

The telescopic alloy tube can be adjusted in height from 16.2 inches to 25.9 inches, allowing users of different heights to clean comfortably without bending over.



Image: A visual representation of the adjustable metal telescopic rod, showing its minimum (16.2 inches) and maximum (25.9 inches) lengths.

### 3.5 Cord Management

The 23-foot extra-long cord provides extended reach, allowing you to clean large areas without frequently changing power outlets. Ensure the cord is managed safely during operation to prevent tripping hazards.

Your browser does not support the video tag.

Video: This video demonstrates the assembly, various cleaning applications, and key features of the FABULETTA FSV011 vacuum cleaner, including its powerful suction and maneuverability.

## 4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 4.1 Emptying the Dust Cup

The 1-liter dust cup can be emptied with a single click. Position the dust cup over a trash receptacle and press the release button to open the bottom flap and dispose of collected debris.

### 4.2 Cleaning the Filters

The vacuum features a high-efficiency filtration system including cyclone, HEPA, mesh, and foam filters. Regular cleaning of the filters is crucial for maintaining suction power.

1. **Step 1: One-click empty.** Empty the dust cup as described above.
2. **Step 2: Remove the filter.** Twist and pull to remove the filter assembly from the dust cup.
3. **Step 3: Washable cleaning filters.** Separate the HEPA filter from the mesh and foam filters. Rinse all washable filter components under running water until clean.
4. **Step 4: Dry before use.** Allow all filter components to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum. Do not use the vacuum with wet filters.

## FABULETTA First Corded Vacuum, NO Battery Life Pressure



Image: A visual guide detailing the four steps for cleaning the vacuum's filters: one-click emptying, filter removal, washing, and drying before reuse.

### 4.3 Cleaning the V-shaped Floor Brush

Periodically check the V-shaped floor brush for any tangled hair or debris. Use the provided cleaning tool to cut and remove any entangled hair from the brush roll.

## 5. TROUBLESHOOTING

If you encounter issues with your FABULETTA FSV011, refer to the following common troubleshooting steps.

- **No Power:** Ensure the power cord is securely plugged into a working electrical outlet. Check for any tripped circuit breakers.
- **Reduced Suction:**
  - Check if the dust cup is full and needs emptying.
  - Inspect the filters for blockage and clean them thoroughly as per the maintenance instructions. Ensure they are completely dry before reinstallation.
  - Check the telescopic tube, floor brush, and attachments for any blockages.
- **Brush Roll Not Spinning:**
  - Ensure the vacuum is powered on and the floor brush is correctly attached.
  - Remove any hair or debris tangled around the brush roll.
- **Unusual Noise:** Turn off and unplug the vacuum immediately. Check for any foreign objects lodged in the brush roll, hose, or dust cup area.

If the issue persists after following these steps, please contact customer service for further assistance.

## 6. SPECIFICATIONS

| Feature | Detail |
|---------|--------|
|---------|--------|

|                            |  |
|----------------------------|--|
| Brand                      | FABULETTA  |
| Model Name                 | FSV011   |
| Power                      | 600W Brushed Motor                                   |
| Cord Length                | 23 Feet  |
| Filter Type                | HEPA Filter (High-Efficiency Filtration System)      |
| Dust Cup Capacity          | 1 Liter  |
| Main Motor Weight          | 3 Pounds   |
| Telescopic Tube Adjustment | 16.2 - 25.9 Inches                                   |
| Floor Brush Features       | V-shaped design, 4 LED lights, 160° swivel, 90° tilt |
| Product Dimensions         | 11.9"L x 11.6"W x 7.48"H                             |
| Color                      | Deep Grey  |

## 7. WARRANTY AND SUPPORT

FABULETTA provides comprehensive support for its products.

- **Warranty:** Your FABULETTA corded vacuum cleaner comes with a 12-month protection period from the date of purchase.
- **Customer Support:** 24-hour after-sales support is available.
- **Contact:** For any after-sales issues, please prepare your order number and product model (FSV011) and contact the professional customer service team via email or phone. Refer to the product packaging or official website for contact details.