

## CHAKEYAKE S70

# CHAKEYAKE S70 Kids Digital Waterproof Camera Instruction Manual

Model: S70 | Brand: CHAKEYAKE

## 1. INTRODUCTION

---

The CHAKEYAKE S70 Kids Digital Waterproof Camera is designed for young adventurers to capture their favorite moments. This durable camera features 20-megapixel photos, 1080P HD video recording, a 180° flip lens for selfies, and is waterproof up to 30 meters (100 feet). It comes with a 32GB SD card and various mounting accessories, making it suitable for both land and underwater activities.



Figure 1: CHAKEYAKE S70 Kids Digital Waterproof Camera with waterproof case and included 32GB SD card.

## 2. PRODUCT FEATURES

- **High-Resolution Capture:** 20-megapixel photos and 1080P HD video recording for clear images and videos.
- **2.4" IPS Screen:** Provides a clear display for viewing photos and videos.
- **180° Flip Lens:** Allows for easy selfie capture and versatile shooting angles.
- **Waterproof Design:** Submersible up to 30 meters (100 feet) with the included waterproof housing, ideal for swimming and underwater exploration.
- **Shockproof Protection:** Equipped with a durable housing to protect against accidental drops.
- **Creative Modes:** Includes 28 photo frames and 6 filters for personalized photo and video effects.
- **Time-Lapse Photography:** Capture sequences over time.
- **Built-in Games:** Features 4 puzzle games for entertainment.
- **Expandable Storage:** Comes with a 32GB SD card for ample storage.

- **Versatile Mounting:** Compatible with skateboard, bike helmet, tripod, and selfie stick mounts (some accessories included).

### 3. WHAT'S INCLUDED

---

The camera package typically includes the following items:

- CHAKEYAKE S70 Kids Digital Camera
- Waterproof Housing
- 32GB SD Card
- USB Charging Cable
- Lanyard
- Helmet Mount
- Helmet Strap
- Bike Mount
- User Manual

Your browser does not support the video tag.

*Video 1: Overview of the CHAKEYAKE Kids Camera and its accessories, demonstrating its features and included components.*

### 4. SETUP

---

#### 4.1. Inserting the SD Card and Charging

1. Locate the SD card slot on the camera.
2. Gently insert the provided 32GB SD card into the slot until it clicks into place.
3. Connect the camera to a power source using the USB charging cable. The charging indicator will illuminate.
4. Allow the camera to fully charge before first use.



*Figure 2: The camera connected to a laptop for charging via its USB cable.*

#### 4.2. Powering On/Off

- To power on, press and hold the power button (usually located on the top or side) until the screen illuminates.
- To power off, press and hold the power button again until the screen shuts down.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Basic Photo and Video Capture

- Once powered on, the camera typically defaults to photo mode.
- Press the shutter button (often a prominent button on top) to take a photo.
- To switch to video mode, navigate through the menu using the directional buttons and select the video icon. Press the shutter button to start/stop recording.

### 5.2. Using the 180° Flip Lens for Selfies

- The camera features a lens that can flip 180 degrees.
- Flip the lens towards the front of the camera to enable selfie mode. The screen will automatically adjust to show your reflection.
- Press the shutter button to capture selfies.

# Portable Selfie Kids Camera



Figure 3: The camera in selfie mode, demonstrating the 180° flip lens.

## 5.3. Applying Filters and Frames

- Access the camera's menu to find options for photo frames and filters.
- Select from the available 28 photo frames and 6 filters to add creative effects to your pictures.



Figure 4: Examples of photo frames and filters available on the camera.

## 5.4. Playback and Deletion

- To view captured photos and videos, enter playback mode via the menu.
- Use the directional buttons to browse through your media.
- To delete a photo or video, select it in playback mode and choose the delete option from the menu.

## 6. WATERPROOF USAGE

---

The CHAKEYAKE S70 camera is designed for underwater use up to 30 meters (100 feet) when properly enclosed in its waterproof housing.

### 6.1. Preparing for Underwater Use

1. Ensure the camera is securely placed inside the waterproof housing.
2. Verify that all latches and seals on the housing are completely closed and free from debris to prevent water leakage.
3. Before submerging, it is recommended to test the empty housing in water to confirm its waterproof integrity.



Figure 5: The camera in its waterproof case, ready for underwater adventures up to 100 feet.

Your browser does not support the video tag.

Video 2: Demonstration of the camera's waterproof capabilities and ease of use underwater.

Your browser does not support the video tag.

Video 3: Kids using the waterproof camera in a pool, highlighting its fun and functional aspects for water activities.

## 7. MOUNTING OPTIONS

---

The camera comes with various mounts to attach it to different surfaces, expanding its use for sports and outdoor activities.

- **Helmet Mount:** Securely attach the camera to a helmet to capture point-of-view footage during skiing,

biking, or other helmet-required activities.

- **Bike Mount:** Fasten the camera to bicycle handlebars to record rides.
- **Lanyard:** Use the durable lanyard to wear the camera around the neck for easy access and to prevent loss.



Figure 6: Various mounting options for the camera, including helmet and bike attachments.

## 8. BUILT-IN GAMES

For moments of downtime, the camera includes 4 engaging puzzle games to keep children entertained.



Figure 7: The camera's screen showing the selection of built-in puzzle games.

## 9. SPECIFICATIONS

Feature	Detail
Brand	CHAKEYAKE
Model Name	S70
Photo Resolution	20 Megapixels
Video Resolution	1080P HD
Screen Size	2.4 inches IPS
Waterproof Depth	Up to 30 meters (100 feet) with housing
Lens Type	180° Flip Lens
Storage	32GB SD Card (included)

Battery	1 Lithium Ion battery (included)
Product Dimensions	2.65 x 5.2 x 2.65 cm; 290 g

## 10. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth. After underwater use, rinse the waterproof housing with fresh water and allow it to air dry completely before opening.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the SD card if storing for extended periods.
- **Battery Care:** Charge the battery regularly, even if the camera is not in frequent use, to maintain battery health.

## 11. TROUBLESHOOTING

---

- **Camera Not Turning On:** Ensure the battery is charged. Connect the camera to the charger and wait a few minutes before attempting to power on again.
- **Cannot Take Photos/Videos:** Check if the SD card is correctly inserted and has sufficient free space. If the card is full, transfer files to a computer or delete unnecessary ones.
- **Poor Image Quality:** Ensure the lens is clean and free from smudges. Check lighting conditions.
- **Water Leakage (after underwater use):** Immediately power off the camera and remove the battery and SD card. Allow all components to dry thoroughly. Contact customer support if damage is suspected.

## 12. WARRANTY AND SUPPORT

---

For any questions or concerns regarding your CHAKEYAKE Kids Digital Waterproof Camera, please refer to the contact information provided in your product packaging or reach out to the seller directly for after-sales service.