

ULANZI ULANZI-PRO-BLACK

ULANZI 54" Magnetic Selfie Stick Tripod Pro Instruction Manual

Brand: ULANZI | Model: ULANZI-PRO-BLACK

INTRODUCTION

The ULANZI 54" Magnetic Selfie Stick Tripod Pro is a versatile 2-in-1 accessory designed for mobile phone photography and videography. It functions as both an extendable selfie stick and a stable tripod, featuring a magnetic phone holder compatible with MagSafe devices and a detachable wireless remote for convenient control. Its compact and portable design makes it an ideal tool for capturing moments on the go.

SAFETY INFORMATION

- Do not expose the device to extreme temperatures or direct sunlight.
- Keep the device away from water and other liquids.
- Ensure the tripod legs are fully deployed and stable on a flat surface before mounting a device, especially when extended to maximum height.
- Avoid using the selfie stick or tripod in strong winds when fully extended, as this may cause instability and potential damage to your device.
- Keep out of reach of children.

PACKAGE CONTENTS

- 1 x Magnetic Phone Selfie Stick Tripod Pro
- 1 x Charging Cable
- 1 x Magnetic Ring Sticker (for non-MagSafe devices)

- 1 x User Manual

Specifications

Materials: ABS+PC+Aluminum Alloy

Weight: 275g±10g

Dimensions: 60*49*243mm±10mm

Unfolded size: 1365mm±10mm (with the tripod extended)

Remote Distance: 10m

Battery Capacity: 50mAh

*Manually measured weight and size may not be accurate.

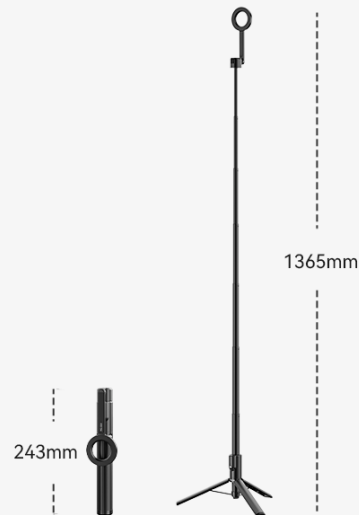 


Image: Contents of the ULANZI Selfie Stick Tripod Pro package.

PRODUCT OVERVIEW

The ULANZI Selfie Stick Tripod Pro integrates a magnetic phone holder, an extendable pole, and a stable tripod base. It also includes a detachable wireless remote for convenient photo and video capture.



Image: Overview of the ULANZI Selfie Stick Tripod Pro in different modes.

SETUP

1. Attaching Your Phone (MagSafe)

The magnetic phone holder is designed for swift attachment and removal. For MagSafe-compatible phones (iPhone 12 series and newer) or phones with MagSafe cases, simply align your device with the magnetic ring on the holder until it snaps securely into place. For other Android phones or older iPhone models, use the included magnetic ring sticker by adhering it to the back of your phone or phone case to enable magnetic attachment.

Ulanzi

Magnetic Phone Selfie Stick Tripod Pro

MG-003

 1s Easy Installation	 ≈275g Easy to Carry	 360° Swift Mode Change
 10m Remote Control	 7 Extendable Pole	 Aluminum Alloy Built



Image: Demonstrates the magnetic attachment of a phone to the tripod holder.

2. Extending and Collapsing the Pole

To extend the selfie stick, simply pull the top section upwards. The 7-section extendable pole allows for flexible height adjustment up to 53.9 inches (137cm). To collapse, push the sections back down until fully retracted.

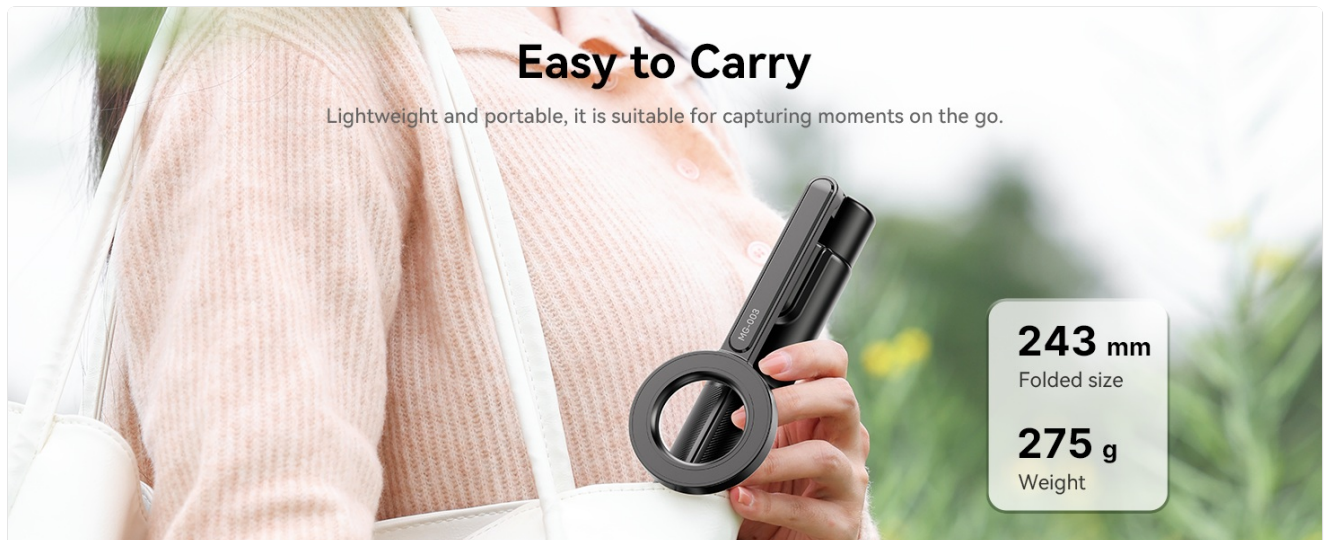 


Image: Illustrates the maximum height of the tripod and the mechanism for deploying legs.

3. Deploying Tripod Legs

The ULANZI Selfie Stick Pro features an innovative one-click setup mechanism. To deploy the tripod legs, push the button located at the bottom of the handle. The three legs will automatically extend and lock into place, providing a stable base. To fold the legs back, press the button again and gently push the legs inwards until they are flush with the main body.

OPERATING INSTRUCTIONS

1. Selfie Stick Mode

Hold the tripod by its handle with the legs folded. Extend the pole to your desired length. The magnetic phone holder allows for quick adjustments between horizontal and vertical shooting modes by simply rotating your phone.

2. Tripod Mode

Deploy the tripod legs as described in the Setup section. Place the tripod on a flat, stable surface. Extend the pole to the desired height. Ensure the phone is securely attached to the magnetic holder. This mode is ideal for stable shots, video calls, or time-lapse photography.

3. Using the Wireless Remote

The built-in magnetic wireless remote is detachable for convenient use. To pair the remote with your phone, turn on the remote and search for it in your phone's Bluetooth settings. Once paired, you can use the remote to trigger photos or start/stop video recording from up to 33 feet (10 meters) away.



Image: Demonstrates the use of the wireless remote with the tripod.

4. Adjusting Height and Angle

The ULANZI Selfie Stick Pro can be adjusted to various heights and angles for different shooting perspectives. The extendable pole allows for height adjustments, while the magnetic phone holder can be rotated 360 degrees to switch between horizontal and vertical shooting modes. The angle of the phone holder can also be tilted to achieve the desired shot.

5. Great Versatility

This product is compatible with other accessories featuring MagSafe, allowing for expanded creative possibilities in various scenarios such as vlogging, livestreaming, and content creation.

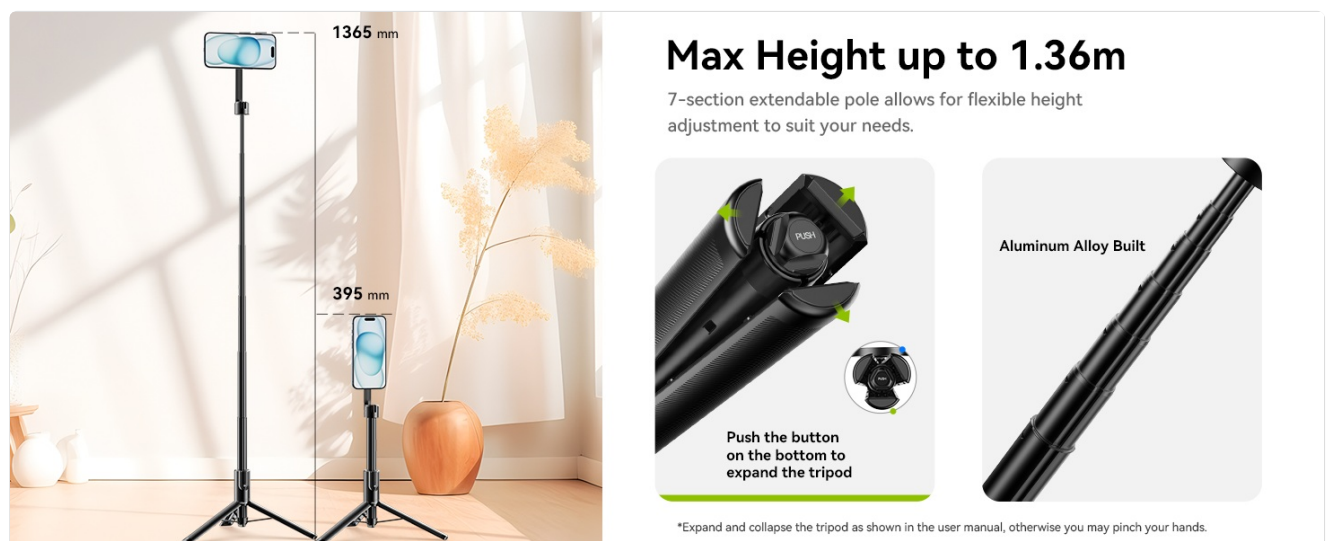 


Image: Examples of how the tripod can be used for various applications.

MAINTENANCE

- **Cleaning:** Wipe the product with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the tripod in a cool, dry place away from direct sunlight and moisture. Ensure it is fully collapsed before storage.
- **Battery:** Charge the wireless remote regularly to maintain battery health.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Tripod is unsteady when fully extended.	Small base of tripod legs, especially at maximum height or in windy conditions.	Ensure the tripod is on a flat, stable surface. Avoid using at maximum extension in windy environments. Consider using at a lower height for increased stability.
Wireless remote not connecting to phone.	Remote battery low, Bluetooth not enabled on phone, remote not in pairing mode, interference.	Charge the remote. Ensure Bluetooth is enabled on your phone. Put the remote into pairing mode (refer to remote's specific instructions if needed). Move closer to the phone and away from other Bluetooth devices.
Phone not attaching securely to magnetic holder.	Phone not MagSafe compatible, magnetic ring sticker not applied correctly, foreign objects on magnetic surface.	Ensure your phone is MagSafe compatible or that the magnetic ring sticker is properly applied. Clean the magnetic surfaces on both the phone/sticker and the holder.

SPECIFICATIONS

Feature	Detail
Materials	ABS+PC+Aluminum Alloy
Weight	9.7 oz (275g)
Folded Size	9.4 inches (24cm)
Unfolded Size (Max Height)	53.9 inches (137cm)
Remote Distance	33 feet (10m)

Feature	Detail
Remote Battery Capacity	50mAh
Compatible Devices	MagSafe-compatible iPhones (iPhone 12 series and newer), Android phones (with magnetic ring sticker)

Great Versatility

It is compatible with other accessories featuring MagSafe, keeping your creativity flowing.



*Only the selfie stick tripod included. The light is for illustration purposes only.

Image: Visual representation of product specifications.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official ULANZI website or contact the seller directly. Keep your purchase receipt for any warranty claims. Visit the [ULANZI Store](#) for more products and information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CSWC8BM6>

More documents and user manuals: <https://manuals.plus/>