

PUCHEN PUCHEN1234

PUCHEN 9L Portable Foldable Mini Washer User Manual

Model: PUCHEN1234

1. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Ensure the power supply matches the rated voltage (9V).
- Do not immerse the main unit in water.
- Keep out of reach of children.
- Unplug the appliance when not in use or before cleaning.
- Do not operate with a damaged cord or plug.
- Use only the provided draining basket for dehydration.
- Avoid washing heavy or bulky items that exceed the 2kg capacity.

2. PRODUCT OVERVIEW

The PUCHEN 9L Portable Foldable Mini Washer is designed for washing small loads of laundry, such as socks, underwear, and other delicate items. Its compact and foldable design makes it suitable for small living spaces, travel, or camping. It features a washing function and a dehydration drying capability using a special draining basket.



Figure 2.1: The PUCHEN Portable Mini Washer in its operational state.

Key Features:

- **9L Capacity:** Suitable for small laundry loads (under 2kg).
- **Foldable Design:** Easy to store and transport.
- **Dehydration Drying:** Includes a draining basket for spin-drying.
- **Quiet Operation:** Engineered with noise reduction technology.
- **Simple Controls:** Push-button interface for ease of use.

3. SETUP AND ASSEMBLY

The PUCHEN Mini Washer requires minimal assembly. Follow these steps for initial setup:

1. **Unpack:** Carefully remove the washer and all accessories from the packaging.
2. **Expand:** Gently pull the top and bottom sections of the washer to expand it to its full operational height (approximately 31.5cm).



Figure 3.1: Expanding the washer and accessing the control panel.

3. **Placement:** Place the washer on a stable, flat surface near a power outlet and a drainage area (sink, tub, or bucket).
4. **Power Connection:** Plug the power adapter into the washer's power input, then into a suitable electrical outlet. Ensure the rated voltage is 9V.

4. OPERATING INSTRUCTIONS

4.1 Washing Cycle

1. **Add Water:** Fill the washer with an appropriate amount of water. Do not exceed the maximum fill line.
2. **Add Detergent:** Add a small amount of liquid detergent suitable for delicate items.
3. **Load Laundry:** Place up to 2kg of laundry into the washer. For best results, wash socks and underwear separately for hygiene.



Figure 4.1: Loading laundry into the washer.

- 4. Start Wash:** Press the power button to turn on the appliance. Select the desired function button (e.g., wash cycle) to begin washing.



Figure 4.2: The washer in operation, showing water agitation.

5. **Drain Water:** Once the wash cycle is complete, use the flexible drainage system to empty the water.

4.2 Dehydration Drying

1. **Transfer Laundry:** After washing and draining, transfer the wet laundry into the provided draining basket.
2. **Insert Basket:** Place the draining basket with laundry into the washer.
3. **Start Dehydration:** Select the dehydration function on the control panel. The washer will spin to remove excess water.
4. **Remove Laundry:** Once the dehydration cycle is complete, remove the laundry. It will be damp but significantly drier than after washing.

4.3 Advanced Cleaning (Implied)

The washer's design, featuring a turbine core, contributes to deep and hygienic cleaning. Some models may incorporate advanced cleaning technologies, such as silver ion (Ag+) sterilization, to further enhance hygiene, particularly for delicate items like underwear and socks.



Figure 4.3: Visual representation of advanced cleaning features (e.g., Ag+ ions).

5. MAINTENANCE AND CARE

- **Cleaning:** After each use, rinse the interior of the washer with clean water and wipe it dry with a soft cloth.
- **Draining System:** Ensure the drainage system is clear of lint or debris.
- **Storage:** When not in use, fold the washer to its compact size (folded height 12.5cm) and store it in a dry place.
- **Do Not Use Abrasives:** Avoid using harsh chemicals or abrasive cleaners that could damage the plastic and resin materials.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Washer does not turn on.	Not plugged in; power outlet issue; power button not pressed.	Check power connection; try a different outlet; press power button firmly.

Problem	Possible Cause	Solution
Water does not drain.	Drain hose kinked or blocked; drainage system not properly positioned.	Check and clear drain hose; ensure proper positioning for gravity drainage.
Washer vibrates excessively.	Uneven load; washer not on a flat surface.	Distribute laundry evenly; place washer on a stable, flat surface.
Poor washing performance.	Overloaded; insufficient detergent; too little water.	Reduce load size; use appropriate amount of detergent; ensure adequate water level.

7. SPECIFICATIONS

Model: PUCHEN1234

Rated Voltage: 9V

Rated Washing Power: 36W

Rated Washing Drum Volume: 9L

Washing Capacity: Under 2kg

Product Material: Plastic, Resin

Product Size (Expanded): 31cm (Length) x 31cm (Width) x 31.5cm (Height)

Product Size (Folded): 31cm (Length) x 31cm (Width) x 12.5cm (Height)

Item Weight: Approximately 1.58kg

Controls Type: Push Button

Special Feature: Portable, Foldable, Dehydration Drying

Included Components: Draining Basket

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or contact PUCHEN customer service directly. Contact details are typically found on the product packaging or the official brand website.