

[Manuals.plus](#) /

› [PUCHEN](#) /

› PUCHEN 8L Portable Mini Foldable Washing Machine Instruction Manual

PUCHEN PUCHEN1234

PUCHEN 8L Portable Mini Foldable Washing Machine Instruction Manual

Model: PUCHEN1234

1. INTRODUCTION

Thank you for purchasing the PUCHEN 8L Portable Mini Foldable Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

This compact and foldable washing machine is designed for washing small garments such as socks, underwear, and other delicate items, making it ideal for small living spaces.

2. SAFETY INFORMATION

To ensure safe operation, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the main unit in water or other liquids.
- Ensure the power supply voltage matches the rating label on the appliance.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Keep children away from the appliance during operation.
- Do not operate the appliance with a damaged cord or plug.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel.
- This washing machine is not a dryer; it includes a spin-dry function to remove excess water, but clothes will not be completely dry.

3. PRODUCT OVERVIEW

Components

- Main Washing Unit (Foldable Tub)
- Lid

- Control Panel (Knob/Buttons)
- Drain Outlet
- Power Cord
- Draining Basket (for spin-drying)

Key Features

- **Compact and Portable Design:** Foldable for easy storage and transport.
- **8L Capacity:** Suitable for small loads of laundry.
- **Spin-Dry Function:** Integrated draining basket for removing excess water.
- **Easy Operation:** Simple controls for washing and draining cycles.
- **Top Load Access:** Convenient loading and unloading of garments.



Figure 3.1: The PUCHEN 8L Portable Mini Foldable Washing Machine in its operational, unfolded state.



Figure 3.2: The washing machine shown in both its folded and unfolded configurations, highlighting its portability and suitability for small items.

4. SETUP

4.1 Unpacking

1. Carefully remove the washing machine and all accessories from the packaging.
2. Inspect the appliance for any signs of damage. If damaged, do not use and contact customer support.
3. Ensure all components listed in Section 3.1 are present.

4.2 Placement

- Place the washing machine on a flat, stable, and dry surface.
- Ensure there is adequate space around the unit for ventilation and operation.
- Position the machine near a power outlet and a drain point (sink, bathtub, etc.) for easy water disposal.

4.3 Unfolding the Machine

1. Place the machine on a flat surface.

2. Gently pull the top and bottom sections apart until the foldable tub is fully extended and locked into place.
3. Ensure the lid is securely attached.



Figure 4.1: The washing machine shown in both its folded (right) and unfolded (left) states, illustrating its space-saving design.

5. OPERATING INSTRUCTIONS

5.1 Preparing for Wash

1. Ensure the drain outlet is closed.
2. Open the lid and place the garments into the washing tub. Do not overload the machine; ensure there is enough space for clothes to move freely.
3. Add an appropriate amount of water, ensuring it covers the clothes but does not exceed the maximum fill line.
4. Add a small amount of laundry detergent suitable for delicate items.
5. Close the lid securely.

5.2 Washing Cycle

1. Plug the power cord into a suitable electrical outlet.

2. Turn the control knob to select the desired wash time. The machine will begin the washing cycle.
3. Once the cycle is complete, the machine will stop automatically.



Figure 5.1: Operating the control panel to start a wash cycle.

5.3 Draining and Spin-Drying

1. After the wash cycle, open the drain outlet to empty the water. Position the machine over a sink or use a bucket to collect the water.
2. Once drained, close the drain outlet.
3. For spin-drying, place the draining basket inside the tub.
4. Carefully transfer the washed garments into the draining basket.
5. Close the lid and select the spin-dry function on the control panel (if available, or a short wash cycle to activate spinning).
6. The spin-dry function will remove excess water. Note that this machine does not fully dry clothes.
7. Remove garments and hang them to air dry completely.



Figure 5.2: The draining basket used for spin-drying, designed to separate moisture from clothing.

6. MAINTENANCE

6.1 Cleaning

- Always unplug the machine before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Rinse the interior of the tub with clean water after each use and wipe dry.
- Ensure the drain outlet is clear of any lint or debris.

6.2 Storage

- Ensure the machine is completely dry before folding and storing.
- To fold, gently push the top and bottom sections together until the tub collapses.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Control knob not set.	Check power connection; Check household power; Turn the control knob to a wash cycle.
Water does not drain	Drain outlet closed; Drain hose kinked or blocked.	Open the drain outlet; Check and clear any obstructions in the drain hose.
Excessive vibration/noise	Machine not on a flat surface; Overloaded; Unbalanced load.	Place on a stable, flat surface; Reduce load; Redistribute clothes evenly.
Poor washing results	Too much load; Insufficient detergent; Too little water.	Reduce load size; Use appropriate amount of detergent; Ensure water level covers clothes.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	PUCHEN
Model Number	PUCHEN1234
Capacity	8 Liters
Operation Mode	Fully Automatic
Controls Type	Knob
Special Feature	Portable, Foldable
Access Location	Top Load
Included Components	Draining Basket
Item Weight	Approx. 50 Grams (1.76 ounces) - <i>Note: This weight seems unusually low for the product size.</i>
Unfolded Dimensions (Approx.)	29.5 cm (Width) x 29 cm (Height)
Folded Dimensions (Approx.)	29.5 cm (Width) x 14.5 cm (Height)

Product information



Product Information



Figure 8.1: Product dimensions in unfolded and folded configurations.

Note: Product specifications are subject to change without prior notice. The 'Item Weight' and 'Package Dimensions' from some listings may refer to packaging or specific components; please refer to the product itself for accurate measurements.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly.

Manufacturer: PUCHEN

ASIN: B0CSWFXCS7

