

Yunseity Yunseitygae9vnc58d-11

Yunseity 4G Unlocked Flip Design Senior Cell Phone User Manual

Model: Yunseitygae9vnc58d-11

1. PRODUCT OVERVIEW

The Yunseity 4G Unlocked Flip Design Senior Cell Phone is engineered for ease of use, featuring large buttons, clear sound, and a simple operating system. It supports 4G networks and includes essential functions for daily communication and safety.

- **Flip Design:** Answer calls by flipping open the phone. Features large buttons and voice dialing for simplified use.
- **Dual Screens:** Equipped with a 2.6-inch high-definition main screen and a 1.77-inch external color high-definition screen, displaying large fonts and icons.
- **Powerful Functions:** Includes a powerful speaker, 4800mAh battery for long standby, flashlight, FM radio, camera, photo speed dial, GPS positioning, alarm clock, calculator, and calendar.
- **Wide Network Compatibility:** Supports 2G, 3G, and 4G network bands (GSM, CDMA, WCDMA, FDD, TDD) for reliable connectivity.
- **SOS with GPS:** Features an SOS function with GPS positioning. Includes 9 speed dial buttons for family contacts and 3 dedicated shortcut buttons.



Figure 1.1: The Yunseity flip phone in its open position, showcasing the main display and large keypad.

2. WHAT'S INCLUDED

Your Yunseity Senior Cell Phone package contains the following items:

- Yunseity 4G Unlocked Flip Design Senior Cell Phone
- USB Cable
- Battery (4800mAh)



Figure 2.1: Package contents: phone, battery, and USB cable.

3. INITIAL SETUP

3.1. Installing the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. Insert your SIM card(s) into the designated slot(s) according to the diagram inside the phone. Ensure the gold contacts face downwards.
3. Insert the battery into the battery compartment, aligning the contacts.
4. Replace the back cover until it clicks securely into place.



Figure 3.1: Phone screen prompting for SIM card insertion.

3.2. Charging the Battery

Before first use, fully charge the phone's battery.

1. Connect the small end of the USB cable to the charging port on the phone.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the screen will show charging progress. Disconnect the charger once the battery is full.

4. OPERATING YOUR PHONE

4.1. Power On/Off

- To power on, press and hold the Power/End Call button until the screen lights up.
- To power off, press and hold the Power/End Call button, then select 'Power off' from the options.

4.2. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the large keypad and press the Call button.
- **Receiving a Call:** Flip open the phone to answer an incoming call, or press the Call button.
- **Voice Dialing:** Utilize the voice dialing function for hands-free calling. Refer to the phone's on-screen menu for setup.

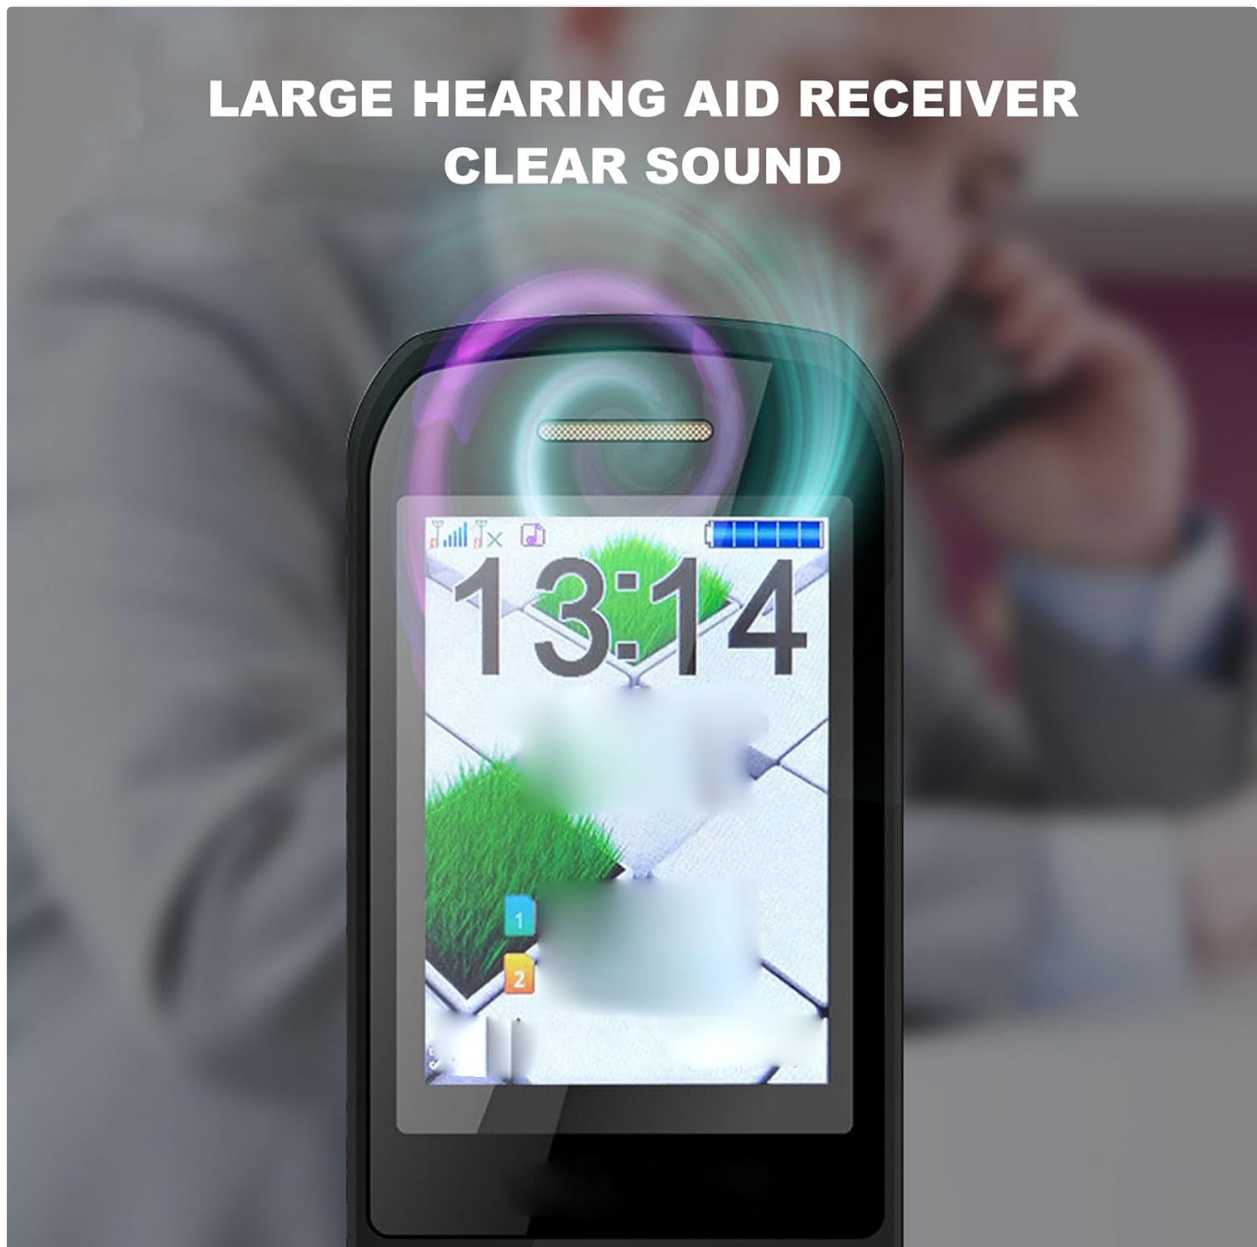


Figure 4.1: The phone features a large hearing aid receiver for clear sound.

4.3. Understanding Dual Screens

The phone features both an internal main screen and an external display.

- The **external screen** displays essential information such as time, date, battery status, and incoming call notifications without needing to open the phone.
- The **main internal screen** provides full access to all phone functions, menus, and applications.



Figure 4.2: Dual display functionality, showing external screen information and internal screen upon opening.

**2.6 inch high definition
main screen**

**1.77 inch external color
high definition screen**

Large fonts and icons



Figure 4.3: Screen dimensions and large font display for improved visibility.

4.4. SOS and Speed Dial Functions

- **SOS Function:** In an emergency, press and hold the dedicated SOS button. The phone will automatically dial pre-set emergency contacts and send GPS location information.
- **Speed Dial:** Set up to 9 speed dial numbers for quick access to frequently called family members or friends. Refer to the phone's settings menu for configuration.
- **Shortcut Buttons:** Utilize the 3 dedicated shortcut buttons for quick access to specific functions or contacts.

4.5. Other Powerful Functions

Your phone includes several useful features:

- **Flashlight:** Activate the built-in flashlight for illumination in dark environments.
- **FM Radio:** Listen to your favorite radio stations.
- **Camera:** Capture photos using the integrated camera.
- **GPS Positioning:** For location services, especially useful with the SOS function.

- **Alarm Clock, Calculator, Calendar:** Standard utility functions for daily organization.



Figure 4.4: Overview of key features including flashlight, HD call, and powerful speaker.

5. NETWORK COMPATIBILITY

This phone is designed for wide network compatibility, supporting various 2G, 3G, and 4G bands:

- **GSM:** B3 (1800MHz), B5 (850MHz), B8 (900MHz)
- **CDMA:** BC0 (800MHz)
- **WCDMA:** B1 (2100MHz), B5 (850MHz), B8 (900MHz)
- **FDD-LTE:** B1 (2100MHz), B3 (1800MHz), B5 (850MHz), B7 (2600MHz), B8 (900MHz), B20 (800MHz)
- **TDD-LTE:** B38 (2600MHz), B39 (1900MHz), B40 (2300MHz), B41 (2500MHz)

Ensure your cellular carrier supports these bands for optimal performance.

6. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** Do not expose the battery to extreme temperatures. Charge regularly, but avoid overcharging for extended periods.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and moisture.
- **Handling:** Avoid dropping the phone or subjecting it to strong impacts.

7. TROUBLESHOOTING

Common Issues and Solutions:

Issue	Possible Solution
Phone does not power on	Ensure the battery is correctly installed and charged. Connect to charger and try again.
No network signal	Check if the SIM card is properly inserted. Verify that your carrier's network is available in your area and supports the phone's bands. Restart the phone.
Cannot make/receive calls	Check network signal. Ensure sufficient credit/plan with your carrier. Verify call barring settings.
Sound is unclear or low	Adjust volume settings. Ensure the speaker/earpiece is not obstructed.
Battery drains quickly	Reduce screen brightness. Close unused applications. Limit background data usage.

If problems persist, please contact customer support.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Yunseity

Feature	Specification
Model Name	Yunseitygae9vnc58d-11
Operating System	KaiOS
Main Screen Size	2.6 Inches
External Screen Size	1.77 Inches
Main Screen Resolution	240 x 320
External Screen Resolution	128 x 144
Battery Capacity	4800 Milliamp Hours
Memory Storage Capacity	32 MB
RAM Memory Installed Size	32 MB
Connectivity Technologies	USB
Wireless Communication Technologies	Cellular
GPS	True
Audio Jack	3.5 mm
Form Factor	Flip
Color	Black
Item Weight	7.3 ounces
Package Dimensions	5.51 x 3.15 x 2.76 inches
Country of Origin	China

9. WARRANTY AND SUPPORT

Your Yunseity 4G Unlocked Flip Design Senior Cell Phone is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Yunseity customer service through the retailer where you purchased the product or visit the official Yunseity brand store online.

Keep your purchase receipt as proof of purchase for warranty purposes.

