



Manuals.plus /

- › **No Brand Product /**
- › MiLi MiTag HD-P16 Compatible Replacement Battery with Tool Kit User Manual

No Brand Product HD-P16

MiLi MiTag HD-P16 Compatible Replacement Battery with Tool Kit

Model: HD-P16

INTRODUCTION

This product provides a compatible replacement battery for the MiLi MiTag HD-P16, accompanied by a basic tool kit to assist with the battery replacement process. This manual offers general guidance for the product's use and maintenance.



Image: The MiLi MiTag HD-P16 compatible replacement battery, shown alongside the included tool kit. The kit typically contains a prying tool, a screwdriver, and a triangular opening pick, designed to aid in the disassembly and reassembly of the device for battery replacement.

SETUP AND INSTALLATION

The battery replacement process for the MiLi MiTag HD-P16 requires careful handling and specific steps. Please note that this product does not include a detailed instruction manual for the replacement procedure. Users are advised to:

- **Research:** Search for online video tutorials or guides specific to replacing the battery in the MiLi MiTag HD-P16 or

similar devices. Websites like YouTube often host user-generated repair guides.

- **Prepare:** Ensure you have a clean, well-lit workspace. Gather any additional tools that might be recommended by online guides, such as tweezers or a heat gun (if applicable for adhesive removal).
- **Safety First:** Disconnect the device from any power source before beginning. Handle the battery carefully to avoid puncturing or damaging it.
- **Use Tools:** Utilize the provided tool kit (screwdriver, prying tools) to carefully open the device and remove the old battery. Be gentle to avoid damaging internal components.
- **Install New Battery:** Connect the new battery correctly and secure it in place. Reassemble the device carefully, ensuring all connections are properly made.

Disclaimer: Battery replacement is performed at your own risk. The seller cannot provide warranty or support for the replacement process itself, nor for any damage incurred during installation.



**お得な
工具キット付き**

付属品

BEST inc 限定

免責事項：幅広い機種でお使いいただける一般工具を付属しており、機種独自の専用工具は対応外となります。バッテリー交換及び工具の用法はネット動画などをご参考に自己責任にて当社での保証及びサポートは致しかねます。説明書は付属外となります。入荷状況により画像と異なる場合があります。画像比率はイメージです。

Image: A closer look at the basic tool kit included with the replacement battery. This kit typically includes a small screwdriver and plastic prying tools, which are essential for safely opening electronic devices without causing damage to the casing or internal components.

OPERATING THE DEVICE AFTER BATTERY REPLACEMENT

After successfully replacing the battery, follow these steps to ensure proper operation:

- 1. Initial Charge:** Connect your MiLi MiTag HD-P16 to its charger. Allow it to charge fully before its first use. This helps calibrate the new battery.
- 2. Power On:** Once charged, power on the device. Verify that it functions as expected.
- 3. Monitor Performance:** Observe the battery life and charging behavior over the first few charge cycles to ensure optimal performance.

MAINTENANCE

To maximize the lifespan and performance of your new battery:

- **Avoid Extreme Temperatures:** Do not expose the device to very high or very low temperatures, as this can degrade battery performance.
- **Regular Charging:** Avoid completely draining the battery frequently. Charge it regularly, ideally keeping it between 20% and 80% for optimal health.
- **Proper Storage:** If storing the device for an extended period, ensure the battery is charged to about 50% and store it in a cool, dry place.

TROUBLESHOOTING

If you encounter issues after battery replacement, consider the following:

Problem	Possible Cause	Solution
Device does not power on.	Battery not properly connected; battery completely drained; faulty battery.	Ensure battery is securely connected. Charge the device for at least 30 minutes. If issues persist, re-check installation or consider if the battery is defective.
Battery drains quickly.	Improper installation; background apps; battery not fully calibrated.	Perform a few full charge/discharge cycles to calibrate the battery. Close unnecessary background applications. Re-check installation.
Device not charging.	Charging port issue; battery connection issue; faulty charger.	Try a different charger and cable. Inspect the charging port for debris. Re-check battery connection inside the device.

If troubleshooting steps do not resolve the issue, professional assistance may be required. Remember that the seller's warranty is limited to initial product defects.

SPECIFICATIONS

Brand: No Brand Product

Model: HD-P16 (Manufacturer Reference: 001)

ASIN: B0CSX5DDX8

Battery Type: Lithium Polymer

Voltage: 3.8 Volts

Number of Batteries: 1 (12V type battery)

Recommended Use: Remote control vehicles (*Note: This specification may be generic and not directly applicable to the MiTag device.*)

WARRANTY AND SUPPORT

Please read the following important information regarding warranty and support for this product:

- **DIY Installation:** Battery replacement should be performed at your own risk. The seller does not provide warranty or support for the installation process itself.
- **No Instruction Manual:** A detailed instruction manual for battery replacement is not included with this product. Users are encouraged to refer to online resources for guidance.
- **Initial Defect Warranty:** For initial defects of the product, please contact the seller within **7 days** of product arrival. Claims made after this period may not be accepted.
- **Warranty Limit:** The maximum warranty liability is limited to the sales amount of the product. The seller is not responsible for any liability beyond this amount for any reason.
- **No Returns/Exchanges for Customer Convenience:** Returns or exchanges due to customer convenience are not accepted.
- **Resale Disclaimer:** The seller is not responsible for any intervention or liability for troubles that may arise with third parties if the product is resold.

For any inquiries regarding initial product defects, please contact the seller directly through the platform where the purchase was made.