

COBIZI COBIZI_0121_US_90GR_1

COBIZI 10x20 Pop Up Canopy Tent Instruction Manual

Brand: COBIZI | **Model:** COBIZI_0121_US_90GR_1

Heavy Duty Canopy with Awning, UPF 50+, All Season Wind Waterproof

INTRODUCTION

This manual provides detailed instructions for the safe and efficient setup, operation, and maintenance of your COBIZI 10x20 Pop Up Canopy Tent. Please read this manual thoroughly before assembly and use to ensure proper functionality and longevity of your product.

The COBIZI 10x20 Pop Up Canopy Tent is designed for commercial outdoor use, street vendors, parties, and various outdoor events. It features a heavy-duty alloy steel frame, 500D Oxford cloth with double PU coating for UPF 50+ UV protection, and 100% waterproofing. The tent includes a removable awning and adjustable height settings for versatile use.

SAFETY INFORMATION

- Always secure the tent with the included stakes and ropes, especially in windy conditions. Failure to do so may result in damage to the tent or injury.
- Do not use the canopy in extreme weather conditions such as heavy winds (above 18 mph), heavy rain, or snow. Disassemble and store the canopy during such conditions.
- Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- Ensure proper ventilation if using heating or cooking appliances under the canopy.
- Supervise children around the canopy to prevent accidents.
- Avoid setting up the canopy near power lines or other electrical hazards.
- Ensure the ground is level and clear of sharp objects before setup.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present in your package:

- Pop up Canopy Frame x 1Pcs
- 10'x20' Canopy Tent Top Cover x 1Pcs
- Sidewall x 4Pcs (2 with window, 2 solid color)
- Sandbag x 4Pcs
- Ground Nail x 10Pcs
- Rope x 4Pcs
- Wheeled Storage Bag x 1Pcs
- Removable Awning x 1Pcs
- Awning Support Set x 1Set



Image: All components included in the COBIZI 10x20 Pop Up Canopy Tent package.



Image: Detailed view of the package contents, including frame, top cover, sidewalls, sandbags, ground nails, ropes, wheeled bag, and awning support set.

SETUP INSTRUCTIONS

It is recommended that at least two people assist with the setup of this canopy tent.

Step 1: Unpack and Partially Open the Frame

Move the wheeled storage bag to an open and flat area. Unzip the bag and carefully remove the pop-up frame. With at least two people, partially open the frame to about 50% of its full width.

Your browser does not support the video tag.

Video: Demonstrates unpacking the wheeled storage bag and partially opening the canopy frame.

TOOL-FREE INSTALLATION



1. Move to an open and flat area.



2. Open the frame to 50%.



3. Install canopy top cover and fully open the frame.




6. Install sidewalls



5. Install awnings.



4. Adjust height.

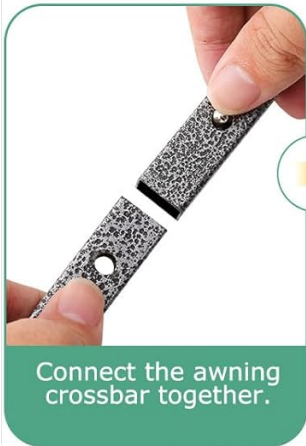

Connect the awning crossbar together.



Insert and pass the awning fabric.



Use the screws and nuts connect and fix the awning support rod and crossbar.



Install the awning support on the tent frame.

Image: Visual guide for opening the frame to 50%.

Step 2: Install Canopy Top Cover

Place the canopy top cover over the partially opened frame. Ensure the cover is centered and aligned. Secure the canopy top cover to the frame using the integrated hook and loop tape fasteners at each corner and along the frame.

Step 3: Fully Extend Frame and Secure Thumb Buttons

With the top cover in place, fully pull the frame apart until it is completely extended. Secure all thumb buttons on the frame legs and crossbars to lock the frame into position. Ensure all locking mechanisms are engaged for stability.

Step 4: Adjust Height

Adjust the height of the canopy by pressing the thumb latch lock system on each leg and extending the legs to your desired height. There are 3 height settings available: 220cm/86.6inch, 230cm/90.6inch, and 240cm/94.5inch.

Your browser does not support the video tag.

Video: Demonstrates adjusting the height of the canopy tent.

Step 5: Install Awning (Optional)

If using the removable awning, connect the awning crossbar pieces together. Insert and pass the awning fabric over the crossbar. Use the screws and nuts to connect and fix the awning support rod and crossbar. Finally, install the awning support on the tent frame.



Image: Visual guide for installing the removable awning.

Your browser does not support the video tag.

Video: Demonstrates the installation of the removable awning.

Step 6: Install Sidewalls (Optional)

Attach the sidewalls to the canopy frame using the hook and loop fasteners. You can install any number of sidewalls as needed. Ensure they are securely fastened to provide maximum protection.

Step 7: Secure the Canopy

Fill the provided sandbags with sand and attach them to the canopy legs for added stability. Use the ground nails and ropes to anchor the canopy securely to the ground, especially in outdoor conditions.

Your browser does not support the video tag.

Video: Demonstrates securing the canopy tent with sandbags.

OPERATING INSTRUCTIONS

Adjusting Height

To adjust the canopy height, press the thumb latch lock on each leg and slide the inner leg up or down to the desired position. Ensure the latch clicks into place securely at one of the three available height settings.

Using the Removable Awning and Sidewalls

The removable awning provides additional shade and can be easily attached or detached as needed. The four sidewalls (two with windows, two solid) offer flexibility for privacy, weather protection, or open-air use. Attach them using the hook and loop fasteners along the top and sides of the frame.

20% MORE SHADE BY AWNING



No Awning + No Sidewall



With Awning + No Sidewall



No Awning + 4 Sidewall



With Awning + 4 Sidewall



Visual Window Design



Buckle Design



Fixed Design

Image: Various configurations of the canopy tent with and without awning and sidewalls.

Weather Considerations

The canopy is designed to withstand up to Level 4 winds (under 18 mph) and offers 100% waterproofing with 1500mm waterproof pressure. It also provides UPF 50+ UV protection, blocking 99% of UV rays. However, for optimal safety and product longevity, it is recommended to take down the canopy during severe weather conditions.

MAINTENANCE

- **Cleaning:** Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners, as these can damage the fabric's coating. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the alloy steel frame regularly for any signs of rust, damage, or loose connections. Clean any dirt or debris from the frame. The powder-coated finish helps prevent rust and corrosion.
- **Storage:** Ensure the canopy fabric and frame are completely dry before folding and storing them in the wheeled storage bag. Store in a cool, dry place away from direct sunlight and extreme temperatures to

prevent mildew and material degradation.

- **Fasteners:** Check all hook and loop fasteners and zippers for wear and tear. Replace if necessary to maintain secure attachment of the top cover and sidewalls.

TROUBLESHOOTING


Problem	Possible Cause	Solution
Canopy is unstable or wobbles.	Not properly anchored; legs not fully extended/locked.	Ensure all legs are fully extended and thumb buttons are locked. Use sandbags, ground nails, and ropes to secure the canopy.
Water pooling on the canopy top.	Insufficient tension on the top cover; uneven ground.	Ensure the top cover is stretched taut and securely fastened. Check if the ground is level. Adjust leg heights if necessary to create proper slope for water runoff.
Difficulty extending or collapsing the frame.	Frame joints are stiff or misaligned.	Ensure all locking mechanisms are disengaged before collapsing. Apply a silicone-based lubricant to stiff joints if needed. Ensure multiple people assist to apply even pressure.
Sidewalls not attaching securely.	Hook and loop fasteners are dirty or worn.	Clean the hook and loop fasteners. If severely worn, consider replacing the sidewalls or repairing the fasteners.

SPECIFICATIONS

- **Brand:** COBIZI
- **Model Number:** COBIZI_0121_US_90GR_1
- **Material:** 500D PU Oxford Cloth, Alloy Steel
- **Color:** Gray
- **Item Weight:** 112 Pounds (approx. 50.8 kg)
- **Dimensions (L x W x H):** 236.2"L x 141.7"W x 129.9"H (approx. 600cm L x 360cm W x 330cm H)
- **Floor Area:** 200 Square Feet
- **Shade Area:** 240 Square Feet
- **Height Settings:** 3 adjustable settings (220cm/86.6in, 230cm/90.6in, 240cm/94.5in)
- **UV Protection:** UPF 50+, blocks 99% of UV rays
- **Water Resistance:** 100% Waterproof (1500mm waterproof pressure)
- **Wind Resistance:** Can withstand Level 4 winds (<18 mph)
- **Frame Type:** Heavy Duty Alloy Steel Frame (Outer Tube: 32x32x0.7mm, Inner Tube: 25x25x0.6mm, Cross Tube: 13x25x0.6mm)
- **Closure Type:** Hook & Loop, Zipper

- Required Assembly: Yes

10X20 CANOPY SHOW DETAILS

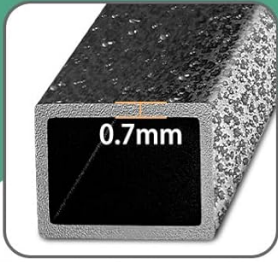


1 Upgrade Thickened Frame




2 Top Fixed Design



 
3 Thumb Button

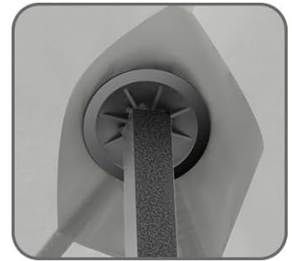

4 Reinforced Peak Protection

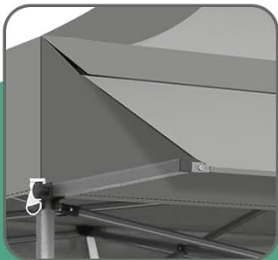 

7 2 Removable Awning

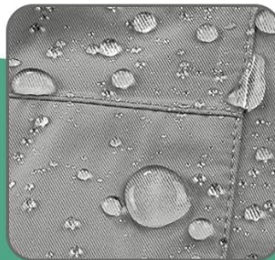 

6 Waterproof and UV Protection



5 3 Adjustable Heights

Image: Detailed view of the canopy frame, showing reinforced peak, thumb button, and adjustable heights.

WHY CHOOSING US?


The Quality of Canopies Mainly Depends on the Top Cloth and Frame.



Ours



420D Thickened Top Cloth with 2 Layers PU Coating
Tear-Resistant + Waterproof + Sunproof

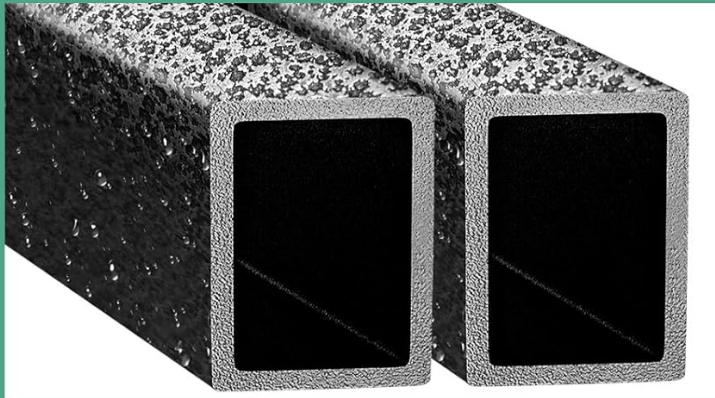

0.7MM Thickened Alloy Steel with Powder Coating
Resistant to Break + Corrosion-Resistant



Poor Quality Products



210D Top Cloth without Coating
Easy to Tear + Easy to Leak



0.4MM Steel without Coating
Easy to Break + Easy to Rust

Image: Comparison of canopy materials and frame thickness, highlighting 420D thickened top cloth and 0.7mm thickened alloy steel.

Your browser does not support the video tag.

Video: Highlights the alloy steel frame construction and its durability.

WARRANTY AND SUPPORT

Your COBIZI 10x20 Pop Up Canopy Tent comes with the following warranty:

- **Canopy Frame:** One year after-sale protection.
- **Fabrics and Accessories:** Six months after-sale protection.

If you encounter any questions or issues with your product, please contact our professional service team. We are committed to providing support and will respond within 24 hours.

For further assistance, please refer to the contact information provided with your purchase or visit the official

