



Manuals.plus /

› HYTRIC /

› HYTRIC A3503C 3.5L Electric Hot Pot User Manual

HYTRIC A3503C

HYTRIC A3503C 3.5L Electric Hot Pot User Manual

1. INTRODUCTION

Thank you for purchasing the HYTRIC A3503C 3.5L Electric Hot Pot. This manual provides important information for the safe and efficient use of your appliance. Please read it thoroughly before first use and retain it for future reference.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

Components

- Electric Hot Pot Main Unit
- Glass Lid with Handle
- Detachable Power Cord

Key Features

- **Capacity:** 3.5 Liters (110 oz)
- **Non-Stick Coating:** For easy cooking and cleaning.
- **Adjustable Power Control:** Low, Mid, High settings for versatile cooking.
- **Cool-Touch Handles:** Designed for safe handling during and after cooking.
- **Safety Features:** Over-heating protection and dry-burn protection.
- **Visual Glass Cover:** Allows monitoring of cooking progress.
- **Multi-Hole Heat Dissipation:** Ensures efficient cooling and extends appliance life.



Figure 2.1: Overview of the HYTRIC A3503C Electric Hot Pot.

3.5 L (110 OZ) CAPACITY

SERVING FOR 1-5 PEOPLE



Figure 2.2: The 3-level adjustable power control for various cooking needs.

NON-STICK COATING

Healthy & Easy to Clean



BPA free



Figure 2.3: The 3.5L (110 oz) capacity is suitable for 1-5 people.

COOL TOUCH HANDLES

EASY TO HOLD

Insulates heat transfer for a comfortable grip and avoids burning hands



INSULATED TO PREVENT BURNS

Cooking without worrying about scalding



Figure 2.4: The non-stick coating ensures healthy cooking and easy cleanup.

360°C

1000W Power

Over-heating Protection


Dry-burn Protection

SAFE TO USE

Figure 2.5: Cool-touch handles and insulated design prevent burns during use.

EXQUISITE DETAILS SHOW

Visual Glass Cover

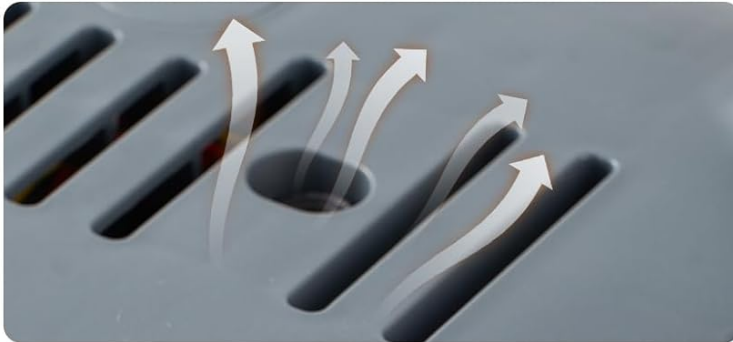

Multi-Hole Heat
Dissipation

Detachable Power
Connector



Figure 2.6: Integrated safety features include overheating and dry-burn protection.

3. SETUP

Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or packaging materials.
3. Inspect the appliance for any damage. Do not use if damaged.

First Use

1. Before first use, wash the interior of the pot and the glass lid with warm soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

Connecting Power

1. Ensure the power control slider is in the "OFF" position.

2. Connect the detachable power cord to the appliance's power inlet.
3. Plug the power cord into a standard electrical outlet (120V, 60Hz).

4. OPERATING INSTRUCTIONS

Power Control

The HYTRIC A3503C features a sliding power control with three settings: Low, Mid, and High.

- **OFF:** Appliance is powered off.
- **LOW:** Ideal for simmering, keeping food warm, or gentle cooking.
- **MID:** Suitable for general cooking, boiling, and sautéing.
- **HIGH:** For rapid heating, searing, or quick boiling.

To adjust the heat, simply slide the control knob to the desired setting. The indicator light will illuminate when the appliance is heating.

Cooking Modes

This multifunction electric cooker is designed for various cooking styles:

- **Shabu Shabu / Hot Pot:** Fill the pot with broth, bring to a boil on HIGH, then reduce to LOW or MID to maintain a simmer. Add ingredients as desired.
- **Noodles:** Add water to the pot, set to HIGH to boil. Once boiling, add noodles and cook according to package instructions.
- **Sauté:** Add a small amount of oil to the pot, set to MID or HIGH. Add ingredients and stir-fry until cooked.

5. MAINTENANCE AND CLEANING

Cleaning the Pot

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The pot features a non-stick coating. Use a soft sponge or cloth with mild dish soap and warm water to clean the interior. Avoid abrasive cleaners or metal scouring pads, which can damage the non-stick surface.
3. Rinse thoroughly and dry completely.
4. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit or power cord in water or any other liquid.
5. The glass lid can be washed with warm soapy water and is generally dishwasher safe, but hand washing is recommended to prolong its life.
6. **Note:** This appliance is **not dishwasher safe**.

Storage

Ensure the appliance is clean and dry before storing. Store in a cool, dry place. The detachable power cord can be stored separately.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on or heat.	Power cord not properly connected. No power from outlet. Power control is in "OFF" position.	Ensure power cord is securely plugged into both the appliance and the wall outlet. Test the outlet with another appliance. Slide the power control to LOW, MID, or HIGH.
Food sticks to the bottom of the pot.	Insufficient oil/liquid. Heat setting too high for too long.	Add a small amount of cooking oil or liquid before adding food. Adjust the power control to a lower setting. Stir food regularly.
Appliance stops heating during use.	Over-heating protection activated. Dry-burn protection activated.	Unplug the appliance and allow it to cool down for at least 30 minutes. Ensure there is sufficient liquid in the pot before restarting. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	HYTRIC
Model Number	A3503C
Capacity	3.5 Liters (110 oz)
Product Dimensions	8.26 x 14.4 x 4.9 inches
Item Weight	14.4 ounces
Special Feature	Non-Stick Coating
Operation Mode	Automatic
Dishwasher Safe	No

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact HYTRIC customer service. Keep your purchase receipt as proof of purchase for warranty claims.