



Manuals.plus /

› Nafewin /

› Nafewin Single Burner Electric Cooktop 1800W User Manual

Nafewin Electric cooktop 110v

Nafewin Single Burner Electric Cooktop 1800W User Manual

Model: Electric cooktop 110v

Brand: Nafewin

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- **Electrical Safety:** Ensure the cooktop is connected to a standard 110V~120V power socket. Do not use if the power cord is damaged.
- **Surface Heat:** The ceramic surface remains hot after use. Avoid touching the hot surface immediately after cooking.
- **Child Safety:** Keep the appliance out of reach of children. Utilize the Child Safety Lock feature to prevent accidental operation.
- **Ventilation:** Ensure adequate ventilation around the cooktop during operation to prevent overheating.
- **Surface Integrity:** If the ceramic surface is broken, immediately turn off the unit to avoid the risk of electric leakage.

2. PRODUCT OVERVIEW

The Nafewin Single Burner Electric Cooktop is a portable and versatile cooking appliance designed for various culinary needs. It features touch controls, multiple power and temperature settings, and a durable ceramic surface.



Figure 2.1: Nafewin Single Burner Electric Cooktop with a pot, showcasing its sleek design.

Key Features:

- **1800W High Power:** Provides rapid heating for efficient cooking.
- **Touch Control Panel:** Intuitive LED sensor touch controls for easy operation.
- **9 Power Levels:** Adjustable power from 200W to 1800W.
- **10 Temperature Settings:** Temperature range from 176°F to 510°F.
- **Timer Function:** Programmable timer from 1 minute to 4 hours.
- **Child Safety Lock:** Prevents accidental changes to settings.
- **Durable Ceramic Surface:** Scratch, abrasion, and heat resistant, easy to clean.
- **Efficient Cooling System:** Integrated fan for quick heat dissipation.

COMPATIBLE WITH ANY FLAT-BOTTOMED KITCHENWARE

The diameter of the heated area is **7.9 inches**



Aluminum pan



Stainless pan



Cast iron pot



Copper pot



Iron pan



Glass pot



Steak plate



Ceramics pot



Figure 2.2: Sensor Touch Control Panel with LCD Display.

NAFEWIN PORTABLE **MULTI-FUNCTIONAL** ELECTRIC COOKTOP



1800W
High Power



9- Power Levels
(200W-1800W)



9 Temperature
Levels(176°F-510°F)



Long Timer
(1 min-240 mins)



Overheat
Protection

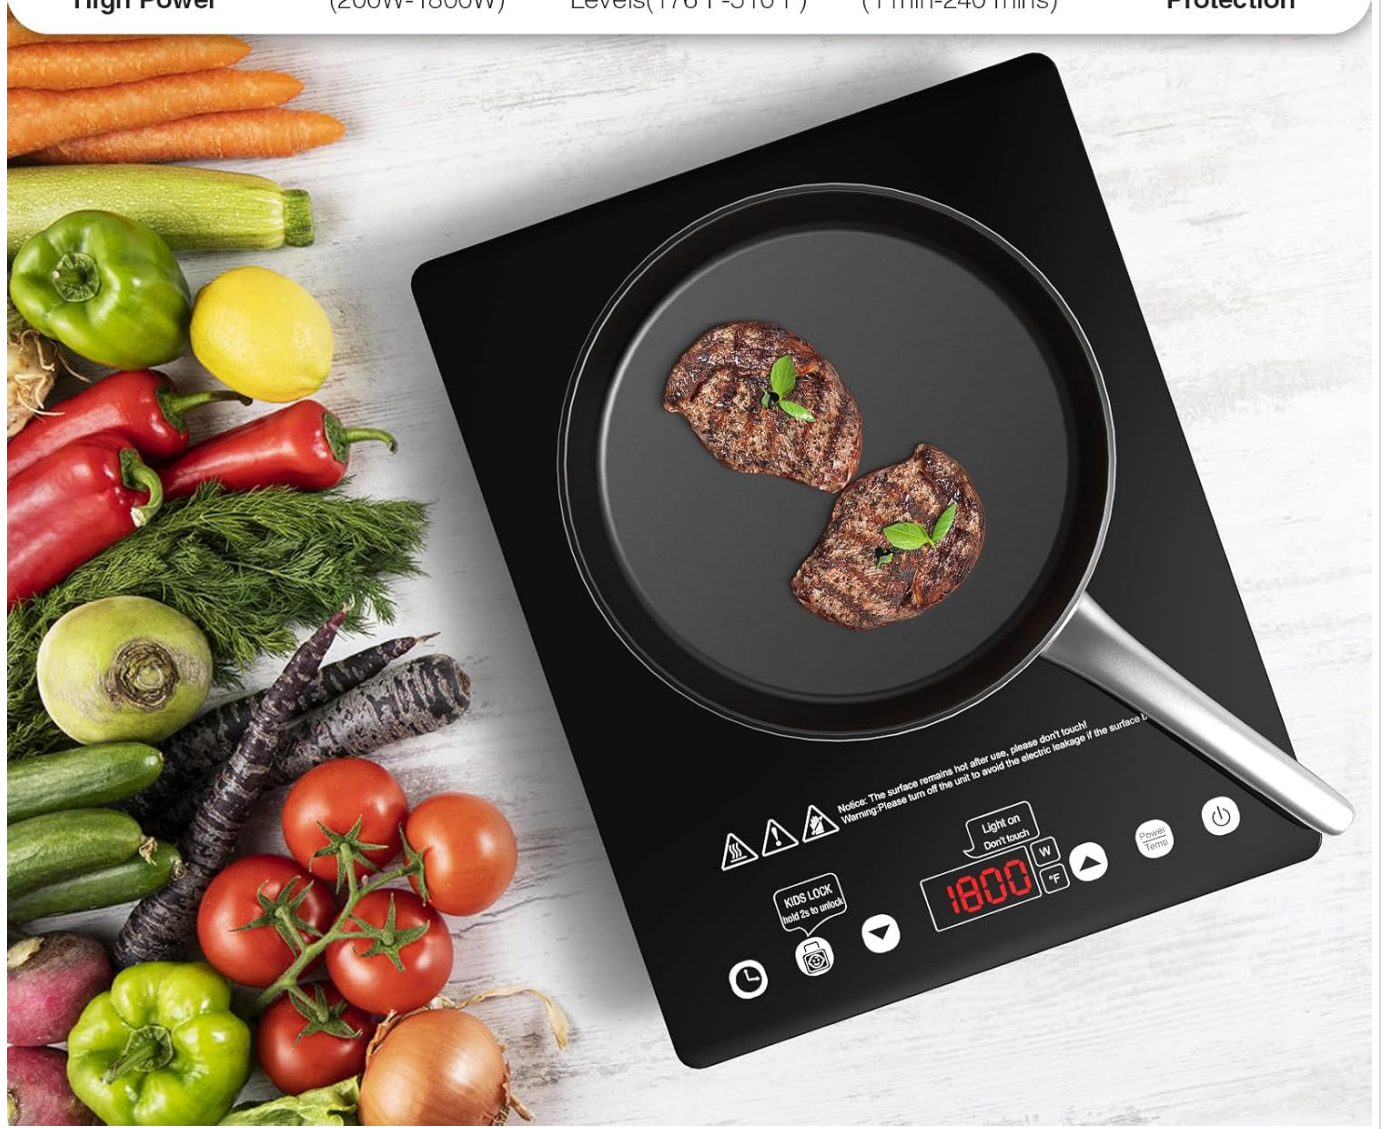


Figure 2.3: Available Power and Temperature Settings.

SENSOR TOUCH CONTROL WITH LCD DISPLAY



Figure 2.4: Cooktop compatibility with various flat-bottomed cookware types.

3. SETUP

Proper setup ensures optimal performance and safety.

1. **Unpacking:** Carefully remove the cooktop from its packaging. Inspect for any damage.
2. **Placement:** Place the cooktop on a stable, flat, and heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation (at least 4 inches from walls or other appliances).
3. **Power Connection:** Plug the cooktop into a grounded 110V~120V AC electrical outlet.

1800W Portable Induction Cooktop

The small scale in size makes it very portable
No stovetop required



Figure 3.1: Cooktop dimensions for placement consideration.

4. OPERATING INSTRUCTIONS

Follow these steps to operate your electric cooktop:

4.1 Power On/Off

- To turn on, press the **ON/OFF** button. The display will light up.
- To turn off, press the **ON/OFF** button again.

4.2 Adjusting Power and Temperature

- After turning on, press the **Power/Temp** button to switch between power (W) and temperature (°F) modes.
- Use the **+** and **-** buttons to adjust the desired power level (200W to 1800W) or temperature (176°F to 510°F).

4.3 Timer Function

- Press the **Time** button to activate the timer mode.
- Use the "+" and "-" buttons to set the cooking time from 1 minute to 4 hours (240 minutes).
- The cooktop will automatically turn off once the set time has elapsed.

4.4 Child Safety Lock

- To activate the Child Safety Lock, press and hold the **Kids Lock** button for 2 seconds. The lock indicator will illuminate.
- To deactivate, press and hold the **Kids Lock** button for 2 seconds again.

4.5 Cookware Compatibility

This electric cooktop is compatible with all types of flat-bottomed cookware, including iron, aluminum, ceramic, stainless steel, copper, and heat-resistant glass. Ensure the bottom of the cookware is flat for optimal heat transfer.



Figure 4.1: Example of cooking with the electric cooktop.

4.6 Official Product Video: Operation Overview

Video 4.1: This video demonstrates the touch control operation, power and temperature adjustments, timer setting, child lock activation, and the rapid boiling capability of the cooktop. It also shows the ease of cleaning the glass ceramic panel.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your cooktop.

- **Cleaning the Surface:** After the cooktop has completely cooled down, wipe the ceramic surface with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner specifically designed for ceramic cooktops. Do not use harsh chemicals or abrasive pads.
- **Cooling Fan:** The internal cooling fan operates automatically after cooking to dissipate heat. Ensure the fan vents are not blocked.
- **Storage:** When not in use, store the cooktop in a dry place away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	Not plugged in, power outage, faulty outlet.	Check power cord connection, test outlet with another appliance, check circuit breaker.
Cooktop not heating.	Incorrect cookware, cookware not centered, child lock active.	Ensure cookware is flat-bottomed and centered. Deactivate child lock.
Display shows error code.	Internal malfunction, overheating.	Turn off the unit, unplug, wait for 10 minutes, then plug back in. If error persists, contact support.
Surface remains hot after turning off.	Normal operation.	This is normal for ceramic cooktops. Allow sufficient time for cooling before touching or cleaning.

If the issue persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Color	Black
Material	Ceramic
Special Features	Automatic Shut-Off, Electric, Temperature Control
Brand	Nafewin
Heating Elements	1
Product Dimensions	14.18"D x 11.02"W x 2.76"H
Wattage	1800 watts
Controls Type	Touch
Voltage	110 Volts (AC)
Burner Type	Radiant
Included Components	Glass Lid (Note: This may refer to a general component, not necessarily included with all variants.)
Power Source	Electric
UPC	710946704916
Item Weight	5.96 pounds
Item Model Number	Electric cooktop 110v

8. WARRANTY AND SUPPORT

For product support, troubleshooting assistance, or warranty inquiries, please refer to the following information:

8.1 Protection Plans

Extended protection plans may be available for your product. These plans offer additional coverage beyond the standard manufacturer's warranty. Please check with your retailer or the product's purchase platform for details on available protection plans, such as:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly plan covering eligible purchases)

Specific terms, conditions, and pricing for these plans are provided by the plan administrator at the time of purchase.

8.2 Customer Service

For direct assistance, please contact Nafewin customer service through the contact information provided on the product packaging or the official Nafewin website. When contacting support, please have your product model number and purchase date available.

