

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LawnMaster](#) /

› [LawnMaster LMRM1801 18-Inch 5-Blade Push Reel Lawn Mower Instruction Manual](#)

LawnMaster LMRM1801

LawnMaster LMRM1801 18-Inch 5-Blade Push Reel Lawn Mower

Instruction Manual

INTRODUCTION

The LawnMaster LMRM1801 Push Reel Lawn Mower is designed for efficient and environmentally friendly lawn maintenance. Featuring an 18-inch cutting width and 5 durable steel blades, it provides a precise, scissor-like cut for a healthier lawn without the need for gas or electricity. This manual provides essential information for the safe and effective use of your new mower.

Your browser does not support the video tag.

Video Description: An overview of the LawnMaster Push Reel Mower, highlighting its features and benefits for lawn care.

SETUP

Your LawnMaster LMRM1801 Push Reel Lawn Mower requires minimal assembly. Follow these steps to prepare your mower for use:

- 1. Handle Assembly:** Attach the handle sections using the provided hardware. Ensure all connections are secure.
- 2. Grass Collection Bag:** The mower includes a collection bag. Attach the bag to the mower frame as instructed in the packaging. This allows for easy collection of grass clippings.
- 3. Initial Inspection:** Before first use, ensure all parts are correctly assembled and tightened. Check that the blades rotate freely.



Image Description: A diagram illustrating the various components of the LawnMaster LMRM1801 Push Reel Lawn Mower, including the handle, cutting deck, wheels, and collection bag, to aid in assembly.

OPERATING INSTRUCTIONS

For best results and a healthy lawn, operate your push reel mower regularly.

1. Adjusting Cutting Height

The LawnMaster LMRM1801 offers 9 cutting positions, allowing you to effortlessly change the height of your cut between 3/4-inches and 2-inches. Adjust the cutting height to suit your lawn type and desired grass length. Taller grass may require a higher setting for the initial pass.

LawnMaster 18-Inch Reel Lawn Mower



**Durable Steel
Blades**

**Includes
Collection Bag**

Image Description: A detailed view of the mower's side, highlighting the lever and numbered settings for adjusting the cutting height from 3/4-inch to 2-inches.

2. Mowing Technique

Push the mower forward at a steady, comfortable pace. The 18-inch deck and 10-inch front wheels provide maximum maneuverability, making it easy to navigate around your lawn. Overlap each pass slightly to ensure an even cut. For very tall or dense grass, it may be beneficial to make two passes, raising the cutting height for the first pass and then lowering it for the second.



— **Durable Steel Materials** —
Quality Craftsmanship for Long Service

Image Description: A person is shown pushing the orange and black LawnMaster LMRM1801 mower across a lush green lawn, demonstrating its maneuverability.

3. Using the Collection Bag

The included collection bag gathers grass clippings as you mow, keeping your lawn tidy. Empty the bag regularly to maintain optimal collection performance and prevent clogging.



Quiet & Effective Low Maintenance with Motorless Design

Image Description: A close-up shot of the mower's rotating blades as they precisely cut grass, illustrating the clean, scissor-like action for a healthy lawn.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your LawnMaster LMRM1801.

1. Blade Care

The mower features durable steel blades built to last. Regularly inspect the blades for sharpness and damage. Sharp blades ensure a clean cut and reduce strain on the mower and yourself. If blades become dull, they may require sharpening by a professional or using a reel mower sharpening kit.

2. Cleaning

After each use, clean grass clippings and debris from the cutting deck and blades. Use a stiff brush or cloth. Avoid using water directly on the blades or moving parts to prevent rust. Ensure the mower is dry before storing.

3. Storage

Store the mower in a dry, protected area. Its motorless design and compact size make storage convenient.

TROUBLESHOOTING

- **Mower is difficult to push:**

- Check if the grass is too long. Raise the cutting height for the first pass.
- Inspect blades for debris or dullness. Clean or sharpen as needed.
- Ensure wheels are free of obstructions.

- **Uneven cut:**

- Verify that the cutting height is set evenly on both sides.
- Check for dull or damaged blades.

- **Grass not collecting in bag:**

- Ensure the collection bag is properly attached and not full.
- Check for blockages in the grass chute.

SPECIFICATIONS

Brand	LawnMaster
Model Number	LMRM1801
Power Source	Manual
Material	Alloy Steel
Color	Black
Item Weight	14.67 Kilograms (32.3 pounds)
Cutting Width	18 Inches
Operation Mode	Manual
Product Dimensions	24.6"D x 10.62"W x 18.11"H
Assembly Required	Yes
Maximum Adjustable Cutting Height	2 Inches
Minimum Adjustable Cutting Height	0.75 Inches
Manufacturer	Cleva

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official LawnMaster website.

© 2026 LawnMaster. All rights reserved.